


WELCOME

- Congratulations on your purchase of the Azumi mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, Ultra clear video
- You can read the manual to understand how to use Azumi mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. Azumi shall not be responsible for any damage in machinery due to use of non-original components.

YOUR PHONE-FRONT VIEW

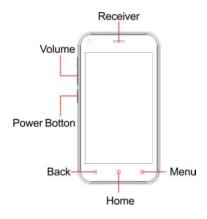

YOUR PHONE-BACK VIEW



CHARGE THE BATTERY



Connect this end to phone's USB port.

Tip: Be sure to charge your phone's battery completely after inserting it in the phone for the first time.

INSERT SIM AND Micro SD CARD



Please insert the SIM card(s) according to the label on the phone. Make sure that the clipped corner of the SIM card and the metallic contacts are facing the correct direction. Slide the SIM card into the slot until it doesn't move up any further.

Micro SD card slot is above the SIM card slot. The direction in which the micro SD card has to be inserted into the designated slot is shown by a label on the phone.

Tip: For additional media storage insert a micro SD card.

 


TURN THE PHONE ON& OFF



Hold down the power button to turn the phone on.

Hold down the power' button, then touch Power off to turn the phone off



DIM LOCK & WAKE THE PHONE

When the power is on and you want to dim the screen, press the power button.



When the screen is dimmed and you want to wake the phone, press the power button and then drag the lock to the right.



HOME SCREEN



Touch it to enter dial pad interface

APPS



1. Touch it to enter app tray.

2. Touch an app to launch it

STATUS BAR

The status bar shows your phone's status and notifications. (Notifications are described on the next page.)



Status icons

The following status icons may appear on your screen:

lcon	Statement	lcon	Statement
	SIM Network signal level	G	Headset is inserted
5	Indicates battery capacity	*	Bluetooth is activated
:)	Unread messages	?	Wi-Fi is connected
č	Missed calls		Airplane mode is activated
Ċ	Alarm is activated	ų,	USB is connected

NOTIFICATION PANEL

The notification panel is your center for new events: like new e-mail, voicemail, updates, and more.

Drag down to display notifications

Touch a notification to respond

MAKE & ANSWER A CALL

1. From the Home screen, touch

Dial a number using the dial pad.









VOLUME CONTROL WHEN CALLING

Volume key is at the left side of the phone. During a conversation, you can press the volume key to tune the sound volume.



SEND A TEXT

- 1. From the Home screen, touch
- 2. Touch
- 3. Touch the To field, then enter a recipient.
- 4. Touch the Type message field, then enter a message
- 5. Touch 📃 Send the message

ADDING EMAIL ACCOUNTS

The first time you open Email, you are prompted to set up an email account. After that, you can configure Email to send and receive email from additional accounts.

To add an email account:

1) Tap the e-mail icon. In Your account interface, tap Next. In e-mail address option, enter your e-mail address. In password option, \rightarrow enter your e-mail password. Tap Next.

2) Filling the email address and password, tap next to setup email

3) Tap next to enter your email.



SETTINGS

the settings for various features of the phone

Get to know the settings in your phone so that you can personalize them to your own requirements. Go to Settings to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways:

Wi_Fi	You can use Wireless & Network settings to manage your SIM card, configure and manage connections to networks and devices by using Wi-Fi. You also can set Bluetooth, data usage, airplane mode, VPN, tethering & portable hotspot and mobile networks in this interface.
Audio profiles	There are four profiles: General, Silent, Meeting and Outdoor. You can set the profiles according to different conditions.
Display	You can set Wallpaper, Auto-rotate screen, Brightness, Daydream, wireless display, Sleep and Font size in this interface.
Storage	Use the Storage settings to monitor the used and available space on your phone and on your SD card and to manage your SD card.

Battery	You can view your battery status, battery level and battery use in this interface.	
Apps	You can use the Applications settings to view details about the applications installed on your phone, to manage their data and force them to stop, to view and control currently running services, and to view the storage used by applications, etc.	
Location	You can turn on Wi-Fi & mobile network location, GPS satellites, etc through this function.	
Security	You can set the parameters about security through this function.	
Language & input	Use the Language & Keyboard settings to select the language for the text on your phone and for configuring the input method.	
Backup & reset	You can backup your data and reset your phone in this interface.	
Add account	You should add account first before using this function.	
Data & time	You can use Date & Time settings to set your preferences for how	

	dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the network, etc.
Timer switch machine	You should set a certain time, when the time arrive, the phone would power on/off automatically.
Accessibility	Enable your installed accessibility applications and adjust related settings.
About phone	This function enables you to view some phone related information.

SET A RINGTONE

Press Perfiles audio, select the profiles you want to set, you can customize the ringtone and volume of incoming call, notification ringtone in this interface.

MULTIMEDIA

listen it, watch it, capture it, enjoy it!

FM RADIO

- Pull out the telescopic antenna or insert earphone, then Tap the Power icon to stop or play FM.
- Tap the forward by 0.1 MHz or scroll the knob icon to change channel frequency. Press volume key to adjust the volume.
- 3. Tap Auto search, Record and Favorites icon to adjust.



MUSIC

Controls

Play/Pause	Touch
Previous/Next	Touch ^I ∕►
Rewind/Forward	Touch and hold

Volume adjust	Press side key	
Now playing: Touch to open the current playlist.	Touch 🗎	
Shuffle: Touch to shuffle the current playlist.	Touch 🔀	
Repeat: Touch to repeat the current playlist; touch again to repeat the current track.	Touch	

Camera

1. Launch the camera by pressing the camera icon on the home screen

2. In the camera app, tap the screen to focus on a specific area.

3. Press the camera button all the way down to take a picture.

SHOOT A VIDEO

- 1. Press and hold the camera button until it vibrates then release
- 2. In the Camera app, select video



3. Press the camera button to begin filming and press again to stop filming.

Calculator

1. Launch the calculator by pressing the calculator icon on the home screen.

2. In the calculator app, enter numbers and arithmetic operators on the basic screen.

Calendar

You can use the calendar to keep track of important events. After entering the calendar function menu you can select year, month and date. Slide the Calendar screen up and down to switch month.

Sound Recorder

Use this function to record audio files. Two function icons at the bottom of the Recorder screen are corresponding to start recording and review record file.

Clock

The clock allows you to view time and date. You can also add an alarm, set the alarm and turn it on. Then, the alarm can ring at a specific time you set.

Gallery

Both pictures and videos taken by camera or stored in SD card can be scanned through this function.

Video player

With Videos, you can play video clips in your device (for example, the video you captured by the camera) or video files stored in compatible SD card (if inserted)



SIM1 Toolkit

STK features are provided by your service provider. If your SIM card supports STK feature, you will see the STK menu. Different STK has different STK main menu. Please contact your service provider if the STK does not work.

Browser

To let you browse the Internet.

File Manager

The phone supports the SD card. You can use the File Explorer to conveniently manage various directories and files on the SD card.

USE AS MODEM VIA USB

You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files between your phone's SD card and the computer.



CONNECT TO Wi-Fi NETWORKS

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.



Touch Settings> WI-FI . Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

		A50c
Corriente eléctrica encendido 开机电流		180-650mA
Corriente eléctrica pantalla 屏幕电流		100-240mA
Voltaje Pantalla		3.4-4.2 Vcc
Corriente eléctrica Llamada 通话电流		80-520 mA
Voltaje Llamada 通话电压		3.6-4.2 Vcc
Voltaje celular apagado 关机的电压		3.4 Vcc
Cargador de corriente ca/cc	Entrada 充电器输入电 流电压	100-240Vca, 50-60Hz, 0.15A
	Salida 输出电流电压	5.0Vcc, 1A

1.FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.157W/Kg and when worn on the body, as described in this user guide. is 0.730W/Kg(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 0.768W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/ oet/fccid after searching on

FCC ID: QRP-AZUMIA40Q Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Asso-ciation (CTIA) web-site at http://www.wow-com.com. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a sub-stantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.