# **AT7 User Manual**



Congratulations for buying AT-7


Thank you very much for your trust and your decision to buy an Azumi product!

# **Table of Contents**

Device overview	4
Insert the SIM or USIM card	5
Charge the battery	
Language setting	7
Power monitoring and charging the batteries	
Screen lock	
Connecting to the computer and data transfer	
Description of the Program menu	
System settings	
1. Wireless & Networks	15
2. Sound settings	19
3. Display settings	21
4. Memory	23

	5. Battery	24
	6. Application	25
	7. Accounts & sync.	25
	8. Location services	26
	9. Security	26
	10. Language and keyboard	26
	11. Back & Reset	27
	12. Date and time	28
Tech	nical data	29
FCC	Information	30


# **Device overview**

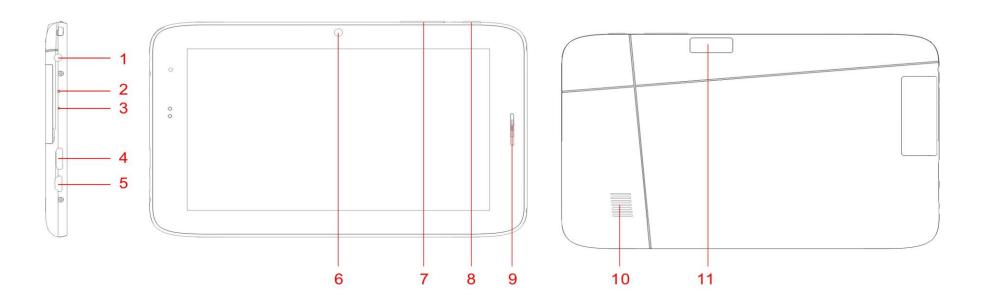

- 1. Earphone
- 2. Microphone
- 3. Reset
- 4. HDMI
- 5. Micro-USB port
- 6. Front camera


- 7. Power button
- 8. Volume key
- 9. Receiver
- 10. Speaker
- 11.Rear camera

# **Insert the SIM or USIM card:**

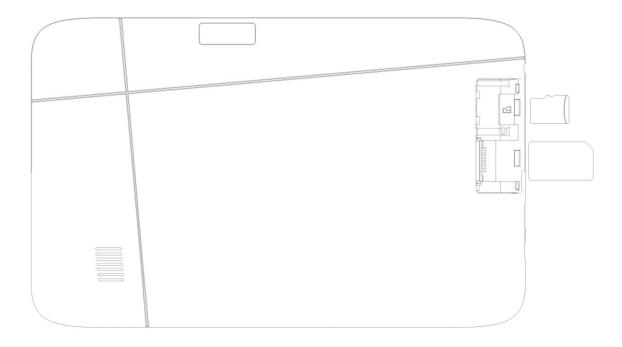

Insert the SIM or USIM card when you need a cellular service. Do not insert a memory card into the SIM card slot.

# **Charge the battery**

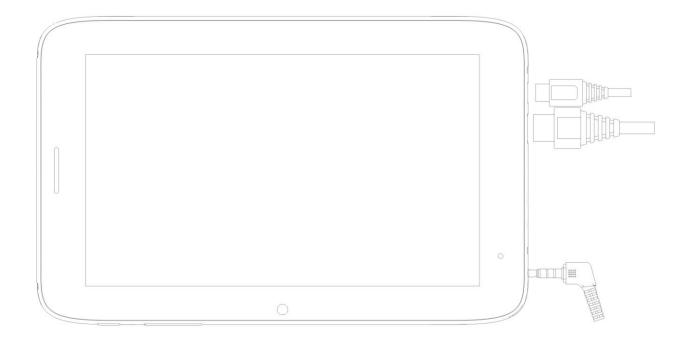

Before using the device for the first time or when the battery has been unused for an extended period, you must charge the battery. You

can charge the battery with a travel adapter or by connecting the device to a computer with a USB cable.

Use only our approved chargers and cables. Unapproved chargers or cables may cause batteries to explode or damage your device.

When your battery is low, the device will emit a warning tone and show a low battery message. Recharge your battery to continue using your device.

If the battery is completely discharged, you cannot turn on the device, even with the travel adapter connected. Allow a depleted battery to charge for a while before you try to turn on the device.

# Language setting:

We select Spanish as a default language.


To change the language setting, please do the following:

- In start screen press on the right side of the screen



- Scroll to the end of the list.
- Select 'Idioma y entrada de texto'.
- Select 'Idioma'.d

- Type your preferred language.
- Press the 'Home' button " to return to the home screen.

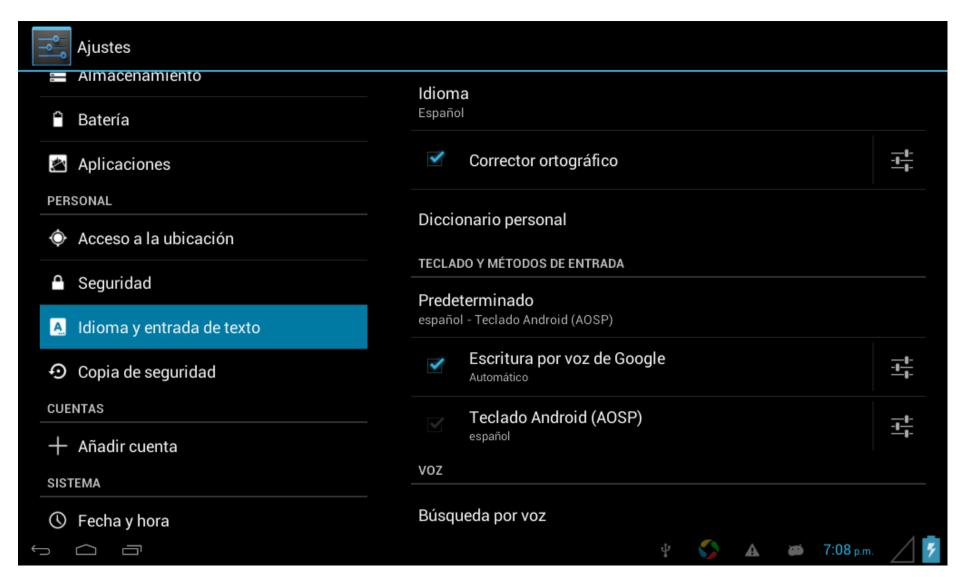

## Power monitoring and charging the batteries:

The battery charge symbol in on the status bar indicates the charging status of the batteries.

If the power goes down, the device shuts itself off automatically. If less power is shown, use the adapter or PC USB to charge the device.

The charging time for the battery is approximately 5 hours.

Attention: Pleased used 5V 1.5A USB adapter for charge

### **Screen lock:**


If the device is not used for specified time or the 'Power' button is pressed briefly, the screen is switched off and display lock is activated. By pressing the 'Power' button briefly the screen will be reactivated. For locking the screen press the 'Lock' button in the specified direction.

## Connecting to the computer and data transfer:


Connect the tablet with computer by using USB cable. The computer will pop up the windows to let you install the tablet USB driver.

After you connect the device to a computer, it appears in the status display. (Press icon have "Connected as media device"

# indication)

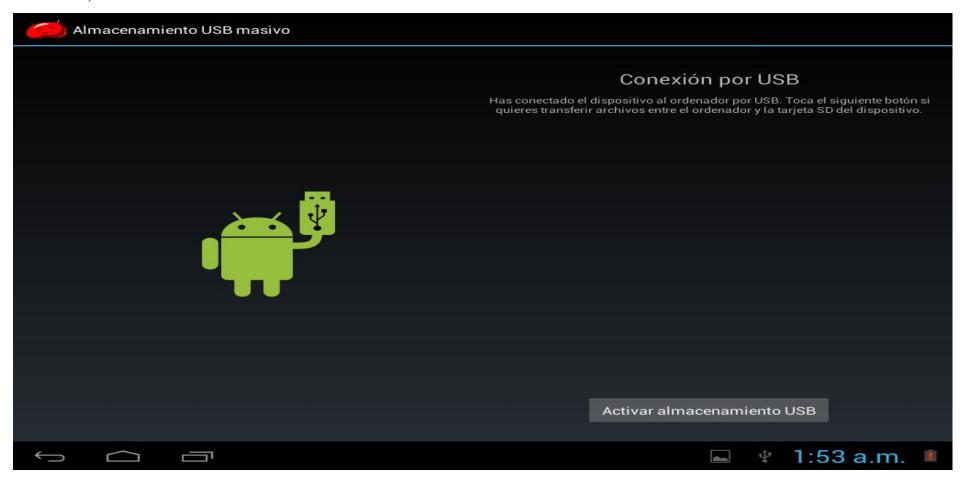

# **Description of the Program menu:**

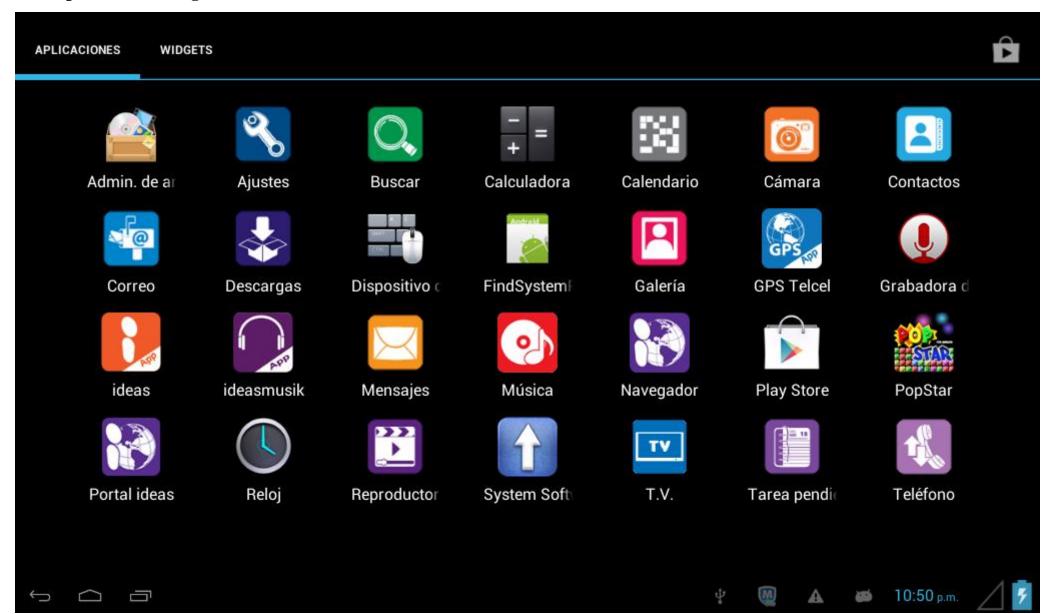



Changing the basic settings of AT7



Internet Search



Call Log



Calculator



Calendar

Managing schedules – can be synchronized automatically with a Google account.



Camera



**Contact person** 



E-mail:

Program for retrieving, processing and sending e-mails



**Downloads:** 

Downloads file list



Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.



# Gallery:

Manage and display images and videos – also enables synchronisation with Picasa web albums.



# Sound Recorder:

Dictation device function





Message:

Program for retrieving, processing and sending message



Analogy TV



Radio



**System Software** 



Music Player







# Play store:

Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.



Time display and setting alarm functions.



# Video Player:

Functions of the buttons on the user interface:



To go back to the previous menu / previous page

# **■** Home Button:

To go back to the start screen

# **Records Button:**

To display recent applications using records window



To open the context menu

Volume Buttons:

To increase or reduce the volume

**Program Menu Button:** 


To display the programs and applications

- WIFI / WLAN Signal Icon
- **Bluetooth Icon**
- Mew Mail indication:

# **System settings**

Touch the icon for the settings to open the system settings menu:

# 1. Wireless & Networks

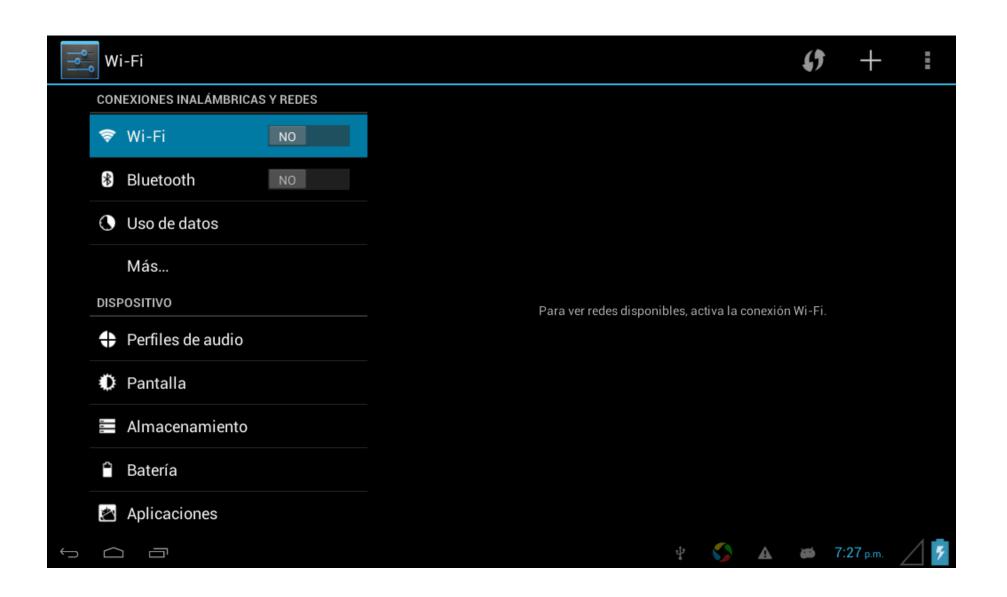


**Wi-Fi:** Touch => to switch on the Wi-Fi function.


The device automatically searches for available Wi-Fi networks.

# Wi-Fi Settings: Select your network here.

If needed you will be requested to enter your Wi-Fi password:

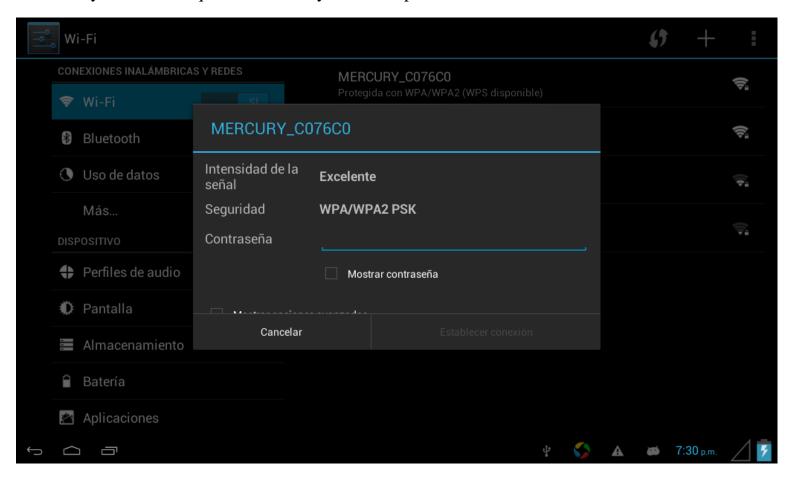

#### **ADD NETWORK:**

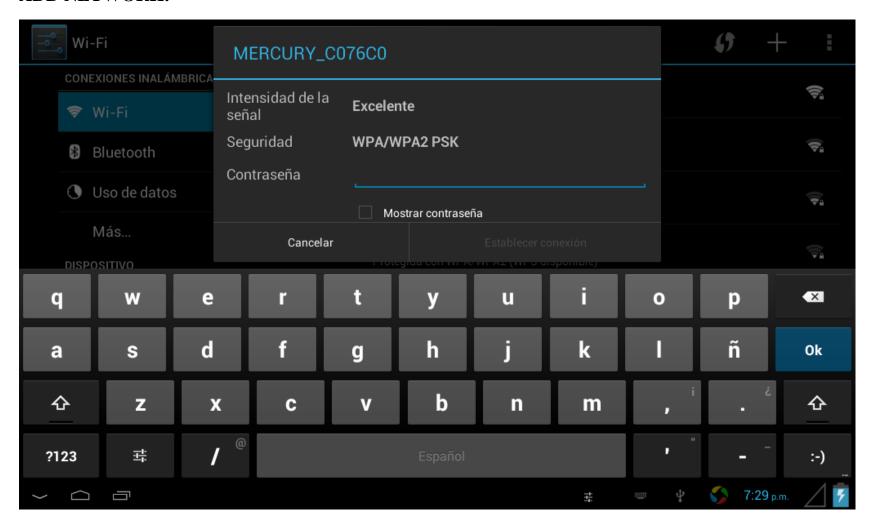



# **Advanced Wi-Fi settings:**


Activate the Wi-Fi feature to connect to a Wi-Fi AP and access the Internet or other network devices

# 2. Sound settings

The 'Sound' settings contain the volume control, and selection of notification sounds, system sounds

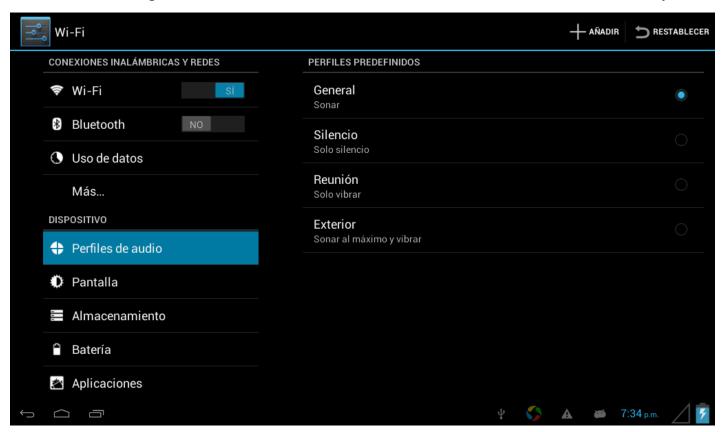

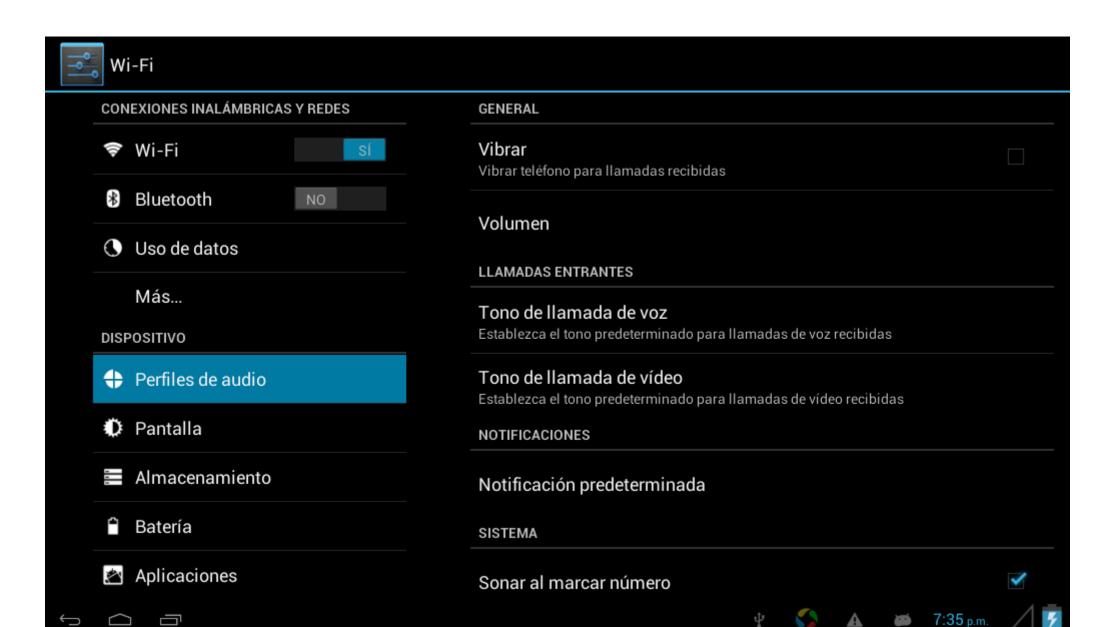

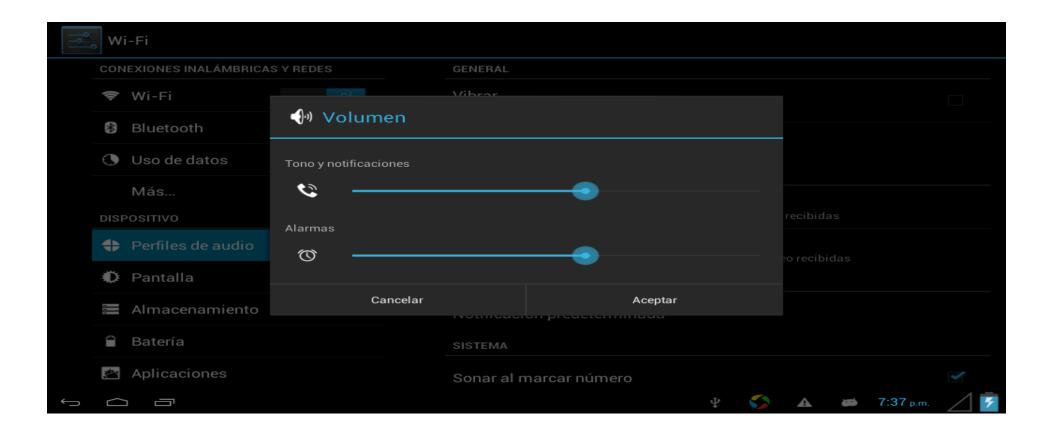

## 3. Display settings

Includes brightness, Wallpaper, Auto-rotate screen, sleep, Font size


Sleep time selection as 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds, the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the 'Power' button to reactivate the Display. Push the 'Lock' button up to lift the screen lock.






# 4. Memory

Here the current memory use is displayed.

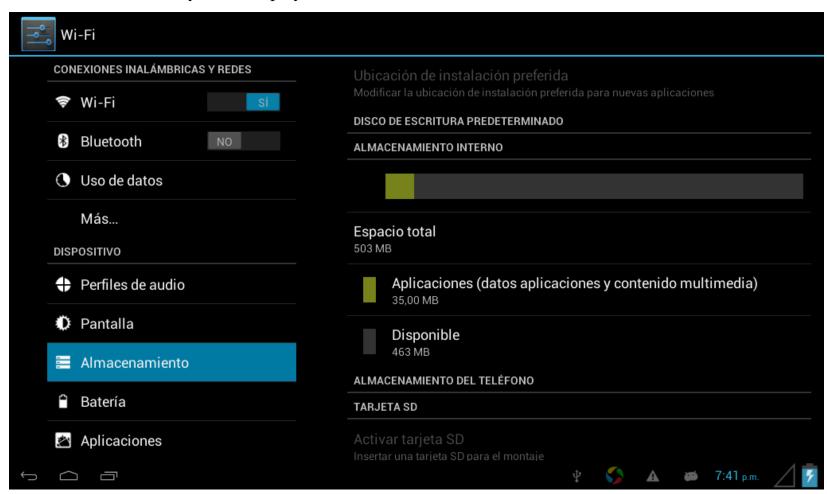


# 5. Battery

Here the current battery use is displayed.

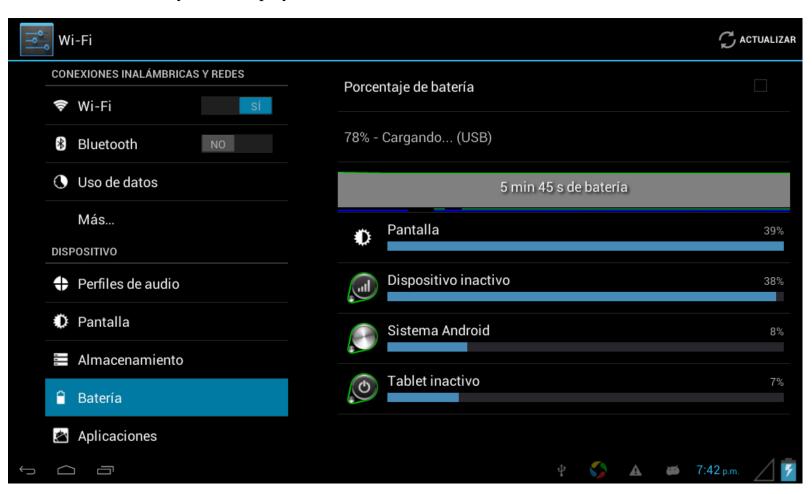

# 6. Application

Here you can manage your apps and define if apps from sources other than the Android Market are allowed to be installed.

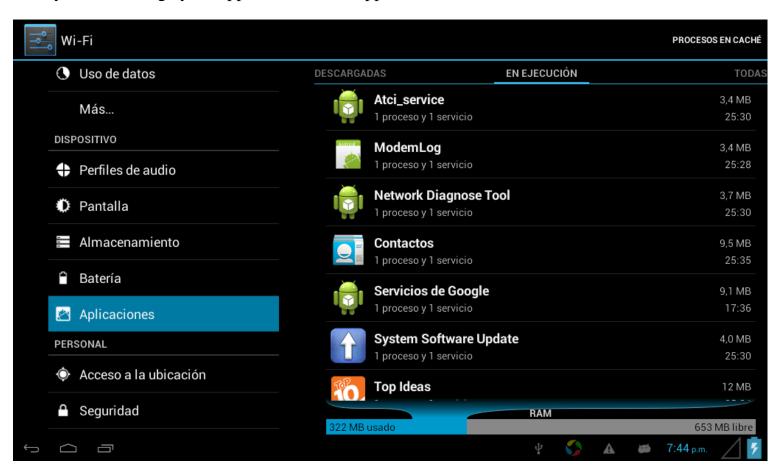

# 7. Accounts & sync.

Account management: Management of user accounts

### 8. Location services

Here you can activate the automatic recognition of the location.

# 9. Security

You can also set security passwords which will prevent unauthorized access to your AT7.

# 10. Language and keyboard

Set the system language and input method.




#### 11. Back & Reset

**Back up my data:** Here you can define if different settings should be stored on Google servers.


Touch 'Restablecer datos de farbrica' to reset the device to factory settings.

All settings, self-installed apps and data stored on internal memory can be deleted.

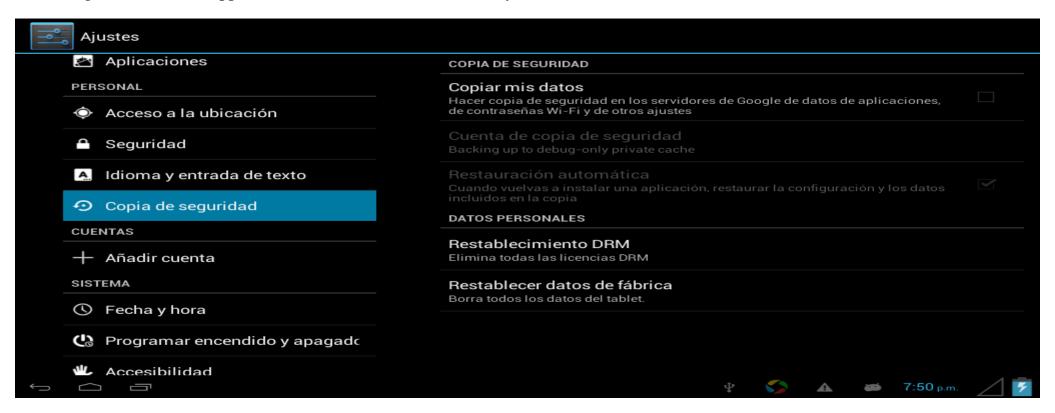

### 12. Date and time

If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

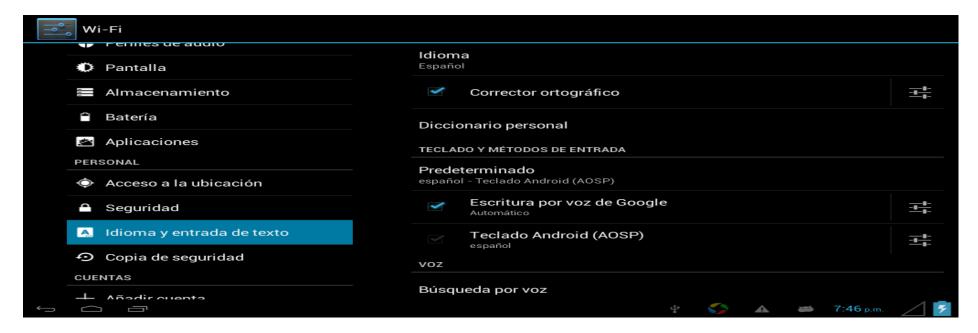

# **Technical Data**

Dual core 3G	7 inches Tablet
SIM	Single
CPU	MT8377 dual-core 1.0 GHz
Operating System	Android 4.1
RAM	512MB DDR3
ROM	4GB EMMC
Display	4:3, 5 points capacitive touch panel
Resolution	1024*600 pixel
Camera	front 0.3MP, rear 2.0MP
Battery	2800 mAh Li-polymer
Charger (USB charger)	5V, 1.5A
G-sensor	Yes
MIC	Yes
HDMI	Yes
GPS	Yes
WIFI	802/11 b/g/n
ATV	Yes

FM	Yes
	1xearphone
	1xUSB(Micro 5PIN) (Charger, OTG)
I/O Ports	1xHDMI
	1x Micro SD Card-Slot
	1x SIM card-Slot

#### Remark:

This device does not support voice calls next to the ear,

This device supports voice mode limited to speaker mode or headset operations only

#### **FCC Information**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit difference from that to which the receiver is connected.
- Consult your local Radio Shack store or an experience radio/TV technician for help.

Changes or modifications not expressly approved by Radio Shack may cause interference and void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **SAR Information Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The mobile device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under This standard during product certification for use when properly worn on the body is 1.171W/kg.