



USER MANUAL

Keys and components of the phone

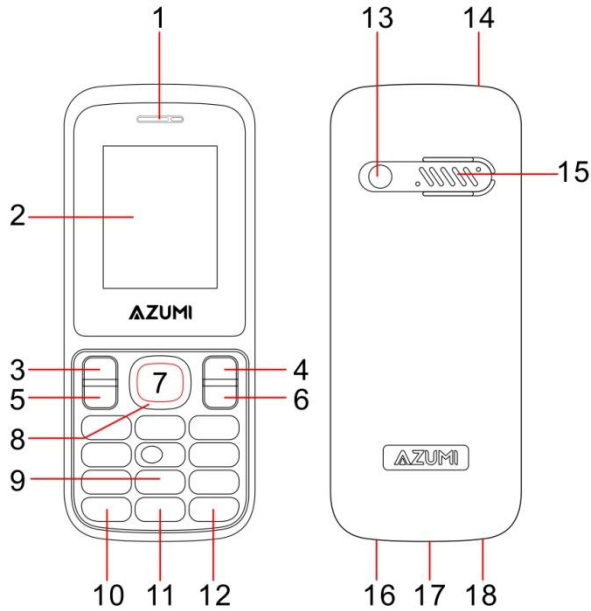

1. Receiver Speaker
2. Screen
3. Left Function Key
4. Right Function Key
5. Call button
6. Hang up / Power Key
7. OK button
8. Navigation buttons
9. Keypad
10. Lock phone
11. Turn on flashlight
12. Activate silent Mode
13. Camera
14. Flashlight
15. Speaker
16. Microphone
17. Earphones Connector(Jack 3.5 mm)
18. USB Connector

Insert the SIM card / Insert the memory card

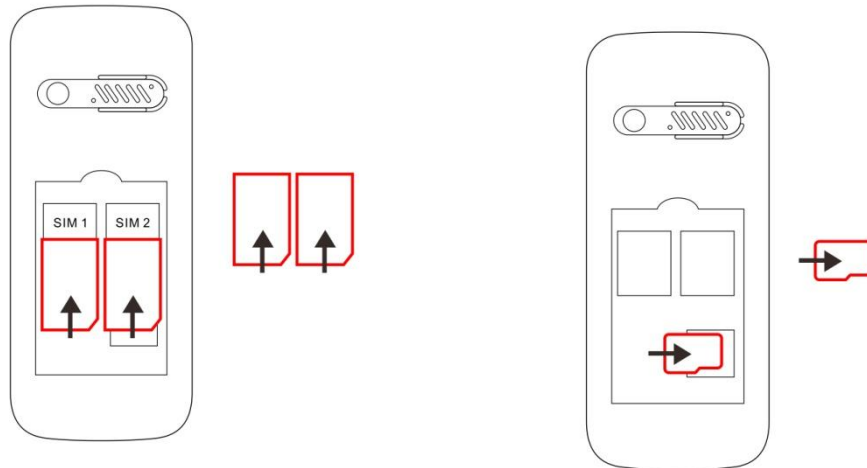

Basic functions

1. How to remove the back cover

- Make sure the device is turned off.
- Hold the device firmly with the front facing down.
- Slide your finger into the groove designed to remove the cover and gently remove the back cover.

How to insert the SIM card:

Locate the SIM card slot and insert the SIM as shown in the figure. Additionally you will have a visual aid, as reference, of where the SIM card is inserted.

- Slide the SIM card into the slot until it reaches the top of the slot.

2. Turn on / Turn off

To turn off the phone, press and hold the Power key. To turn on the phone, press and hold the Power key until the screen turns on or the phone

How to install a memory card

To have additional storage for your images, videos, music and files, you can buy a memory card and install it in your device.

Locate the memory card slot where indicated in the picture and insert the memory card in the slot with the gold contacts facing down until it fits correctly.

3. Battery charge

New batteries are shipped partially charged. Before starting to use the device, it is recommended to do a full charge of the battery. Some batteries have better performance after several charge / discharge cycles.

1. Operation of the Menu

1.1 Messages

The phone supports short message service (SMS). You can send text messages and manage the messages sent and received.

In the standby mode, go to the main menu by pressing the left function key and select the message center to enter the message interface. In the message, select the options to view and operate the available options.

1.2 My files

Use the File Manager to organize the files in folders.

If a memory card is inserted, the files stored in the phone memory and the memory card are organized separately.

Select Phone or Memory card and select Options to view, copy, delete and move files in folders.

- Open: Select to open the received files, images, audio, e-book, my music and photos.

1.3 Contacts

You can store the name and phone number in the phone memory or on the SIM card.

Up to 300 records of numbers and names can be stored in the phone's memory.

- The storage capacity of the SIM card is determined by the type of the SIM card.

1.4 Calls logs

You can see missed calls, calls made, calls received through this function, as well as delete all call registration/calls logged.

1.5 STK

STK service is the tool box of the SIM card. This phone is compatible with the services function.

The specific options depend on the SIM card and the network operator.

1.6 Multimedia

1.6.1 Camera

This function allows you to take pictures or record dynamic images. OK key to take the photo; Left function key to access the settings of the video camera; right function key to exit the capture interface.

1.6.2 Video-recorder

This function allows you to take videos. OK key to start recording; Left function key to stop recording; right function key to cancel recording.

1.6.3 Image

You can see the image or images through this function.

1.6.4 Audio

This function plays audio files. By pressing the OK key you can control the playback / pause process (press during audio playback), advance (press right direction key) and rewind (press left direction key).

1.6.5 FM Radio

The phone is equipped with an FM radio. You can use the application as a traditional FM radio with automatic tuning and saved stations. You can listen to the radio while running other applications.

1.6.7 Video

This function plays video files. By pressing the OK key you can play and pause the video, by pressing the arrow keys you can control the video volume, volume + (up arrow key), volume - (down arrow key). Advance and rewind a video / forward (press right arrow key) / rewind (press left arrow key).

1.7 Organizer

1.7.1 Alarm: the phone has a choice of 3 alarms that can be programmed according to the user's needs

1.7.2 Calendar: you can schedule tasks, verify dates for specific days, per week and thus arrange a schedule of activities.

1.7.3 Calculator: calculator option with basic operation functions.

1.7.4 Sound Recorder

This function allows you to record audio. OK key to start recording; Left function key to pause recording; right function key to save recording.

1.7.5 World clock

You can add the world clock.

1.7.6 Unit converter

Weight length and kg - pound kg - ounce conversion

1.7.7 Momo

You can be in the memo record something.

1.7.8 Ebook

You can check the electronic files stored in your phone or T card

1.7.9 Bluetooth: Open the Bluetooth, search to the corresponding equipment connected via Bluetooth, can perform some operations, such as: connected between two devices to transfer files to each other; connect Bluetooth headset, you can use Bluetooth headset to listen to music, and some other operations.

- Note: You will need to have a memory card if the file to be transmitted is too large, such as sound clips.

- Memory: You can use the File Manager to organize the files in folders

1.8 Games

You can play some games.

1.9 Settings

1.9.1 Call settings

- Call divert: This network feature allows you to divert incoming calls to another number that you have previously specified.

- Call waiting: If call waiting is activated, the network will notify you and the mobile phone screen will show the number of the incoming call while you are on another call.

-Others

-Call time minute Reminder:allows you to set a tone for a reminder while being on a call for every minute.

- Auto redial: allows you to call the dialed number if you do not get a response from the contacted user.

-Vibration when connected: indicates by means of a vibration that the call was connected correctly.

- Auto record voice call: Automated recording of calls when answering the phone

1.9.2 Phone settings

- Time and date: You can configure the city of origin, the time / date format and the time zone update.

- Language Settings: You can select the language of the device and menu operation.

- Shortcuts settings: You can assign the arrow keys as shortcuts to important functions. Press the corresponding direction key in standby mode to start the function.

-Auto power on/off: You can set the time of automatic boot-up or shutdown.

- Restore factory settings: use this function to restore all system data. The phone menu settings will be restored to their original values. All user data stored in the phone will be erased. The default password for the phone is 1234.

Note: Use this function with great care. Please make a backup copy of your data in your phone before using this function.

1.9.3 Display

- Wallpaper settings: You can set wallpaper

-Screen saver settings: You can choose Off, Sea world, Star, Snake, Game of life, Customized image, Customized animation

-Contrast: You can set the screen backlight brightness, a total of seven levels

-Backlight:you can set Always on, 30secs,20secs,15secs,10secs,5secs

1.9.4 Security

- SIM security

You can activate, deactivate or modify the PIN code. Enter the correct PIN Code to unlock or deactivate the PIN code. If PIN code verification is activated, each time you turn on the phone, you will have to enter the correct PIN code. If you enter 3 invalid PIN codes, the SIM card will be blocked. You will have to enter the PUK1 code to unlock it. Please contact the network operator to obtain the PUK1 code.

- Phone locked

You can activate or deactivate the phone password. When the phone password is activated, you must enter the password each time the phone is turned on. The default phone password is 1234.

- Privacy: After entering, select the menu you want to set the password to check, you enter the corresponding menu, you need to enter the password, the default password is 1234.

Automatic keypad lock

Keypad lock avoids using the phone by mistake. However, it can still be used if you want to make emergency calls.

1.9.5 profiles

The user can change from one mode to another according to different occasions.

Available modes: Normal mode, Silent mode, meeting mode,Indoor mode, Outdoor mode.

The user can also reset the individualized modes by pressing the left function key to enter the option interface.

You can customize the following options for new profiles.

- Normal: You can select this mode for normal conditions.
- Silent: You can select this mode for quiet conditions.
- Meeting mode: You can select this mode at meetings.
- Indoor: You can select this mode in closed spaces.
- Outdoor: You can select this mode in open spaces.

1.9.6 Network options

You can set some parameters of the network accordingly.

Nominal electrical characteristic

Electric power		120-170mA
Electricity of the screen		100-240mA
Voltage display		3.4-4.2 V
Call power		80-250 mA
Call voltage		3.6-4.2 V
Phone voltage off		3.4 V
Charger AC/DC	Input	AC 100-240V, 50-60Hz, 0,2A
	output	5.0Vcc, 500mA

Caution for users

Before using your Azumi phone, it is important that all users read the following recommendations:

- Do not let your Azumi mobile phone come in contact with water.
- Use only Azumi accessories.
- Do not open the mobile phone case, this voids the warranty.
- If the mobile phone or any accessory does not work properly, take it to the authorized technical support center.
- Prolonged use (in high volume) of the stereo headphones can cause very serious hearing damage.
- Do not use the phone while charging the battery.
- In extreme heat or cold conditions: Avoid temperatures below -10 ° C / 14 ° F or above 40 ° C / 104 ° F

Note: Remember to visit our website ww.azumi-mobile.com and our Facebook page www.facebook.com/AzumiMobile if you have any questions.

“Our team is always available to respond to your queries”

Appearance



This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: L4G (FCC ID: QRP-FP-011) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.796W/kg and when properly worn on the body is 1.064W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.