

OPERATION DESCRIPTION

1. EMS3YOUNG

When the DOOR button (SW2) is pressed, the battery applies 12VDC to the pin# 16 of the Micom. And Red LED (D1) shows that the Remote control is being operated. Data selected from code switch after 318 MHz is oscillated through the Oscillator of the Micom pin# 11, 12, 13 is amplified to Q1 through the pin# 15 of the Micom.

The data amplified from Q1 is transmitted through the 318 MHz pattern antenna. User can use the Transmitter by matching the code switching dip switch (SW1) with the Receiver.

When the SW3 is pressed, the D2 Green LED is turned on and user can see the key lock easily.