

HALO<sup>®</sup>  
**POWERSTATION 100**



HALO-PS-100

**OPERATING INSTRUCTIONS**

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

## **THANK YOU**

*We appreciate your business and would like to thank you for choosing HALO!*

*Your safety is important to us.  
Please read the instructions carefully  
and utilize the proper precautions before  
operating this equipment.*

 
 
## TABLE OF CONTENTS

Included Items.....	1
Digital Display Reference Guide.....	2
Operating Instructions.....	3
Wireless Charging.....	4
USB Charging.....	5
Laptop Charging.....	6
Using Your Floodlight.....	7
Troubleshooting.....	8
FCC Compliance.....	9
Specifications, Warranty and Contact Information.....	10
Safety Precautions/Moving And Storage Instructions.....	11-12


## INCLUDED ITEMS

- HALO POWERSTATION 100
- USB-C to USB-C Charging Cable
- USB Charging Adapter

Back

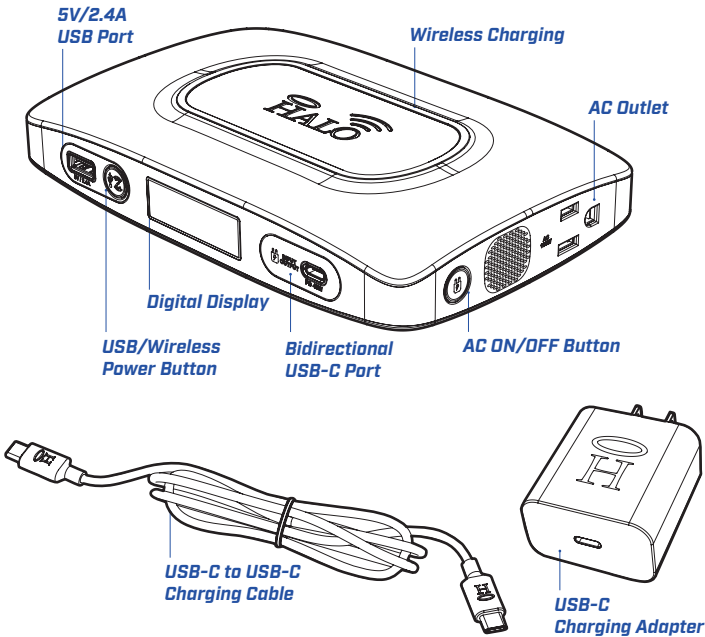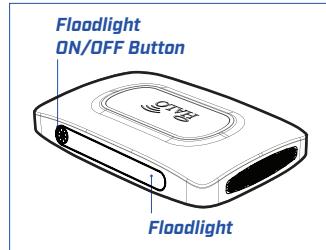


## DIGITAL DISPLAY REFERENCE GUIDE

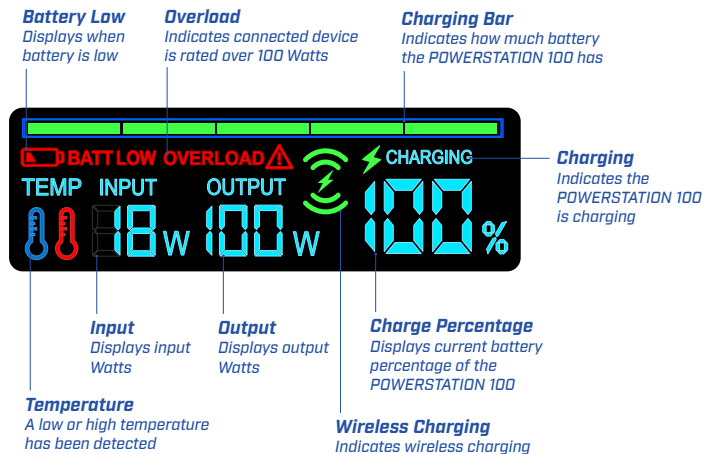 

## CHARGING YOUR POWERSTATION 100

 1. Plug the included USB-C Cable into the corresponding port, as shown below.
2. Connect the other end to the included Charging Adapter and plug into an outlet, as illustrated. Charging will begin automatically.

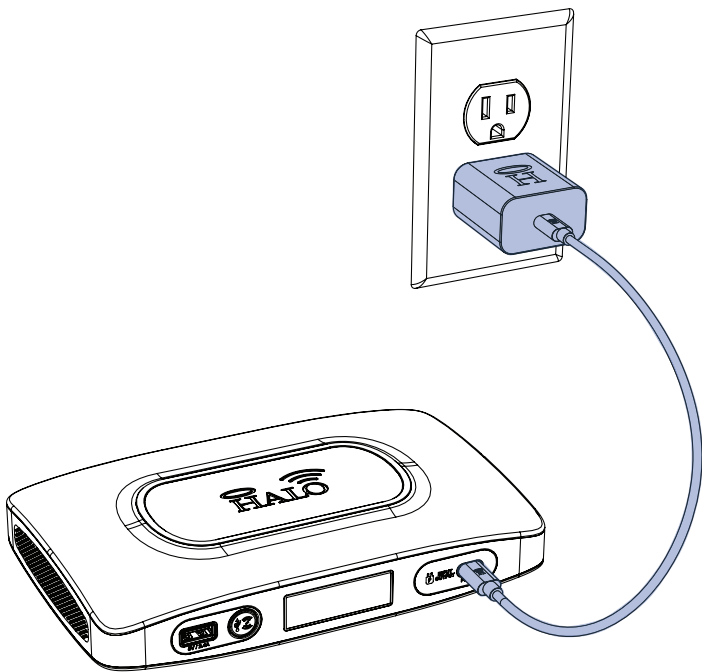


While charging, the Digital Display will illustrate the charge percentage along with the charging input power. When fully charged, the digital screen will indicate 100%. [Full charge could take up to 6 hours.]

Once charging is complete, disconnect the cable and enjoy!

## WIRELESS CHARGING

 1. Charge your wireless device by placing the device on the POWERSTATION 100, as shown in the illustration below. Make sure the device is aligned in the center of the wireless charging surface and that no gaps or obstructions are in between.

2. Press the USB/Wireless Power Button to begin charging.

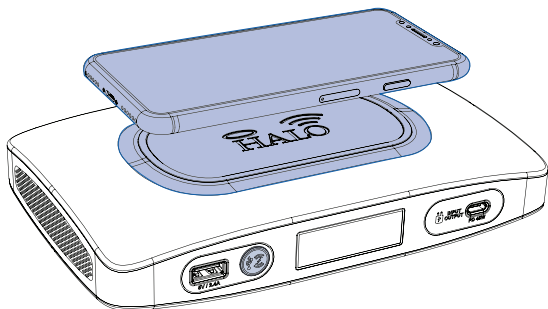

## USB CHARGING

1. Connect the standard USB cable that came with your electronic device into the USB 5V/2.4A output port.
2. Turn on the USB charging by pressing the USB/Wireless Power Button. The Digital Display will indicate that the device is being charged.

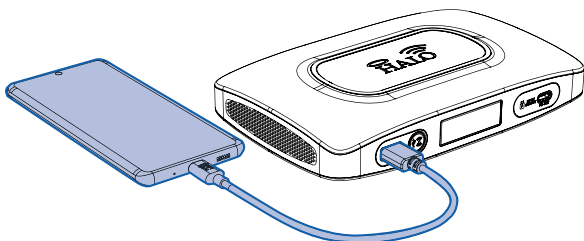 


Illustration of charging device using 5V/2.4A USB Output Port


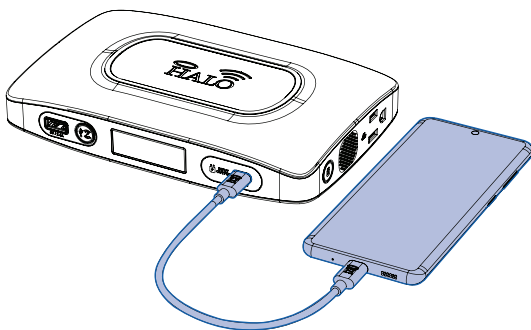 


Illustration of charging device using USB-C Output Port

 

**NOTE:** Press the USB/Wireless Power Button to begin charging.

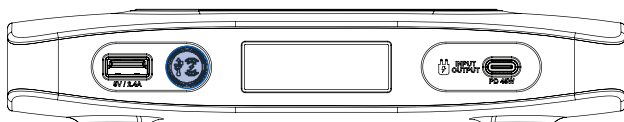

## HALO SMART CHARGE TECHNOLOGY

 
Our SMART CHARGE TECHNOLOGY achieves higher compatibility for charging standard USB electronic devices. When using the USB-C port, this technology allows the POWERSTATION 100 to communicate with your electronic device to provide the fastest and safest charge possible.

## CHARGING YOUR LAPTOP


1. Connect the AC power plug from your laptop (or other electronic device\*) into the AC port, as shown below.

\*Any electronic device can be powered by the AC port, as long as it is rated at 100 watts or less. Be sure to check that your device is rated at 100 Watts or less.

**NOTE:** Make sure the AC power plug is fully plugged into the AC port before pressing the AC Power ON/OFF Button.

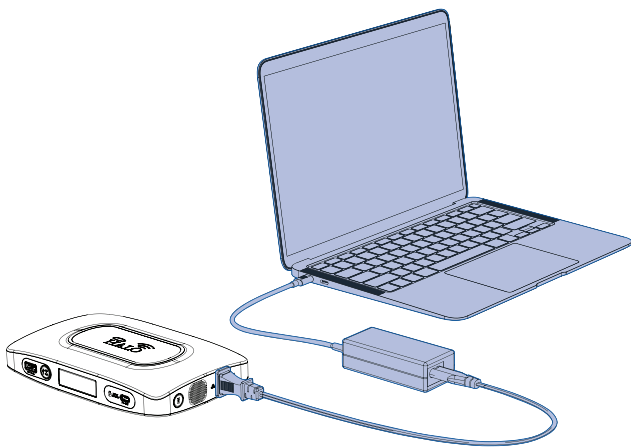


 2. Press the AC Power Button to begin charging.

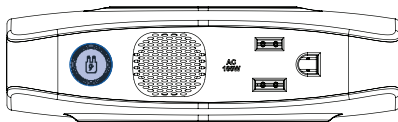

## USING YOUR FLOODLIGHT



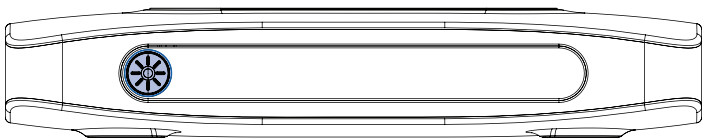 


To activate the floodlight, simply press the floodlight ON/OFF button. The first press will turn on the floodlight. The second press will turn on the red floodlight. And the third press will turn on the red S.O.S. light mode. The floodlight can be turned off by pressing the button a fourth time, otherwise, the floodlight will automatically turn off after 2 hours of inactivity.



## 3 LIGHT MODES

- White Floodlight
- Red Floodlight
- Red S.O.S.

## TROUBLESHOOTING

Condition	Potential Cause	Solution
<p><b>OVERLOAD</b> </p>  <p>AC ON/OFF button flashes red and "OVERLOAD" indicator illuminates red</p>	<p>Connected electronic device is rated greater than 100 watts</p>	<p>Only electronic devices rated at 100 watts or less can be used with the POWERSTATION 100 charger</p>
 <p>Displays a blue or red "TEMP" indicator</p>	<p>The POWERSTATION 100 has detected a low or high temperature condition</p>	<p>Disconnect the POWERSTATION 100 and allow unit to acclimate to temperature operating range (14°F - 122°F) (-10°C - 50°C)</p>
 <p>Wireless Charging Indicator flashes green</p>	<p>The connected electronic device is not properly positioned on the wireless charging pad</p>	<p>Realign the connected electronic device making sure that it is centered on the wireless charging pad</p>
	<p>FOD (Foreign Object Detection) was triggered</p>	<p>Remove foreign object</p>
<p> <b>BATT LOW</b></p> <p>Displays "BATT LOW" indicator</p>	<p>Battery is low</p>	<p>Recharge the POWERSTATION 100</p>

## **FCC Caution: FCC STATEMENT**

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## SPECIFICATIONS

Model.....	HALO-PS-100
Battery Pack Energy.....	Contains a 94900 mWh internal battery
Capacity.....	94900 mWh, 18.25V
Input:	
USB-C.....	5V/3A, 9V/3A, 12V/3A, 15V/3A or 20V/2.25A
Output:	
USB A.....	5V/2.4A
USB-C.....	5V/3A, 9V/3A, 12V/3A, 15V/3A or 20V/2.25A
AC.....	110V~60Hz 0.9A
Wireless.....	10W
Charging Temp.....	32°F - 113°F
Discharging Temp.....	14°F - 104°F
Dimensions.....	7.62" x 4.82" x 1.33"
Weight.....	1.66 lbs
Operating Temperature (During Charging).....	32°F - 113°F (0°C - 45°C)
Operating Temperature.....	14°F - 122°F (-10°C - 50°C)

## LIMITED WARRANTY

At HALO, we are dedicated to making the best quality products. To back this up, this product is warranted. HALO warrants its products to be free from defects in material and workmanship under normal use. During the first 90 days from date of purchase, HALO will repair or replace the defective product. This warranty does not affect any statutory rights that you may be entitled to. Keep a copy of your purchase receipt as proof of purchase.

For all questions about the warranty or exchange requests, please call 888-907-6274.

All copyrighted and copyrightable materials, including, without limitation, the logo, design, text, graphics, pictures, copy writing and the selection and arrangement ("Materials") thereof are ALL RIGHTS RESERVED Copyright © 2022 Alliance Sports Group, L.P.

Alliance Consumer Group  
700 Henrietta Creek Road  
Roanoke, Texas 76262





## **SAFETY PRECAUTIONS / MOVING AND STORAGE INSTRUCTIONS**

***CAUTION - Read all safety information before using this product. Failure to follow these instructions may result in electrical shock, explosion, fire which may result in serious injuries, death or property damage.***

- Read all instructions before using the product.
- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your HALO POWERSTATION 100 may cause electric shock to users and damage equipment.
- Do not operate in explosive atmospheres such as in the presence of flammable liquids, gases or dust.
- Keep dry and away from moisture and corrosive materials. This product should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not expose to moisture, water, rain, or snow.
- Keep away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- POWERSTATION 100 may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict during operation.
- Do not disassemble the POWERSTATION 100. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate if the unit has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush or subject to mechanical shock.

- Do not use with extension cords.
- Do not exceed electrical ratings.
- Do not place any foreign objects between your device and the wireless charger's surface, including metal pads on a car mount, magnetic cards, door keys, coins, NFC cards or other metal objects, as they could potentially demagnetize the wireless charger, affect the charging speed, or cause overheating.
- Wireless chargers make charging more convenient than wired chargers, but confined by current wireless technology, their charging speed is slower than that of wired chargers.
- Do not operate the power pack with a damaged cord or plug, or a damaged output cable.
- This product and its accessories are not toys and should be kept away from children.
- To reduce risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the power pack.
- Do not insert any foreign object into the ports or openings.
- Do not clean with harsh chemicals, soaps or detergents. Just wipe the unit with a soft cloth.
- When charging the internal battery, do so in a well-ventilated area and do not restrict ventilation in any way.
- Make sure the charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Storage: -4°F - 158°F (-20°C - 70°C)  
Discharge: 14°F - 122°F (-10°C - 50°C)  
Charge: 32°F - 113°F (0°C - 45°C)



[www.HALOPOWER.com](http://www.HALOPOWER.com)