
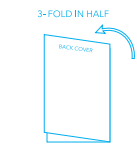


Side 1

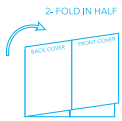

Side 2

<p>PG. 1 ENGLISH</p> <p>Welcome</p> <p>Introduction: Please read the instructions on getting the ZAGG Rugged Messenger. The following information is provided to help you get the most out of your device. For a full instruction manual, please visit www.zagg.com.</p> <p>Getting Started</p> <p>1. Opening Your Device: To view your device, use the Power button to power on the device. To turn the device off, press and hold the Power button for 3 seconds. Because the power and volume buttons are used for other functions, please refer to the user manual for more information. To turn the device off, press and hold the Power button for 3 seconds.</p> <p>2. Using the Stand: The Stand is the top of the device. To use the Stand, press and hold the Power button for 3 seconds. The Stand will flip up and the device will be in the Stand position. To return the device to the Flat position, press and hold the Power button for 3 seconds. The Stand will flip down and the device will be in the Flat position.</p>	<p>PG. 2 ENGLISH</p> <p>3. Adjusting the Viewing Angle: The Adjust button is used to adjust the viewing angle of the device. To adjust the viewing angle, press and hold the Adjust button for 3 seconds. The device will be in the Adjust position. To return the device to the Flat position, press and hold the Adjust button for 3 seconds.</p> <p>4. Power: Press the Power button to power on the device. To power off the device, press and hold the Power button for 3 seconds. To turn the device off, press and hold the Power button for 3 seconds.</p> <p>5. Pair: Press the Pair button to connect your device to a Bluetooth device. To disconnect your device from a Bluetooth device, press and hold the Pair button for 3 seconds.</p>	<p>Additional Functions</p> <p>Keyboard Shortcuts: Your Rugged Messenger keyboard has a number of shortcuts that can be used to perform various functions. For a full list of shortcuts, please visit www.zagg.com.</p> <p>Phone: Press the Phone button to open the phone dialer. To end a call, press the Phone button.</p> <p>Keyboard Shortcuts: Press the Home button to return to the home screen. Press the Home button to return to the home screen. Press the Home button to return to the home screen.</p> <p>Settings: Press the Settings button to open the settings menu. To change a setting, press the Settings button.</p> <p>Search: Press the Search button to search for an app or document. To search for an app or document, press the Search button.</p> <p>Change Culture/Theme: Press the Change Culture/Theme button to change the culture or theme of the device. To change the culture or theme, press the Change Culture/Theme button.</p>
<p>PG. 1 FRENCH</p>	<p>PG. 2 FRENCH</p> <p>rugged messenger</p> <p>www.zagg.com</p>	<p>PG. 3 FRENCH</p> <p>ZAGG Quick Start</p>

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.