

ZAGG®

10 Key

Keyboard Instructions



See the important Health and Safety information on page 7 before using this product.

***WARRANTY REGISTRATION**

Your ZAGG® 10 Key comes with a one-year manufacturer's warranty. In order to activate the warranty, you must register your 10 Key as well as keep your purchase receipt. If you purchased your ZAGG 10 Key from ZAGG.com, ZAGG has already registered it and has a copy of your proof of purchase

NEED MORE HELP? PLEASE SEE OUR FAQ SECTION AT: www.ZAGG.com/faq

POWERING ON AND OFF

To turn your 10 Key on, press the Power button. An LED at the top of the 10 Key will light green for two seconds to indicate it has powered on.

To turn your 10 Key off, press and hold the Power button for three seconds. A red LED will light and then turn off indicating the power is off.

PAIRING YOUR 10 KEY

Pairing your 10 Key with your device is easy. It should only need to be paired once, using the following directions. If the connection between your device and 10 Key is ever lost, simply repeat these steps.

1. Access the Bluetooth® settings on your device.
2. On your 10 Key, press and hold the Power button (also the Pair button) for five seconds. A blue LED light at the top of the 10 Key will begin flashing and flash until your 10 Key and device are paired.
3. Your device will display “ZAGG 10 Key” as an available device. Select this option to complete pairing.

USING YOUR 10 KEY

With your 10 Key paired it's ready to help you with all your bookkeeping needs. Use it the same way you would a traditional 10 key. Note: The Delete key deletes numbers from right to left. The Clear key deletes complete words or data to the left of your cursor in a document and deletes the contents of an entire cell in a spreadsheet program.

BATTERY LIFE

Your 10 Key features a powerful battery that will keep it going for up to a year of regular use between charges*. To check your 10 Key's remaining battery power, turn it on and then press the Power key again. The LED at the top of the 10 Key will flash one of three ways.

1. Three green flashes indicate 50% or more battery life remaining.
2. Three yellow flashes indicate 26-49% battery life remaining.
3. Three red flashes indicate less than 25% battery life remaining complete pairing.

To help preserve battery life, your 10 Key will enter sleep mode if left on and not used for several minutes. To awaken your 10 Key press any key. The 10 Key's battery has no memory and may be charged whenever you wish. For optimal battery life, we recommend turning your 10 Key off when it will sit unused for a prolonged time.

CHARGING YOUR 10 KEY

Your 10 Key is charged and ready to go right out of the box. When you are ready to recharge your 10 Key, follow these steps:

1. Connect the included micro USB charging cable to the corresponding port on top of the 10 Key.
2. Plug the USB connector into any USB outlet.
3. The LED at the top of the 10 Key will light green and then change to red to indicate it is charging.
4. Wait until the red light turns off, indicating a full charge; it usually takes about three hours to fully charge your 10 Key.
5. Remove the micro USB charging cable and enjoy your 10 Key for up to a year before you need to charge it again.

To reach a trained customer service representative, please use one of the following:
ZAGG.com/support/contact.php | questions@zagg.com
1-800-700-ZAGG [9244] | 00-1-801-839-3906 for international customers

For unparalleled scratch protection for your device, we recommend ZAGG's InvisibleShield®.

©2005 - 2014 ZAGG Inc All Rights Reserved.
PATENT PENDING | NASDAQ: ZAGG | MADE IN CHINA
iPad® and Apple® are registered trademarks of Apple, Inc.
Bluetooth® is a trademark of Bluetooth SIG, Inc.
ZAGG®, InvisibleShield®, and ZAGG Folio™ are trademarks or registered trademarks of ZAGG Inc.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Please read the precautions and operation information before using your keyboard or any accessories that accompany it. Retain this information for future use.

1. Health Warning: Take frequent breaks when using your keyboard. If you experience any discomfort, pain, tingling, numbness or burning in your neck, shoulders, arms, wrists, hands or any other part of the body, stop using your keyboard and consult a physician.
2. Use only micro-USB chargers in connection with your keyboard.
3. Do not attempt to service your keyboard.
4. Do not disassemble or attempt to disassemble your keyboard.
5. Do not crush or puncture the keyboard.
6. Do not immerse your keyboard in water.
7. Do not put your keyboard in contact with water or other liquids as they could cause a short circuit, fire, or electric shock which could result in serious injury, death or property damage.
8. Do not use liquid or aerosol cleaners or solvents on or near your keyboard. Clean only with a soft, dry cloth. Disconnect any cords before cleaning the keyboard.
9. Do not use your keyboard while operating a motorized vehicle, including automobile, boat or airplane. Doing so could put you and others at risk of serious injury, death or property damage.
10. Do not use or place your keyboard near any heat sources including, but not limited to, radiators, heat registers, stoves, other appliances, campfires or barbeque grills.
11. To reduce the risk of fire or electric shock, wire or connect your keyboard to products only in the manner instructed in the documentation supplied herewith. Do not attempt to modify or adjust any ports. Any improper connections or adjustments may cause damage.
12. When you are ready to discard your keyboard, recycle your keyboard in a manner consistent with electronic recycling requirements or recommendations in your geographic area.