

 
**Magic W3  
Start Guide**

## **Magic W3 Start Guide**

### **Package Contents**

- Magic® W3™ Unit
- Start Guide
- Earphone/ Handsfree kit
- Car Charging Adaptor
- Mini USB to USB Adaptor
- HDMI Cable
- Magic® Installer CD
- Windows 7 with CD (License Pack)
- Power Adaptor
- Protective Case (product key for activation is available here)
- Warranty Card

### **Device Overview**

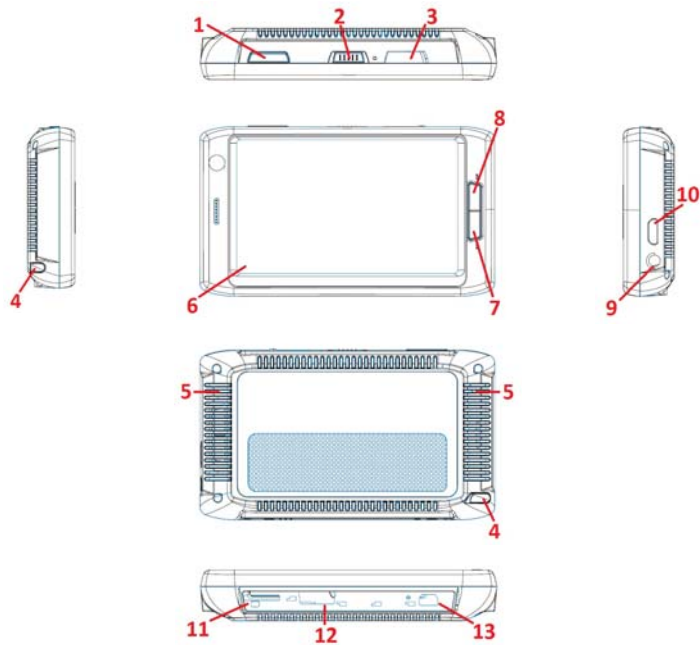

	Component	Description
1	Volume Button	To adjust volume
2	Power/ Lock switch	Switches on W3 & locks the touch screen. Push towards "power" and hold to switch on. Push left to lock touch screen
3	SD card slot	Insert the SD card for extra storage capacity

# MAGIC

Advance Tech Communications Sdn. Bhd.

4	Stylus	Use with the touch screen
5	Speaker	Built-in stereo speaker
6	Touch screen	This can be used for all W3 functionalities

A	New SMS	Compose new SMS
B	Inbox	List of received SMS
C	Sent	List of sent SMS
D	Drafts	List of draft SMS

### Call log



A	All calls	List of all type of calls
B	Incoming	List of only incoming calls
C	Outgoing	List of only outgoing calls
D	Missed	List of only missed calls
E	Display range	Filters the list based on time period

### Settings

 


A	Airplane Mode	Activate/ deactivate airplane mode
B	Cell Network	Activate cell network automatically/ manually
C	Call Forwarding	
D	Call Switching	Activate/ deactivate call switching feature
E	Require PIN	Activate PIN entry requirement
F	Change PIN	Change SIM PIN number
G	Ringtone	Change ringtone for incoming call
H	SMS Tone	Change ringtone for SMS received
I	Vibrate On Notification	Activate/ deactivate vibrate on notification

7	Call	To make phone call after dialing
8	End call	To hang up calls
9	Earphone jack	For hands free kit
10	HDMI port	Connect to HDMI cable for HDMI display
11	SIM card slot	For phone calls and 3G (depending on SIM)
12	I/O port	Connection to charger and docking
13	Mini USB port	Connect other USB devices to W3


### Preparing the Device

#### Insert the SIM card

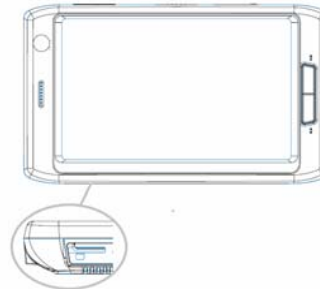

Insert the SIM card and ensure that the golden connector of the SIM card is facing up

#### Insert the micro SD card

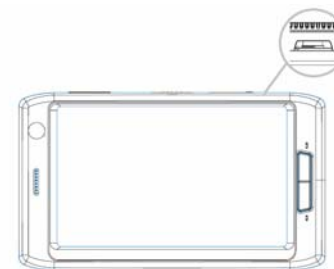 


Open the cover beside the touch screen lock/ power switch. Insert the micro SD card with the golden connector facing up

J

Play Ringtone & Notification Sounds

Activate/ deactivate ringtone & notification sounds

### Switching on W3

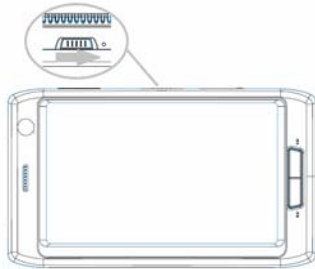 


Slide the switch to the power symbol and hold until touch screen blinks


### Activating Windows



 
- the product key is located on the inner side of the protective case that is included in the packaging

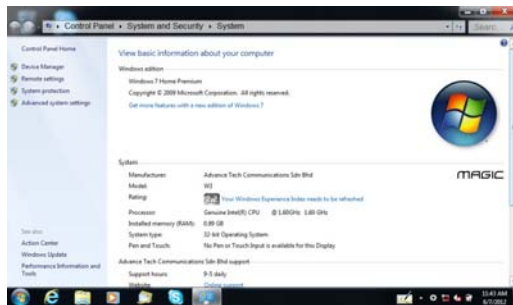


### Dialer

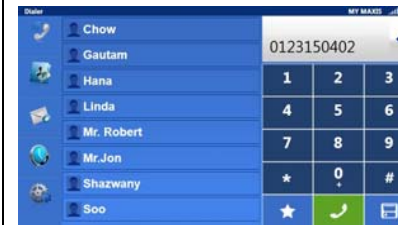 


Tap the numbers on the dialer then press  to make a call


### Phonebook

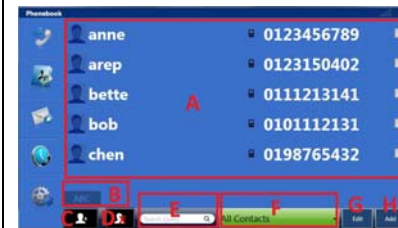 

A	Contact List	List of contacts based on option set in filter list
B	Filter Contacts	To list out contacts based on alphabet character
C	New Contact	Add new contact
D	Delete Contact	Delete existing contact
E	Search Contact	Search for a specific contact
F	Filter List	List out contact in a specific caller group
G	Edit Group	Make changes to a specific caller group (add more/ remove contact to group)
H	Add New Group	Add new caller group


### SMS

 
- Tap  -> Go to Computer -> tap & hold -> tap Properties

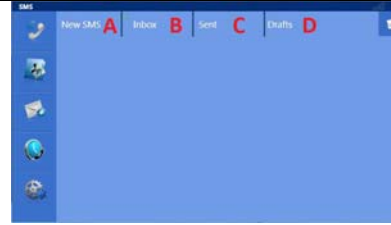

## W3 Telephony
 
### SIM pin entry

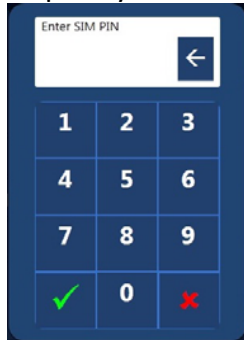

W3 Telephony is activated by double tapping  on the desktop. Upon starting, user are required to input the SIM pin as shown.

**Note:** SIM pin must be between 4 to 8 digits in length.

### Overview

 


After SIM pin has been entered, W3 Telephony displays the Dialer. The functions of W3 Telephony are shown in the following table

A	Dialer Tab	For outgoing calls. Favorites list of contacts are available here for quick dialing
B	Phonebook Tab	List of all contacts are located here.
C	SMS Tab	SMS functionalities
D	Call Log Tab	Lists the incoming calls, outgoing calls, missed calls
E	Settings Tab	Settings include: airplane mode, call forwarding, switching, SIM pin settings, call and SMS ringtone and notifications settings
F	Favorites list	List of contacts that are saved as favorites
G	Numeric Display Bar	Displays the phone number that is dialed



- Windows Activation section is located in the lower part of System Properties

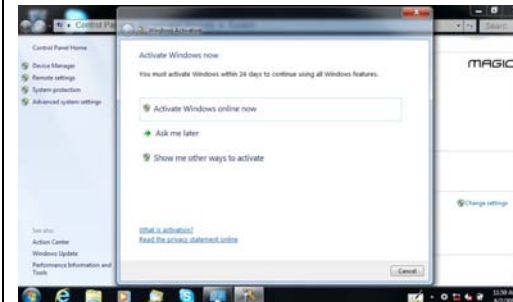

- Tap on Activate Windows now
- Ensure that W3 is connected to Internet to activate Windows. Tap on Activate Windows online now

### User Interface

#### Tapping

- Tap: tap the touch screen once. A diamond shaped cursor will appear on the area that is tapped.
- Double tap: tap the touch screen twice. This is normally use to run applications/ programs or opening files



H	Cancel	To delete numbers that are entered in the display bar
I	Dialer buttons	To input phone number
J	Favorites	Will save the dialed number as favorites
K	Call	Calls the dialed number
L	Save	Save the dialed number as contact
M	Current Display Tab	Displays the Current Tab, network name, signal strength & minimize.



- Tap and hold (Right click): tap the touch screen and hold until a “ring” appears


### Selection



Tap any area on the touch screen and drag

### Keyboard



Tap on  on the taskbar to use the keyboard

### W3 Control Panel



Peripherals in W3 that can be switched on

1	Wi-Fi	Switch on to use Wi-Fi
---	-------	------------------------

### GPS



Tap on the GPS section of the control panel and GPS is activated

### A-GPS



Tap on the "Activate A-GPS" button and enter APN and SUPL server. Once APN and SUPL is entered, tap the Ok button

### 3G



If the SIM card that is inserted into W3 has 3G capability, Mobile Broadband Connection is automatically detected. Tap "Connect" to use the Mobile Broadband connection, SIM card pin entry might be required.

2	GPS	Switch on to activate GPS
3	Rotation Sensor	Switch on to activate auto-rotation of desktop orientation

**Note:** the telephony application must be started before any 3G data connection

**FCC Caution**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**IMPORTANT NOTE:**

**FCC Radiation Exposure Statement:**

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body)as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 1.0 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.