

Operation Manual

Model : DA-200

Precaution

1. Do not remove the cover.

To reduce the risk of electric shock and keep the quality of product, please do not remove the cover.

Please follow up by the instruction of the wiring Diagram of the Installation Guide.

2. Keep small articles out of the reach of children.

Store small articles (screws etc.) in places not accessible to children.

If swallowed, consult physician immediately.

3. Stop using immediately if a problem appears.

When problems appear, stop using the system immediately and contact the dealer from whom you purchased the equipment.

Some problems which may warrant immediate attention include a lack of sound, noxious smoke being emitted from the unit, or foreign objects dropped inside the unit.

4. Do not operate the equipment while driving.

Do not change setting while driving. If operation requiring a prolonged view of the display is required, stop the vehicle in a safe

5. Do not insert 3.5 Inch Disc

3.5 Inch Disc will may not be used.

6. Do not use this equipment outside vehicle.

Do not use this equipment for purposes other than those listed for a vehicle Failure to do so may result in an electric shock or an injury.

7. Keep foreign objects out of the Monitor compartment.

Keep foreign objects out of the monitor compartment. Also, avoid placing your hands in the area where it might interfere with the monitor's operation.

8. Stop the vehicle before carrying out any operation that could interfere with your driving.

If the operation of the unit (such as opening or closing of the monitor, etc.) interferes with your driving, stop the vehicle in a safe location before attempting operation.

9. Temperature

Be sure the temperature inside the vehicle is between +60°C (+140°F) and -10°C (+14°F) before turning your unit on.

10. Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your purchasing dealer.

Check point before operating.

1. Turning On or Off

1. Pushing the **OPEN** switch forward will release the TFT-LCD monitor and it will drop down slightly.
Pull the monitor downward until a comfortable viewing angle is reached.
The internal friction will hold the screen in position while the system is in use.
2. Pressing the **POWER** button on the unit or the remote control will turn the system **ON** or **OFF** alternately.
When in use, the internal backlighting will illuminate the controls.
3. After the unit has been turned on and is displayed in a picture, adjust the viewing angle by pivoting the screen to optimize the picture quality.
4. Remember to turn the unit off and pivot the LCD to the locked position when not in use.

2. Dome Lights Operation

1. The lights are controlled by a three position slide switch.
2. Sliding the switch to the **ON** position will turn the lights on.
3. The **OFF** position will prevent the lights from turning on at all times,
4. The **AUTO** position will allow the lights to turn on and off with the vehicle's interior lighting.

Note : Refer to the Installation Manual for the wire connections.

Do not leave the vehicle unattended with the dome light switch in the **ON** position, as this could result in a discharged battery.

3. Connect Additional AV Input

1. The audio/video inputs may be connected to Audio/Video device directly or through a Junction Box which can connect to a Video cassette Recorder(VCR), video game system, or other audio/video devices.
2. AUX Video Input (Additional)
The unit will accept an audio/video input through the RCA jacks located on the side of the unit.
The audio/video device could be a video game system, Video Cassete Recorder (VCR), or other input device.

4. Region Code

1. Both the DVD player and disc are coded by region.
2. These regional code number must match in order for the disc to play.
3. This unit's code number is **region number 1**. Other regional codes cannot be played in this unit.
If not, the unit will display "Invalid Region"
4. Types of Discs your DVD will play
 - DVD discs – DVDs discs which contain video.
 - Audio discs – Audio CDs contains musical or sound content only.
 - MP3 discs – A disc that contains audio files (for example, a CD-R with downloaded MP3 files).
 - VCD discs – VCD discs which contain video.

5. FM Transmitter Mode (Optional)

1. If this unit has FM Transmitter function, please adjust the FM frequency to hear.
2. For details, please refer to page XXXX.

General Features

- 1.Slot Mechanism type DVD Deck
- 2.Flip Down type 10.2 Inch TFT LCD Monitor (Wide Screen)
- 3.Full Function Remote Control
- 4.FM Transmitter with remote control and OSD (Optional)
- 5.Infrared Transmitter for IR Wireless Headphones
- 6.Two (2) Audio/Video Inputs / One (1) Audio/Video Output
- 7.Remote Sensor
- 8.Dome Lights with Switch (ON/OFF/AUTO)
- 9.FM Modulator Jack for connection
- 10.OSD for Control of DVD and Monitor Functions
- 11.TV Tuner (Optional)
- 12.FM Modulator (Optional)

Identifications of controls

Main Unit

Picture



1. DVD disc insert slot.
2. Play Button. (In emergency mode, Direction Left)
3. Stop Button. (In emergency mode, Direction Right and Emergency Start)
4. Infrared Transmitter and Sensor
 - Used to transmit audio to wireless headphones.
5. Eject Button. (In emergency mode, Enter Button)
6. Power Button
7. F.SKIP Button (In emergency mode, Direction UP)
8. R.SKIP Button (In emergency mode, Direction DOWN)
9. Dome Lights – provide additional Interior illumination.
10. Three position Dome Light Switch.
 - Auto–The dome lights will turn on automatically in this position.
 - Off–The dome lights will not turn on in this position.
 - On–Turns on the dome lights.
11. OPEN Switch –Moves in direction of the arrow to release the drop down screen.
12. Flip Down LCD Panel.
13. Auxiliary A Input.
14. Auxiliary B Input.
15. Memory Card Slot
16. Side Remote Sensor Eye
 - Allows the remote control to operate and control other accessories in the system.

Remote Controller

Picture



1. POWER ON/OFF BUTTON
2. Insert/ Eject Button

Monitor Part

3. Dimmer Button
4. Function Button
5. Set Up Button
6. Picture Button
7. Monitor Mode Button
8. Monitor Menu Button

DVD part

9. NUMBER Buttons
10. FM Transmitter Button
11. Go To Button /Memory Card
12. Repeat Button
13. Repeat A-B Button
14. Return Button
15. Clear Button
16. Sub Title Button
17. Audio Button
18. Angle Button
19. Program Button
20. CHANNEL Up/Down Buttons
21. Input Select Button
22. channel Search Button
23. Volume Control Button
24. MENU Buttojn / PBC
25. Top MENU Buttojn
26. Direction Key Button

(UP/DOWN or LEFT/RIGHT Buttons)

27. ENTER Key Button
28. SETUP Button
29. DISPLAY Button
30. Mute Button
31. STOP Button
32. PAUSE Button
33. PLAY Button
34. SEARCH Buttons (FF, FR)
35. SKIP Buttons (R.SKIP/ F.SKIP)
36. SLOW Button
37. STEP Button
38. ZOOM Button

Remote Controller

BATTERY INSTALLATION

Before attempting to operate your Remote Controller. Install the batteries as described below.

- 1) Turn the Remote Controller face down. and remove battery cover by lifting tab.
- 2) Install two "AAA" batteries. Make sure that proper polarity (+ or -) is observed.
- 3) Align the cover tabs with the remote controller and press down until the cover clicks.

If the remote controller doesn't operate properly:

1. Check the polarity + /- of the batteries(Dry-Cell)
2. Check if the batteries are drained.
3. Check if remote sensor is blocked by obstacles.
4. Check if there is any fluorescent lighting nearby.

Changing A/V Source Signal

1. Press **INPUT SEL** button
2. The desired A/V source signal will be changed as follows ;
DVD -> TV (Optional) -> AUX 1 -> AUX 2 -> DVD



DVD



TV



AUX1



AUX2

Watching TV (Optional)

1. Press **INPUT SEL** button
2. Select the desired item (TV) pressing **INPUT SEL** button. TV screen appears.
3. Select TV Channel using **CH UP(+)** / **DOWN (-)** button.

Adjusting Volume Control



1. Press **VOL UP (+)** / **DOWN (-)** button.
2. Adjust Volume using **UP (+)** / **DOWN (-)** button.

Note : DVD Only mode

Playing Disc


Before Load and Play

- Before you load a disc, make sure that it is compatible with the player.

NOTE : the following Discs CANNOT be used with this player :

3.5 Inches Disc, CD-ROM, CD-I, DVD-ROM

Before using Remote Controller

- If  icon appears, it indicates an invalid command . Please wait.

Loading and Play

- 1.Press the **POWER** button. the unit will turn on and display the source selected when the disc was loaded.
- 2.Insert the disc(Label Up) into the disc compartment.
When the disc is half way in, it will be automatically pulled in and play will begin.

Stopping Play

- During Play, press the **STOP** button

Removing Disc

- Press **INS/EJECT** button

Step Motion Play (Except CD / MP3)

- During play, press the **STEP** button
- Each time the button pressed, the new frame will appear.
- Press the **STEP** button continuously, the step motion play will be done.
- To resume normal play, Press the **PLAY** button.

Slow Motion Play (Except CD / MP3/ VCD)

- During play, press the **F.SLOW** button, the play will be done forward slowly 1/8X, 1/4X, and 1/2X of normal.
- During play, press the **R.SLOW** button, the play will be done reverse slowly 1/8X, 1/4X, and 1/2X of normal.

Note

- After playing the last of track, the unit will be in STOP mode.

Skipping Tracks

1. DVD Mode

- When playing a DVD, if you press the **F.SKIP** (▶▶|) button, it moves to next chapter.
 - In Last chapter, it does not move.
- If you press the **R.SKIP** (|◀◀) button, it moves to the previous chapter.

2. VCD, CD Mode

- When playing VCD 2.0 in Menu Off mode, VCD 1.1 or CD,
 - If you press the **F. SKIP** (▶▶|) button, it moves to next track.
 - Does not move when on the LAST TRACK.
- If you press the **R. SKIP** (|◀◀) button, it moves to the beginning of the track.
 - It does not move when on the first track.

3. MP3 Mode

- When playing a MP3 disc, if you press the **F.SKIP** (▶▶|) button, it moves to next song.
- If you press the **R.SKIP** (|◀◀) button, it moves to the previous song.
 - Moves to the Beginning when on the first track.

Note

- This unit can recognize Max. 8 characters of English.
- MP3 titles in other languages are not recognized.
- When making MP3 disc, please reduce label names within Max. 8 characters of English.

Searching through a chapter or Track

During play, you can search quickly through a chapter or track using the skip function to jump to the next selection.

1. DVD Mode

- Press the **FF** (▶▶) or **FR** (◀◀) button on the remote and press again to search at a faster speed (2X/4X/8X/32X of normal speed.)
- To resume normal play, Press the **PLAY** button.

2. CD / VCD Mode

- Press the **FF** (▶▶) or **FR** (◀◀) button on the remote and press again to search at a faster speed.
 - * VCD(2X/4X/8X/16X of normal speed. * CD(2X/4X/8X of normal speed.
- To resume normal play, Press the **PLAY** button.

3. MP3 Mode

- Not available

Program Play

* CD-DA

1. In Stop Mode, when press **PROGRAM** Button, Program Menu appears.
2. Press the appropriate track number using Number Buttons and press ENTER button.
Continuously press the appropriate numbers using Number Button, press ENTER button.
3. **press PLAY Button. Then Program Play will be started.**

* MP3

1. In Stop Mode, when press **PROGRAM** Button, Program Menu appears upside MP3 Menu.
2. Select the appropriate track numbers, using the LEFT (◀) / RIGHT (▶) or UP (▲) / DOWN (▼) button.
Press the **ENTER** button.
Continuously press the appropriate numbers using Number Button, press ENTER button.
3. Press STOP button and press PLAY Button. Then Program Play will be started.

* Clear Program Play

1. In Stop Mode, when press **PROGRAM** Button, Program Menu appears.
2. Press **Program** Button once again. Then Program Play will be cleared.

Repeat Play



Repeat the current track, chapter, title, or a chosen section (A-B).

When playing a DVD

1. Press the **REPEAT** button on the remote. Repeat screen appears.
2. Select **Chapter Repeat On**, **Title Repeat On**, **Repeat Off** pressing **REPEAT** button.
3. To return to normal play, select Repeat Off pressing **REPEAT** button again.

· A-B Repeat

- Press **REPEAT A-B** button at the point where you want the repeat play to start(A).
- Press **REPEAT A-B** button at the point where you want the repeat play to stop(B).
- A chosen section (**A-B**) will be repeated.
- To return to normal play, press **REPEAT A-B** button again, to select off

Chapter Repeat On



Repeat A-B (A)



Repeat A-B (B)



Repeat A-B Cancel

NOTE

- DVD repeats play by chapter or title, CD and VCD repeat play by disc or track.
- Depending on the disc, the Repeat function may not work.
- If the title or track is completed before marking the end(B), the end of title or track becomes B automatically.
- When in VCD 2.0 model(MENU ON mode), this function does not work.

Direct Play



DVD Mode

- Press the **GOTO** button, the Direct Play screen appears.
- Select **Title /Chapter/Time** pressing **GOTO Button** , enter the numbers of **Title/Chapter/Time** which you want.
- Press **ENTER** button. **PLAY** begins at selected **Time/Title/Chapter** .

VCD Mode

- When press the **GOTO** button, **GoTo** screen appears.
- Enter the numbers of Time which you want. Press **ENTER** button
- Then **PLAY** begins at selected Track.

MP3 Mode

- During play, **MP3** screen appears.
 - Select the numbers of Track which you want using the **LEFT (◀) / RIGHT (▶)** or **UP (▲) / DOWN (▼)** buttons.
 - Press **ENTER** button.
- . Continuously press the appropriate numbers using Number Button, press **ENTER** button.

Zoom Play (Using the Zoom Functions)

DVD/VCD Mode

1. During play or pause mode, press the **ZOOM** button on the remote.
2. When press the **ZOOM** button first time, **ZOOM 1.5x** appears on the left top of Monitor.
3. Press the **ZOOM** button on the remote again, **ZOOM 2x** and **ZOOM 3x** appears on the left top of Monitor.
- 4 To resume normal play, Press the **ZOOM** button. **ZOOM Off** appears on the left top of Monitor.

Using the Display Function

When Playing a DVD

1. During play, press the Display button on the remote.
 - Current title, chapter number and elapsed time will be displayed.
Title, Chapter & Running Time -> Title Remain -> Chapter Elapsed -> Chapter Remain
 - To make the screen disappear, press the DISPLAY button till the screen will show None.

When Playing a VCD

1. During play, press the DISPLAY button on the remote.
 - Current elapsed, remain time will be displayed.
Elapsed -> Remain -> Off
 - To make the screen disappear, press the DISPLAY button till the screen will show OFF.

When Playing a CD

1. During play, press the DISPLAY button on the remote.
 - Current elapsed, remain, total elapsed and total remain time will be displayed pressing DISPLAY button.
elapsed -> remain -> total elapsed -> total remain -> off

Note

Each title on a DVD is usually divided into chapters (similar to tracks on an audio CD).

What is a chapter?

What is a Title?

A DVD may contain several different titles. For example, if a disc contains four different movies, each might be considered a title.

Using the Subtitle Function

When Playing a DVD

1. During play, press the **SUBTITLE** button on the remote, the Sub Title screen appears.
- 2 Select the desired language using the **SUBTITLE** button again.

Using the Audio Function

When Playing a DVD

1. During play, press the **AUDIO** button on the remote, the AUDIO screen appears.
2. Select the desired Audio type using the **AUDIO** button again.

Note

If the selected audio function does not work with this unit, please select the other audio function.

Using the Menu Function

When Playing DVD / VCD

1. During play, press the **TOP MENU** or **MENU** button on the remote.
 - According to disc, **TOP MENU** or **MENU** button will work.
2. Select the desired item in Menu using the **LEFT (◀)** / **RIGHT (▶)** or **UP (▲)** / **DOWN (▼)** buttons.
3. Press enter button Then **PLAY** begins

Set up

Using the Setup Display Function

Using the setup function, you can do the initial setup, adjust the picture and sound quality, and set the various outputs.

You can also set a language for the subtitles and limit play back by children.

Note

- You can display the setup display only when the player is in stop mode.
- Depending on the disc.

To cancel Using the Setup Display

1. Press the **SET UP** button on the remote.
2. Press the **ENTER** button after moving the cursor to **EXIT** menu in Screen.

To Move to the other Menu

Using the Direction Button, move to the desired items or list in Main menu or sub-menu.

 
Using the Setup Display



1. With the unit Stop mode, press the **SETUP** button on the remote, the **SETUP** menu appears.
2. Using the Direction buttons, select **AUDIO**
VIDEO
LANG (Language)
LOCK (Locking)
EXIT in Main Menu
3. To return to the previous menu, using **LEFT** (◀) / **RIGHT** (▶) or **UP** (▲) / **DOWN** (▼) buttons.

Set up screen

Setting Up the Audio Options

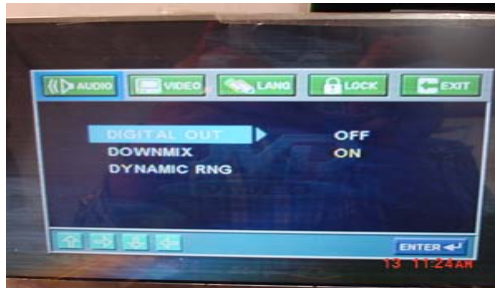

Audio Menu / Digital out



Audio Menu / Down Mix

1. Press the **SETUP** button on the remote.
2. Select the **AUDIO in Main Menu** using the LEFT (◀) / RIGHT (▶) buttons.
3. Select the desired item in sub-menu using the UP(▲) / DOWN (▼) buttons. Then the desired item's color will be changed.

- 1) Digital Output
 1. OFF

2. ON : Converts to Dolby Digital Bitstream(5.1CH).

Select **ON** when using the Digital, Audio Output.

Note: Be sure to select the correct Digital Output or audio will be not heard.

- 2) DOWN MIX

 
1. LT/RT : Left / Right Speaker only.
2. STEREO :
3. OFF :

- 3) DYNAMIC RNG

1. FULL:
2. 7/8 ~ 1/8 :
3. OFF :

4. Move to lists in sub-menu using the RIGHT (▶) button. Select the desired item in list using ENTER button.

Setting Up the Video Options

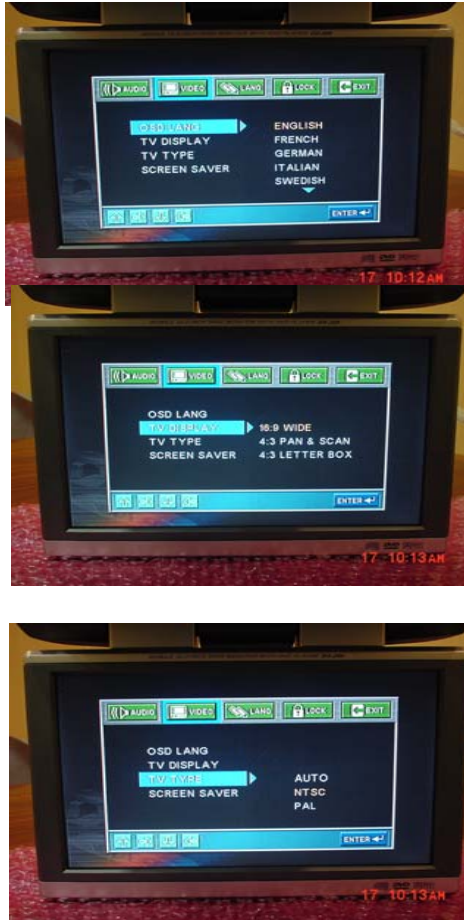

Video Menu / TV Type

Depending on the type of television you have, you may want to adjust the screen setting

1. Press the **SETUP** button on the remote.
2. Select the **VIDEO in Main Menu** using the LEFT (◀) / RIGHT (▶) buttons.

1) OSD LANG : Select the desired Language in Screen

2) **DISPLAY MODE :**

16:9 WIDE :

You can view the full 16:9 picture on your wide screen TV

4:3 PAN & SCAN :

Select this for converting size TVs when you want to see the central portion of 16:9 screen (Extreme left and right side of movie picture will be cut off.)

4:3 LETTER BOX :

Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with 4:3 ratio screen.

3) **NTSC / PAL**

NTSC

PAL

AUTO : Depending on the actual DVD Video discs, select AUTO (NTSC or PAL)

4) **SCREEN SAVER**

ON

OFF

3. Move to the list in sub-menu using the RIGHT (▶) button.

Select the desired item in list using ENTER button. Then the color of the item will be changed.

- Depending on the DVD, 4:3 LETTER BOX may be selected automatically instead of 4:3 PAN & SCAN and vice versa.

Setting Up the Language Options

 


1. Press the **SETUP** button on the remote.
2. Select the **LANG in Main menu** using the LEFT (◀) / RIGHT (▶) buttons.
3. Select the desired item in sub-menu using the UP(▲) / DOWN (▼) buttons.
 - 1) Audio: Setup of the Audio Language
Use the Audio preference menu to select the soundtrack language.
 - 2) Subtitle: Setup of the Subtitle Language
Use the Subtitle preference menu to select the language the disc's subtitles are to be displayed in.
 - 3) Disc : Setup of the Menu Language
Use the Menu preference menu to select the language you want a DVD's disc menu to be displayed

NOTE

If the selected language is not recorded on the disc, the original pre-recorded language is selected.

Setting Up the Locking Options

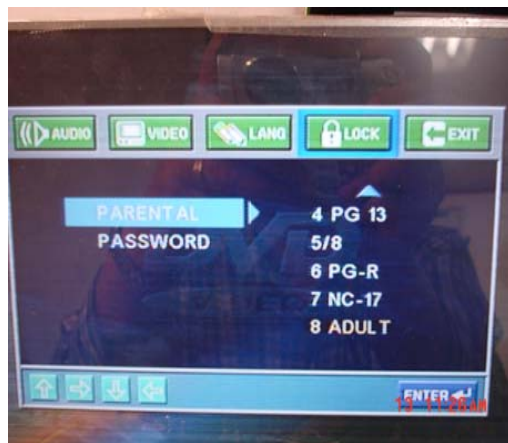


1. Pushing the **SETUP** button on the remote.
2. Select the **LOCK in Main menu** using the LEFT (◀) / RIGHT (▶) buttons.
3. Select the desired item in sub-menu using the UP(▲) / DOWN (▼) buttons.
 - 1) Parental: Setup of the Parental Level
Allows users to set the level necessary to prevent children from viewing unsuitable movies
 - 2) Password
4. Move to the list in sub-menu using the RIGHT (▶) button.
Select the desired item in list using ENTER button. Then the color of the item will be changed.

Controlling Monitor Function

Menu Mode

1. Press the M.MENU button on the remote, the PICTURE screen appears.
2. Select the desired items in Main Menu using the LEFT (◀) / RIGHT (▶) buttons.
Picture → Function → Set up → FM → Exit

 Picture Mode

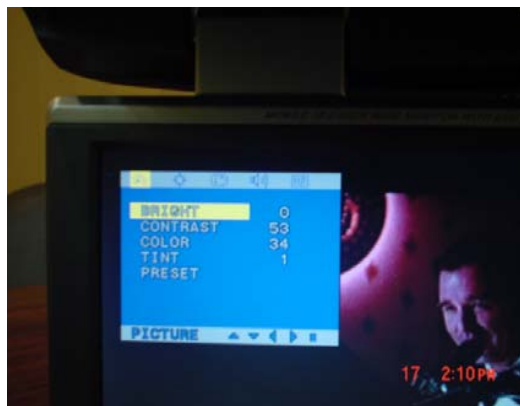

1. Press the PIC button on the remote, the PICTURE screen appears.
2. Select the desired items in sub-menu using the the UP(▲) / DOWN (▼) buttons.
Bright → Contrast → Color → Tint → Preset
3. Adjust the level of picture using the the UP(▲) / DOWN (▼) buttons.
after moving right side of sub-menu using the LEFT (◀) / RIGHT (▶) or ENTER button.
4. To resume normal play, moving to EXIT menu using the UP(▲) or the LEFT (◀) / RIGHT (▶) buttons, press ENTER button.

Function Mode (Screen size / Dimmer)

1. Press the FUNC button on the remote, the Function screen appears.
2. Select the desired items in sub-menu using the the UP(▲) / DOWN (▼) buttons.
Wide Mode → Dimmer
3. Adjust the level of picture using the the UP(▲) / DOWN (▼) buttons.
after moving right side of sub-menu using the LEFT (◀) / RIGHT (▶) or ENTER button.
4. To resume normal play, moving to EXIT menu using the UP(▲) or the LEFT (◀) / RIGHT (▶) buttons, press ENTER button.

Note:

Wide Mode :

- Full : View with full (16:9) size screen mode inspite of Video signal's type.
- Normal : View with 4:3 size screen mode inspite of Video signal's type.

 
Dimmer Mode

- On : 50% from the present Brightness level
- Off : Present Brightness

Set-up Mode

1. Press the SET UP button on the remote, the Set up screen appears.
2. Select the desired items in sub-menu using the the UP(▲) / DOWN (▼) buttons.
Video Mode
3. Adjust the level of picture using the the UP(▲) / DOWN (▼) buttons.
after moving right side of sub-menu using the LEFT (◀) / RIGHT (▶) or ENTER button.
4. To resume normal play, moving to EXIT menu using the UP(▲) or the LEFT (◀) / RIGHT (▶) buttons, press ENTER button.

FM Mode (FM Transmitter / FM Modulator)

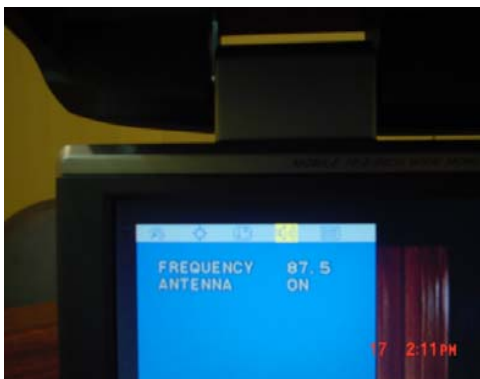

1. Press the FM button on the remote, the FM screen appears.
2. Select the desired item in sub-menu using the the UP(▲) / DOWN (▼) buttons.
3. Adjust the level of picture using the the UP(▲) / DOWN (▼) buttons.
after moving right side of sub-menu using the LEFT (◀) / RIGHT (▶) or ENTER button.
4. To resume normal play, moving to EXIT menu using the UP(▲) or the LEFT (◀) / RIGHT (▶) buttons, press ENTER button.

Note :

 
Frequency (of FM Transmitter) : 88.1 Mhz to 89.5 Mhz (8 Channels)

Antenna (of Modualtor) :

On : The wire transmission (FM Modualtor : Optional)

Off : The wireless transmission (FM Transmitter)

Emergency Mode

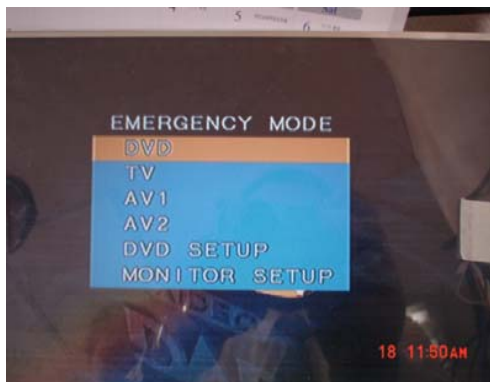

1. Press STOP button 3~4 seconds. The Emergency Mode screen appears.
2. Select the desired mode using the direction buttons on Main Unit

Note – Direction Buttons

CH-PREV : Down
 CH+NEXT : Up
 EJECT : Enter
 PLAY : Left
 STOP : Right

Note :

1. This mode is useful in case the customer lost the Remote Controller.
2. Essential function will be done by Emergency Mode.

DVD Mode (CD/MP3 Mode)

Note :

CH-PREV : Searching Chapter (R.SKIP)
 CH+NEXT : Searching Chapter (F.SKIP)

TV Mode

Note :

CH-PREV : Down
 CH+NEXT : Up

Viewing Memory Card



1. Insert Memory Card to Memory Card Slot. then CARD screen appears.
2. Select the desired picture or movie using UP(▲) / DOWN (▼) or the LEFT (◀) / RIGHT (▶) buttons. and press ENTER button.
3. To return to previous mode (DVD), press GOTO button. Then SELECT screen appears. Select the desired mode using UP(▲) / DOWN (▼) or the LEFT (◀) / RIGHT (▶) button and press ENTER button.



Acknowledging Special Precautions and the FCC Industry Canada Notice

Cautions

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance Information

This device complies with part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received.

Including interference that may cause undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio Frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.