

 
K-16 Instruction Manual of Mini Twister Car

Notes:
 -This product is not suitable for children aged 6 or under. When using electrical products, precautions must be taken to prevent the risk of an electric shock.
 -Ensure adult supervision at all times
 -Do not attempt to modify or re-assemble this product. Unauthorized changes may void your right to use the product.
 -There are small parts in this product. The children should play it with the guard of the adults, and never swallow the small parts into their mouth.

Thank you for purchasing one of our toy products. To ensure that you get the most out of your new purchase, please read these instructions carefully before using the toy for the first time. They contain important information on how to operate the product.



-Please recharge with the dedicated USB delivered by the original factory. Never use broken USB or USB of other brands.
 -Please do not overcharge the battery. When the battery is fully recharged, please pull out the charger.
 -Please do not recharge on the surface of the objects near inflammable things(carpet, wood floor,solid wood furniture, etc.) or of conductive things. While recharging, please keep the battery within the range of visibility.

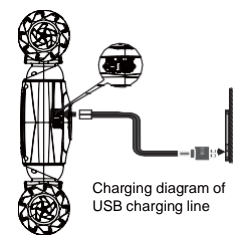

Battery safety information

- The batteries must only be charged under adult supervision.
- Before charging the batteries, remove the battery compartment from the vehicle chassis.
- Remove empty batteries from the vehicle and remote control.
- Ensure that the vehicle is switched off before inserting the batteries.
- Install the battery according to the instruction inside the battery box. Make sure not to confuse the positive and negative polarity of the battery.
- Do not attempt to charge non-rechargeable batteries.
- Do not short circuit the battery terminals.
- If you do not plan to use the vehicle for an extended period, remove the batteries from the vehicle and remote control to prevent leakage.
- Do not throw batteries into open flames, as this may cause them to explode or leak.
- Do not mix old and new batteries or batteries from different manufacturers.
- Only use batteries from recommended or reputable manufacturers.
- Regularly inspect the batteries for signs of leakage.
- It is suggested not to use more than 3 batteries for one single play.
- If leaking occurs in the battery, please avoid touching the liquid with the skin and eyes. If it touches the skin, please clean the skin with soap and clean water at once. If it touches the eyes, please wash the eyes with a lot of cold water at once and see the doctor right away.
- This equipment is composed of electronic components and battery. The electric appliance garbage should be given special care according to the local requirements for garbage disposal.
- Keep this instruction manual in a safe place for future reference. It contains important information on how to use the product safely.

Care and maintenance

- Remove the batteries when you do not plan to use the toy for an extended period.
- Use a damp cloth to wipe the vehicle clean.
- Do not expose the toy to high temperatures, moisture or direct sunlight.
- Do not immerse the toy in water, as this may damage the electrical components.
- If the wheel is too dirty or rolls inflexibly, this may influence the operation experience. Please check it and clear up the foreign matters.

Caution

- When the wheels of remote control car is rolling, Do not touch it in order to avoid injury of yourself or damage of the car.
- Please do not play by the road or in dangerous places in case of accidents.
- Avoid operating the vehicle in the rain or grinding the remote control vehicle over the puddle in case of breakdown.
- Avoid operating the vehicle alongside the river, lake or pond in case the remote control or remote control vehicle fall into the water.
- Please take out the batteries from remote control when not using.



Inserting the remote control batteries

Remote control

- Check the ON/OFF switch is in the "OFF" position.
- Use a screwdriver to loosen the screw.
- Remove the battery cover.
- According to the polarity indicated inside in the remote control. Put the 2*AAA battery into the battery compartment.
- Put the battery cover back and tighten the screw.

Note: If breakdown occurs in the product, please take out the battery for one minute, and then reinstall it. If the breakdown still exists, please replace the battery. The battery can only be installed by the adults.

 
2X1.5V"AAA"

Sketch Map of Installed Battery in the Remote Control

Charging the batteries

Connect the USB charger to USB output on computer or AC/DC adaptor,then insert the car charger plug to the USB wire charger.(Make sure in a correct polarity)
 A full charge takes 70 minutes. When charging the LED indicator turns into red,when charging is complete, the LED indicator stays off.
 Regularly inspect the toy, battery charger, charging cable, connectors and other components for signs of damage. In the event of any damage, discontinue use and send the parts for repair.
 In case of abnormal responses such as suspicious peculiar smell, noise or smog in the charger,please remove the power supply at once.

Introduce the function of the remote control and the vehicle

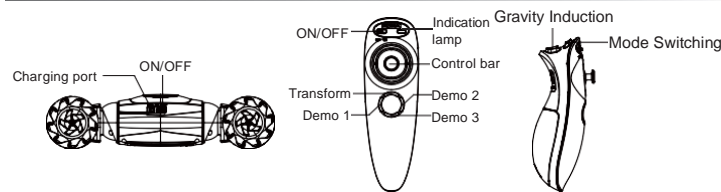

- Demo 1: Short press on Demo 1 key for a variety of functional demonstrations. (Different Demo keys have different music).
- Demo 2: Short press on Demo 2 key for a variety of functional demonstrations. (Different Demo keys have different music).
- Demo 3: Short press on Demo 3 key for a variety of functional demonstrations. (Different Demo keys have different music).
- Transform: Short press Transform key, the car will transform.
- Mode Switch: Short press "Mode" key to switch the mode of car, the car will change from 360degree rotation to left-right moving.
- Control level: Short press the control level to change the sound effect of the car, please check the operation instruction to see more functions.

Using the vehicle

- Switch on the vehicle using the ON/OFF switch.
- Switch on the vehicle ON/OFF switch,make the frequency of the remote control and remote control vehicle match each other,then you can operate the remote control vehicle.
- Switch off the vehicle and remote control after use.
- The playing time is about 35 mins.
- The control rang is about 40 meters, if out of 40 meters rang, it may lose control.

Caution :

In order to avoid losing the remote control vehicle or making it lose control, follow the following steps all the time:
 1.Turn on the remote control.2.Turn on the remote control car.
 Turn it off according to the opposite steps.

Function and operation of the product

Transform

Transform key

-Press the deformation function key to make it into off-road state ,then press again to make it into sports car state

Forward


-Push the control level forwards, the car will move forwards

Backward

-Push the control level backwards, the car will move backwards.

| | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>360° left rotation</p> <p>-Push the control level to the left, the car will spin clockwise on site</p> | <p>360° right rotation</p> <p>-Push the control level to the right, the car will spin anti-clockwise on site.</p> |
| <p>Forward(Gravity induction mode)</p> <p>Keep pressing on the Gravity Induction key</p> <p>-Keep pressing on the Gravity Induction key, incline down the remote control horizontally, then the car will move forwards</p> | <p>Backward(Gravity induction mode)</p> <p>Keep pressing on the Gravity Induction key</p> <p>-Keep pressing on the Gravity Induction key, incline up the remote control horizontally, then the car will move backwards</p> |
| <p>360° left rotation(Gravity induction mode)</p> <p>Keep pressing on the Gravity Induction key</p> <p>-Keep pressing on the Gravity Induction key, incline left the remote control horizontally, the car will spin clockwise on site</p> | <p>360° right rotation(Gravity induction mode)</p> <p>Keep pressing on the Gravity Induction key</p> <p>-Keep pressing on the Gravity Induction key, incline right the remote control horizontally, the car will spin anti-clockwise on site</p> |

 ⚠ Note: It is strictly prohibited to put your finger on the deformed joint when the car turn on the switch for frequency and deformation, so as not to hurt your finger.

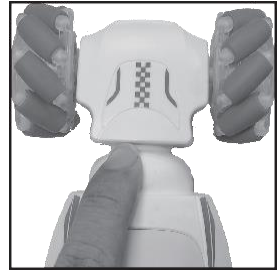

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Receive:
FCC ID: QV7-GC88752-54

Launch:
FCC ID: QV7-GC88752-51