




14+

User manual TRAIL BLAZER 2.4GHz SNOWMOBILE TG1016

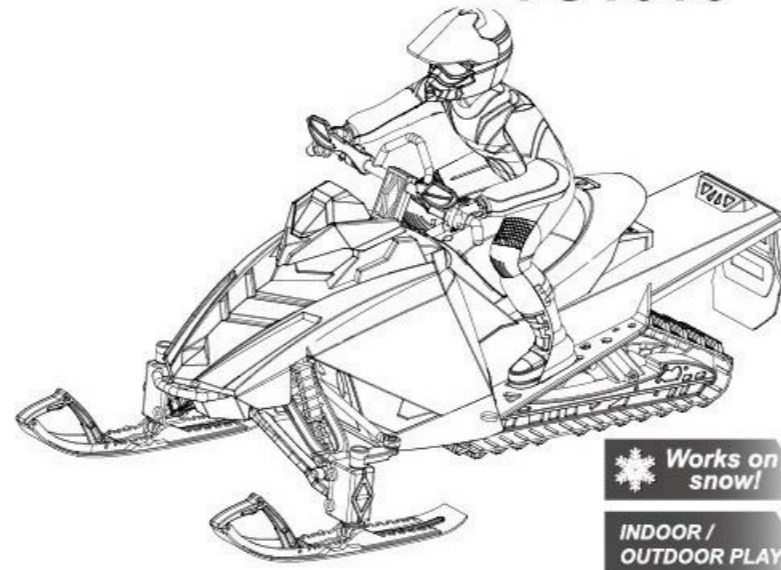

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE. THIS PRODUCT IS NOT A TOY. IT IS NOT INTENDED FOR PERSONS UNDER 14 YEARS OF AGE UNLESS CLOSELY SUPERVISED BY AN ADULT. The materials, specifications, parts and packaging mentioned in this manual are for reference purposes only. We are not responsible for any changes made to this printed material, nor are we able to inform customers of any updates or changes. Please refer to our website: R3VOLT.COM for the latest information.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Important safety Information

Thank you for buying this REVOLT item. To ensure that you operate the vehicle correctly, please read these instructions carefully before first use and store them in a safe place for future reference.

Safety information

- The packaging and this manual contain important information and should be kept in a safe place for future reference.
- Keep the smaller-sized accessories out of reach of children.
- Children must be supervised by an adult when operating the vehicle. The vehicle should always remain within the line of sight of the driver (or instructor).
- Do not store batteries in a hot environment (e.g. near open flames or a heating device).
- If you do not plan to use the vehicle for at least 10 days, discharge the battery to 40%/50% (i.e. if the battery is fully charged, drive the vehicle for half of the total driving time). This helps to prolong the lifespan of the battery.
- Regularly inspect the charging cable's wires, plug socket, outer casing and other accessories to ensure they are not damaged. If there are any signs of damage, discontinue use immediately until repaired.
- After use, ensure that the vehicle and remote control are switched off and remove the batteries in the remote control.

Repair and maintenance

- The user is responsible for the safe operation of this vehicle.
- Do not attempt to modify or re-assemble this product. Unauthorized changes or modifications will be considered abuse and/or neglect and may void any warranty.
- Do not drive on dirt, sand or go through water.
- Avoid direct impact of the snowmobile with obstacles.
- Clean the outside of the vehicle (and battery compartment) with a clean, soft cloth.
- Avoid exposing the vehicle to direct sunlight or heat.
- Do not submerge the vehicle in water as this will damage the electrical components.

About this product

About this product
Remote controlled vehicle

Weight	1044g (2.3lbs)
Dimensions	475 x 240x 285 mm (18.7"x9.45"x11.22")
Remote control range	About 30 meters (About 100 ft.)
Charging time	About 160 minutes
Operating time	About 40 minutes
Battery	7.4V 1200mAh Li-po Battery

Remote control

Operating frequency	2409-2468MHz
Battery	6xAA 1.5V

RED
Plane frequency band :2409-2468MHz
EIRP(MAX) :-22.72dBm
Sold to EU country
product name: [snow mobile]
model number: [TG1016]
Brand name :SYMA
Contact person: Ivan
Tel:+86-0754-86381701

Hereby, [GUANGDONG SYMA MODEL AIRCRAFT INDUSTRIAL CO., LTD], declares that this [snow mobile] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.


The full test of the EU declaration of conformity is available at the following internet address: www.symatoys.com
SIMPLIFIED EU DECLARATION OF CONFORMITY

Battery Installation SNOWMOBILE

1. Switch OFF the power
2. Remove the rider
3. Use a screwdriver to loosen the screws
4. Remove the battery cover
5. Connect the battery plug with the cable socket inside the vehicle's battery compartment
6. Replace the battery cover and tighten the screw

Charging the vehicle's battery:
1. Connect the battery plug with the charging cable.
2. Plug the charging cable into the USB socket.
3. The total charging time for a full charge is 3 hours.
4. When charging, the charging cable indicator light flashes green; when charging is complete, the green light will turn off.

REMOTE CONTROL

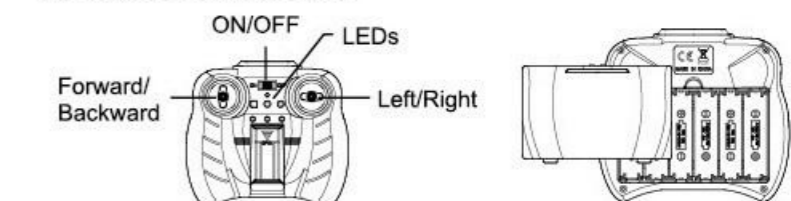

1. Switch OFF the power.
2. Use a screwdriver to loosen the screw.
3. Remove the battery cover.
4. Insert 6 AA batteries according to the polarity indicated inside the battery compartment.
5. Replace the battery cover and tighten the screw.

Battery safety information

- Batteries must be charged under adult supervision
- Always remove the battery from the vehicle before charging
- Only use the charging cable provided
- Do not use a damaged or broken USB charging cable
- Do not charge the battery near flammable objects (i.e. carpet, clothing, wood) and keep the battery in a visible area while charging
- In case of suspicious smell or smoke during charging, remove the power source at once
- Do not charge a battery that starts to swell or leak
- Dispose of any damaged battery
- Do not overcharge the battery. When the battery is fully charged, remove the battery from the charging cable
- Install the battery observing the correct polarity
- Do not short circuit the battery terminals
- Do not attempt to charge non-rechargeable batteries
- Do not dispose of the battery in fire
- The battery pack will be warm after charging and hot after use in the vehicle
- Regularly inspect the batteries for signs of leakage

CONTENTS

- 1 x TRAIL BLAZER Snowmobile
 - 1 x Remote Control
 - 1 x 7.4V Rechargeable Battery Pack
 - 1 x User Manual
 - 2 x Interchangeable Skis
 - 1 x USB Charging Cable
-