

BTMOTOF3

Bluetooth Headset for Motorcycle



Features


Auto-Volume Level Adjusting



A. PRODUCT DESCRIPTION:


SUPERTOOTH BTMOTOF3 is a Bluetooth Headset designed for motorcycle rider or passenger who wishes to have reliable hands-free, wireless and clear communications while driving. This headset is equipped with hi-tech features such as: Auto-Volume Level Adjusting.

1. **MFB or Multi-Function Button**
(power on & off / pairing / answer /
hang-up / reject /
voice dial / intercom connect /
etc.)
2. **Headset Plug**
3. **Volume Up**
4. **Volume Down**
5. **Status Indicator**
6. **Left/Right (L/R) Ear Speaker**
7. **Microphone** (On the flexible boom)
8. **Charger and Headset Socket**
9. **Hook**

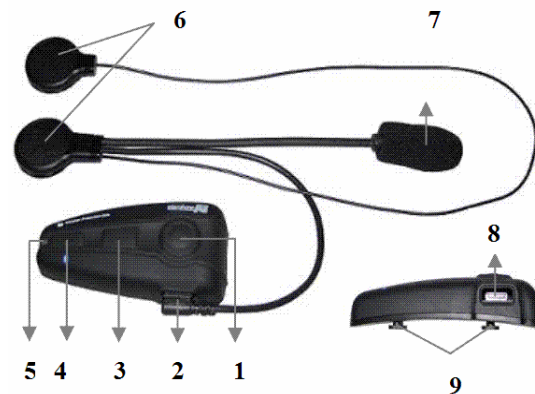

B. CHARGING:

 - 1When the **Status Indicator (5)** turns Red, the battery is low. Charge the unit using the provided charger.
- 2Connect the charger's plug to the **Charger Socket (8)** of the **SUPERTOOTH BTMOTOF3**. Then, plug the charger to an external power source. (*Note: Status Indicator (5) turns Red when charging*).
- 3When the **Status Indicator (5)** turns Green, charging is complete.
- 4Disconnect the charger.



C. POWER ON OR OFF:

Power On: Press the **MFB (1)** until **Status Indicator (5)** turns blue. Or press for approximately 3 seconds, a beep will be heard.

Power Off: Press the **MFB (1)** until **Status Indicator (5)** turns red. Or press for approximately 5 seconds, until 3rd tone will be heard.

D. PAIRING TO YOUR BLUETOOTH MOBILE PHONE:

1. From OFF, press and hold the **MFB (1)** of the **SUPERTOOTH BTMOTOF3** until the **Status Indicator (5)** turns blinking red/blue.
2. While the headset is in pairing mode, access the Bluetooth menu of your phone. Turn on the Bluetooth function then execute a Bluetooth search. (See your phone's manual).
3. When the phone displays the list of Bluetooth devices, select **BTMOTOF3** then enter **0000** and press ok. Pairing is successful if the alternating red/blue lights of the **Status Indicator (5)** changes to blinking blue.

*Note: Some phones do not connect automatically to the kit after pairing. You need to press the **MFB (1)** (1st beep) to connect.*

Or use the menu of your phone:

*Go back to **Bluetooth > Paired devices > highlight the name of this headset (BTMOTOF3) > press Options > then press Connect.***

The **SUPERTOOTH BTMOTOF3** is now ready to use.

E. BASIC OPERATION:

IMPORTANT:

The **SUPERTOOTH BTMOTOF3** needs to be 'paired' with your Bluetooth mobile phone before you can use the following functions. (See **Pairing to your Bluetooth Mobile Phone** on section D.)

Make a Call:

-Dial the number using your phone. Audio will automatically be on the headset.

*Note: With some phones, audio is always on the phone during an outgoing call. You will need to press the **MFB (1)** to transfer the audio to your headset.*

Answer a Call:

- Press the **MFB (1)** for 1 second to accept a call (1st beep).

End a Call:

- Press the **MFB (1)** for 1 second to end the call (1st beep).

Reject a Call (For Handsfree Profile Phones only):

- Press and hold **MFB (1)** for 3 seconds (2nd beep). Phone call rejected.

Voice Dial:

IMPORTANT: First, make sure to activate the voice dial function of your phone. Record at least one **voice tag**. (Kindly refer to the procedure in your phone's manual.)

Note: Voice dialing entries must be stored in the phone's memory, not on the SIM card!

1. Press the **MFB (1)** for 1 second (1st beep) to make a voice dial. A voice dial tone/ beep will be heard on the headset prompting the user to say the voice tag of the contact to call.
2. Say the voice tag. The voice will be played back to you, and then the phone will dial the number automatically.

Redial:

-Press the **MFB (1)** for 3 seconds (2nd beep). The last dialed number will be redialed.

Audio Transfer (For Handsfree Profile Phones only):

-During an ongoing call, you can transfer the audio.

Headset to Phone: Press and hold the **MFB (1)** for 3 seconds (2nd beep) and the audio will be transferred to the phone.

Phone to Headset: Press the **MFB (1)** for 1 second (1st beep) and the audio will be transferred to the headset.

Note: For some phones, you may need to accept a connection prompt on the phone before automatic transfer takes place.

Set the Volume:

-Press the **Volume Up (3)** or **Down (4)** button repeatedly until the desired level is reached.

Federal Communications Commission (FCC) Statement

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.