



MOTOMANUAL

S805 Bluetooth® Stereo Module

Extra-cranial Intelligence for R.E.D. Audex™ Products

DRAFT 5- 9/19/2005

English

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2005.

Caution: Changes or modifications made in the phone or Bluetooth module, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809498A40-0

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

R.E.D.
[Address]
[Web Site]

© 2005 R.E.D.
[Add Trademarks]

DRAFT

Motorola S805 Bluetooth Module

Congratulations on the purchase of an Audex product.

Your Audex helmet or padded hat is the first to combine coveted R.E.D. styling with leading Bluetooth wireless technology from Motorola. This cutting edge technology provides wireless communication and music on or off the mountain.

Detachable Bluetooth stereo speakers allow you to listen to music wirelessly and never miss a call. The fun doesn't have to end with the season since the speakers can be removed from the helmet or padded hat and worn as headphones¹.

With up to [TBD] hours of talk, standby and music listening time, you have all the power you need to get through a full day of activities. Enjoy quality audio from the summit to the street thanks to a wind resistant microphone and noise reduction technology.

Package Contents

Your Audex helmet or padded hat is accompanied by:

- S805 Bluetooth module
- Wall charger (with adapters)
- User's Guide (this booklet)

-
1. Send in the enclosed product registration card and redeem a free DJ-style headband.

- Product registration card (see instructions to redeem free headband)


DRAFT

Contents

Overview	6
S805 Controls	8
Using the S805	10
Charging Your S805's Internal Battery	10
Pairing Your S805 and Bluetooth Phone	11
Pairing Your S805 and Bluetooth Audio Device	14
Connecting Your S805 to a Wired Audio Device	15
Turning Your S805 On and Off	16
Attaching the S805 to Helmet or Padded Hat	16
Attaching the S805 to Headband	17
Making Calls With Your S805	18
Listening to Music With Your S805	21
S805 Indicator Lights	23
S805 Audio Tones	24

Overview

The Motorola S805 Bluetooth Module allows you to listen to music and place and receive phone calls from your R.E.D helmet or padded hat.

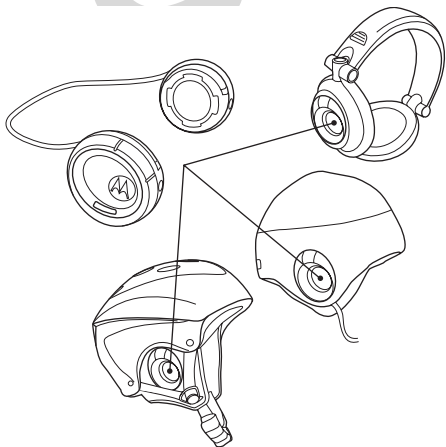


There are three applications for using the S805 Bluetooth Module:

- Listen to music and make/receive calls from a Bluetooth-enabled cell phone with both A2DP Streaming Audio and Handsfree profiles.
- Make/receive phone calls from a Bluetooth-enabled cell phone with Handsfree profile, and listen to music from a connected audio device (such as an Apple iPod).


- Make/receive phone calls from a Bluetooth-enabled cell phone with Handsfree profile, and listen to music from a Bluetooth-enabled audio device with A2DP Audio Streaming profile.


DRAFT

S805 Controls

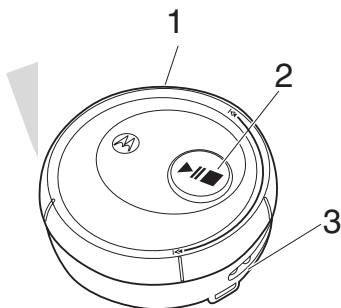

Music Controls (Right Side)

- 1—Track Control Wheel** Allows you to skip forward to the next music track, or skip back to the previous music track.
- 2—Play/Pause/Stop Button**  Allows you to play, pause, or stop music when listening to streaming audio only. For non-streaming audio, allows you to mute/unmute music.
- 3—Microphone** Used when placing or receiving calls.

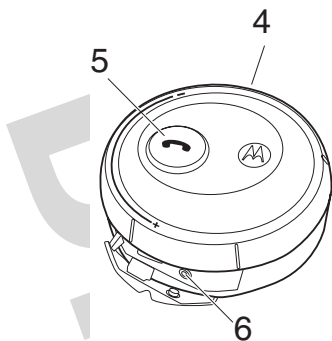

Call Controls (Left Side)

- 4—Volume Control Wheel** Allows you to increase or decrease volume for music or calls.
- 5—Call Button** ☎ Used to answer and end calls. Also used to turn the S805 on and off.
- 6—Headset Jack** Allows you to connect non-Bluetooth audio devices.

Using the S805

Before you can use your S805, you **must** do the following:


- 1 Charge your S805's internal battery.
- 2 Pair your S805 with your Bluetooth phone and/or Bluetooth audio device.
- 3 If required, connect a wired audio device to your S805.

Charging Your S805's Internal Battery

First-Time Use—Before you can use your S805, you need to charge its internal battery for two hours

Step

- 1 If necessary, install the proper country adapter on the wall charger connector.
- 2 Plug the charger into your S805.

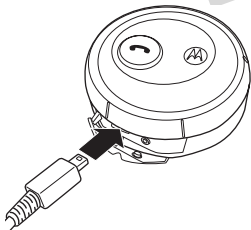

Step

- 3** Plug the other end of the charger power cord into an electrical outlet.
While charging, both S805 indicators turn on and remain on until charging completes. The S805 cannot be used while charging. Your S805 fully charges in about 2 hours.
- 4** When charging completes (indicators off), unplug the charger from the electrical outlet, and your S805.

Note: You can also use a Motorola Original™ Vehicle Power Adapter to charge your S805 while in your vehicle.

A fully charged S805 battery provides approximately:

- [12?] hours of stereo music listening time
- [15?] hours of phone call talk time
- [400?] hours of standby time

Pairing Your S805 and Bluetooth Phone

You must pair (link) your S805 and your Bluetooth-enabled phone before you can make/receive calls or listen to music (originating from your phone).

Note: To listen to music originating from your Bluetooth-enabled phone, stereo audio streaming (A2DP Profile) must be supported by the phone.

“Pairing” links two *Bluetooth* equipped devices, and allows your phone to remember your S805’s unique ID. After your S805 and phone are paired, your S805 automatically connects to your phone when you turn it on.

Perform these steps to pair (link) your phone and S805:

Step

- 1 Turn on the Bluetooth power on your phone. Bluetooth power option may be **OFF** by default. Bluetooth power must be **ON** to search for devices.

For most Motorola phones:

a ≡ (Menu) > Settings > Connection > Bluetooth Link
> Setup >

b Scroll to **Power**.


c Select **Change**.

d Scroll to **On**.

e Press **Select** to turn on the Bluetooth feature. Bluetooth feature remains on until you turn it off.

Note: For other phones, refer to your phone’s user’s guide.

-
- 2 Put your S805 into pairing mode.

With your S805 off, press and hold  until the indicator light turns on and remains on (about 6 seconds).

Step

3 Set your phone to look for your S805.

For most Motorola phones:

a  (Menu) > **Settings** > **Connection** > **Bluetooth Link**
> **Handsfree** > **Look for Devices**

The phone lists all Bluetooth devices it finds.

b Select **Motorola S805**.

c Press **OK** and **Yes** to pair (link) the handsfree device.

d Enter the passkey **0000** and press **OK**.

Your S805's ID is now stored in your phone's memory.

When your S805 is successfully paired with your phone, the S805 indicator rapidly flashes and then resumes regular flashing.

Note: For more information on pairing with your Bluetooth phone, see the **direct.motorola.com/hellomoto/Motosupport/source/BluetoothSelect.asp** web site.

Pairing Your S805 and Bluetooth Audio Device

You must pair (link) your S805 and your Bluetooth-enabled audio device before you can play music.


Note: For the S805 to listen to music originating from your Bluetooth-enabled audio device, stereo audio streaming (A2DP Profile) must be supported by the audio device.

“Pairing” links two *Bluetooth* equipped devices, and allows your phone to remember your S805’s unique ID. After your S805 and audio device are paired, your S805 automatically connects to your audio device when you turn it on.

Perform these steps to pair (link) your S805 and audio device:


Step

- 1 Holding the S805 close to the audio device, put your S805 into pairing mode:

With your S805 off, press and hold  until the indicator light turns on and remains on (about 6 seconds).

-
- 2 Place your Bluetooth-enabled audio device into pairing mode.

Note: For details on placing your Bluetooth-enabled audio device in pairing mode, see the device’s user documentation.

-
- 3 When the S805 pairs successfully with the audio device, you will see a series of 10 rapid flashes from the  button indicator light.

Pairing to Additional Devices

Your S805 can store pairing information for up to eight different *Bluetooth* devices. These devices are stored in chronological order in the “Paired Device List” in your S805’s memory. When you try to pair to more than eight devices, the oldest paired device is removed from the list.


Any of the eight paired devices can start a paired connection to your S805.


When you turn on your S805 it automatically connects only to the **last** handsfree device (such as a mobile phone) **and** the last music source it was **connected to**. If you want to connect your S805 to another device in the paired device list, you must start the connection from that device. When any one of the eight devices starts a connection to your S805 afterwards, that device then becomes the “last connected” device.

Connecting Your S805 to a Wired Audio Device

To listen to music from a non-Bluetooth audio device, connect your audio device to the headset jack using the 2.5mm-to-3.5mm stereo audio cable included with your S805.


Turning Your S805 On and Off

To turn your S805 on, press and hold  for approximately 2 seconds until the LED flashes twice.


To turn your S805 off, press and hold  for approximately 5 seconds until the LED flashes 3 times.

Attaching the S805 to Helmet or Padded Hat

Your S805 is designed to be easily connected to your helmet or padded hat.

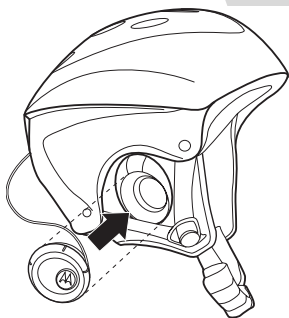

Helmet Connection

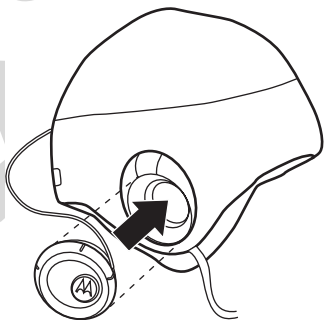

Padded Hat Connection

To connect, snap each S805 pod into the connector as shown.

[Insert graphic of close-up of S805 inserted into connector.]

Attaching the S805 to Headband

Your S805 is designed to be easily connected to the included headphone adapter.



To connect, snap each S805 pod into the connector as shown.

[Insert graphic of close-up of S805 inserted into connector.]






Making Calls With Your S805

Your S805 supports both Handsfree and Headset Profiles. Accessing call functions depends on which profile your phone supports.


Note: Some phones do not support all features listed. See your phone's user's guide.

Note: When placing or receiving calls, music playing from a Bluetooth-enabled device is automatically paused. When the call is finished, the music playing is resumed. Music playing from a non-Bluetooth audio device is muted when placing or receiving calls, and unmuted when the call is finished.



You can activate call functions for the Handsfree profile according to the following table:

Make a Call (Voice Dial)	Phone: On in idle S805: On Short press  , speak name, phone dials call
Make a Call (Hand Dial)	Phone: On S805: On Enter phone number on phone, press Send key on phone, phone dials call.
End a Call	Phone: On—in call S805: On Short press 
Receive (Answer) a Call	Phone: On—phone rings S805: On Short press 
Reject a Call	Phone: On—phone rings S805: On Long press 
Mute/Unmute a Call	Phone: On—in call S805: On Short press 


**Answer
Second
Incoming
Call**

Phone: On—in call, 2nd call incoming in
S805: On
Long press , places 1st call on hold, answers incoming call


**Join a
3-Way
Call**

Phone: On—in call, 2nd call on hold
S805: On
Long press  and  at the same time, both calls are joined


**Toggle
between
Two
Active
Calls**

Phone: On—in call, 2nd call on hold
S805: On
Long press , places active call on hold, holding call becomes active

**Place
Active
Call On
Hold**

Phone: On—in call
S805: On
Long press 

**Resume
call on
hold**

Phone: On-active call on hold
S805: On
Long press 


Listening to Music With Your S805

Your S805 supports Bluetooth A2DP Streaming Audio Profile. The following table provides details for playing music on a Bluetooth-enabled phone or audio device with streaming music capability.

**Play or
Pause,
Music**

Short press 

**Stop
Music**

Long press 

**Adjust
Music
Volume**

Turn **Volume Control Wheel** (on left pod) forward (to increase volume) or backward (to decrease volume)

**Skip
Back to
Previous
Song**

Turn **Track Control Wheel** (on right pod) all the way backward and release

**Skip
Forward
to Next
Song**

Turn **Track Control Wheel** all the way forward and release

The following table provides details for playing music on a wired audio device (no streaming music).

Mute/ Unmute Music	Short press 
-----------------------------------	---

S805 Indicator Lights



The indicator lights on the S805 provide status information.



With charger plugged in:

Light	Status
On (Steady)	charging in progress
Off	charging complete

 With no charger plugged in:

Light	Status
Off	power off
On (steady)	pairing mode
10 rapid flashes	pairing successful
Rapid Flashes (flash on, 3 seconds off)	standby, not on a call
Slow Pulses (2 seconds on, 6 seconds off)	connected in a call

To turn off S805 indicator lights, short press  and  at the same time. When indicator lights are off, the following actions turn the S805 indicator lights back on:

- short press  and  at the same time
- turn S805 off, then on
- plug charger into unit

S805 Audio Tones

The audio tones in your S805 provide status information.

Audio Tone	Status
Single high tone when pressing volume button	volume maximum or minimum reached
Five rapid high tones, repeated every 60 seconds	low battery Note: While streaming music wirelessly, the low battery tone will be played only once.
No audio indications; deteriorating audio quality	out of range
Ring tone	incoming call
Single high tone	pairing confirmation

Audio Tone	Status
Single low tone	initiate voice activation
Dual high/low tone	voice tag not recognized
Single high tone	end call
Low to high tone	phone network not available
Two tones	Mute on/off
Single tone	power on/off

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

Recycling Mobile Phones and Accessories



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled.

In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

Warning: Never dispose of batteries in a fire because they may explode.

Safety and General Information

**IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR DEVICE.**

Safety Information: Wireless Devices

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec.15.19(3).

Electromagnetic Interference

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your device in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external radio frequency (RF) energy emitted by your device.

Aircraft

While aboard aircraft, turn off your device when instructed to do so. Any use of the device must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Hearing Aids: Some devices may interfere with some hearing aids. In the event of such interference, you may want to consult with your hearing aid manufacturer to discuss alternatives.

Other Medical Devices: If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety Information: General Use

USE AT YOUR OWN RISK

Do not use your headphones and cellular phone while riding or moving. Only use them while waiting for the lift, on the lift, waiting to ride, or in the lodge. Listening to tunes or talking on a phone while riding may prevent you from hearing others around you, distract you from riding safely, and limit your ability to hear what your edges are doing on the snow. All of these can cause loss of control and an accident possibly resulting in injury or death to you or others.

Avoid Distraction

Using headsets while operating a motor vehicle, motorcycle or bicycle is dangerous, and is illegal in some states. Check your local laws. Use caution while using your Audex S805 when engaging in ANY activity that requires your full attention. Avoid placing or receiving calls while driving an automobile, motorcycle, equipment or any other motorized mode of transportation to reduce the risk of accident or injury.

Avoid Hearing Damage

Using the headset at high volume may result in permanent hearing loss. If you experience ringing in your ear, reduce the volume or discontinue using Audex S805. With continued use at high volume, your ear may become accustomed to the sound level, which may result in permanent damage to your hearing. Keep Audex S805 volume at a safe level.

Avoid Moisture

Using Audex S805 in or near water or other liquids, or in wet locations, may cause electric shock and serious injury. The transceiver module is not waterproof, so follow these safeguards:

- Do not use Audex S805 while swimming or bathing.
- Do not wear Audex S805 in the rain.
- If any food or liquid is spilled on Audex S805 or its power adapter, unplug the charging cable from Audex S805 and unplug the power adapter from the electrical outlet before drying.

Location of Use

Audex S805 is NOT to be used in the vicinity of any explosive or hazardous substances, as it may become volatile and cause serious injury or death.

See "Electromagnetic Interference" above for restrictions on using Audex S805 in medical facilities and aboard aircraft.

Proper Care of your Audex S805

Do Not Modify or Dismantle

Do not attempt to dismantle the Audex S805. Doing so may expose you to electric shock and serious injury. There are no user-serviceable parts inside. Any attempt to alter or repair the module will void the limited warranty. Users are not permitted to make changes or modify the device in any way. Changes and modifications void the user's authority to operate the device. See 47 CFR Sec. 15.21.

Battery

Do not attempt to remove the internal rechargeable battery. Disposal of devices that contain internal rechargeable batteries must be in accordance with local environmental regulations.

Temperature

[Needs to be modified]

- Do not store or use Audex S805 in temperatures lower than -20°C / -4°F or higher than 50°C / 122°F.
- Do not recharge Audex S805 in temperatures lower than 0°C / 32°F or higher than 40°C / 104°F.
- Conditions inside a parked car can exceed this temperature range. Do not store Audex S805 in a parked car.
- Do not store Audex S805 in direct sunlight.
- Storing Audex S805 fully charged in high temperature conditions may permanently reduce the life of the battery.
- Battery life may temporarily shorten in low-temperature conditions.

Shockwave

Do not expose Audex S805 to excessive force or impact. Be careful not to drop the Audex S805.

Charger

Do not force the charging cable connector into the battery charging port. If the connector won't go into the port, try flipping the connector 180 degrees. Do not attempt to charge Audex S805 with any charger other than the one designed by Motorola specifically to be used with this product.

Cleaning

To clean components in your Audex S805, use a soft cotton cloth to gently brush all surfaces to remove any grit or particles that might scratch the surfaces. Please note the following:

- Before cleaning, make sure the Audex S805 is unplugged from the wall charger.
- The Audex S805 module is not waterproof, and excessive moisture may damage the electronic circuitry. Do not rinse or immerse any modules.
- Do not clean the modules with soaps, detergents, ammonia, alkaline cleaners, abrasive cleaning compounds or solvents. These substances may leak into the module and damage the electronic circuitry.

Support

If your Audex S805 does not function, please make sure that the battery is charged, you have followed the instructions to install and operate your system. In addition, go to [\[R.E.D. support website?\]](#) for the latest support information. If Audex S805 still does not function, contact Motorola Product Support as follows:

North America	www.hellomoto.com or 1.877.MOTOBLU
Australia	1300 138823
New Zealand	0508 6686 7652

Consumer Warranty Coverage

Thank you for purchasing your Audex product. This Audex product is covered by two different warranties; one that covers the helmet or padded hat and related components, which is administered by R.E.D., and one that covers the S805 BluetoothÆ module system, and which is administered by Motorola, Inc.

Audex Warranty Policy – Helmet/Padded Hat and Related Components Coverage

R.E.D. warrants all products sold by R.E.D. to be free of defects in material or workmanship for a period of one year from the date of purchase.

If a product is found to be defective by R.E.D., in its sole discretion, R.E.D.'s only responsibility shall be limited to repair or replacement of the defective product. R.E.D. will not be responsible for any costs, losses, or damages incurred as a result of loss of use of product. This warranty is subject to the following limitations, in addition to any imposed by virtue of applicable law.

- The warranty applies only to R.E.D. products purchased from an Authorized R.E.D. Dealer and is valid for the original purchaser only.
- All products returned to R.E.D. for warranty inspection must receive prior return authorization which can be given over the phone. Ship products freight prepaid and insured. R.E.D. assumes no responsibility for products during shipment from the customer to our Warranty Department. Shipping charges are not refundable.
- Excluded from coverage under this warranty are the following:
 - Damage caused by misuse, abuse or neglect.
 - Damage caused by improper mounting or adjustment of the bindings.
 - Normal wear and tear.
 - Damage caused by anything other than defects in materials or workmanship.

- Damage caused by use of solvents, adhesives, or LOC-TITE.
- Damage caused by use of non-R.E.D. hardware for mounting bindings.
- Damage to R.E.D. products caused by non-R.E.D. products.
- Any and all claims for consequential and incidental damages are excluded from coverage under this warranty although, some States do not allow the exclusion or limitation of incidental or consequential damages, and so the above limitation or exclusion may not apply to you.

ROCK OR RAIL DAMAGE AND ANY OTHER IMPACT RELATED DAMAGE IS NOT COVERED UNDER THIS WARRANTY.

- All coverage under this warranty is void if any modification, change or alteration has been made to the product that is not specifically authorized in writing by R.E.D.
- Repaired or replaced products are covered for the remainder of the original warranty only.
- All warranty claims must be accompanied by the original purchase receipt from an Authorized R.E.D. Dealer. Invoice or charge receipt must clearly identify the dealer.
- R.E.D. products are not covered by any verbal warranties.

All coverage under this warranty is void if any modification, change or alteration has been made to the product that is not specifically authorized in writing by R.E.D. Repaired or replaced products are covered for the remainder of the original warranty only. All warranty claims must be accompanied by the original purchase receipt from an Authorized R.E.D. Dealer. Invoice or charge receipt must clearly identify the dealer. R.E.D. products are not covered by any verbal warranties.

Audex Coverage – Helmet/Padded Hat and Related Components Coverage

Covered: Manufacturing defects (as determined by R.E.D.) some examples listed below.

- Defective sewing.
- Defective hardware
- Defective zippers and snaps
- Cracking/breaking of any parts, not due to misuse, abuse, neglect, impact, or the use of paint and/or solvents

Not Covered:

- Any problem resulting from misuse, abuse or neglect
- Damage caused from impact
- Cosmetic issues including discolored fabrics, shell dents
- Damage caused by any modifications
- Rips and tears
- Fading (this includes UV damage)
- Pilling
- Shrinking
- Damage (including color bleeding) resulting from improper washing, improper detergents, or exposure to liquid, water, beer, rain, sand, nachos or dirt.

For additional information please see the R.E.D. crash replacement policy [\[web link??\]](#)

Outerwear Life Time Warranty***

For specific SG tech product, beginning with 2003 product, there is a lifetime warranty policy. The policy will be to repair, if possible, to first

quality. If repair can't be done, replace with same or better grade product, providing consumer with options for them to choose. Warranty applies to original purchase only and valid proof of purchase is required.

***Lifetime warranty does not apply for electronic features found in some of our Helmet/Padded Hats.

[Is this true? Need to verify.]

Audex Claims Procedure – Helmet/Padded Hat and Related Components Coverage

STEP ONE

Evaluate the Validity of the Claim

- Was the product purchased in the last 12 months?
- Does the damage appear to be attributable to defective materials or workmanship?
- Does the damage appear to be due to impact, abuse, negligence, or reactions to heat, solvents, or harsh detergents?

For specific instructions regarding different products, please consult the Warranty Guidelines.

If it appears to meet the "Covered" Guidelines in this manual, continue...

STEP TWO

CALL FOR A RETURN AUTHORIZATION (RA) NUMBER

- Dealers call 1-800-367-2951.
- Consumers call 1-800-881-3138.
- Tell us WHAT you are sending back - describe the product.
- Tell us WHY you are sending it back - describe the problem.
- Record the RA# and details in a log.

STEP THREE

PACK AND SHIP THE PRODUCT IMMEDIATELY!

- Include the original proof of purchase (receipt).
- Include a brief description of the problem and the RA#
- Mark the defect with masking tape if possible.
- Print the RA# clearly on the outside of the box.
- Ship the claim to:

R.E.D.

Attn: Product Service RA# _____

30 Community Drive Suite #3

South Burlington, VT 05403

[This is Burton's address? Need R.E.D's address]

Customers are responsible for shipping charges to R.E.D.

Overnight and 2-Day shipments to R.E.D. will be returned in the same manner at our expense.

*****W48 GOES INTO EFFECT WHEN WE RECEIVE THE PRODUCT.*****

(What is W48? This means the product will be on it's way back to you in 2 business days.)

Within 48 hours of receipt of product, the claim will be handled in one of the following ways:

- If the returned product is within the valid warranty period of one year and judged by R.E.D. to be defective, we will repair or replace the product. **The warranty remains valid on repaired and**

replaced items for the balance of one year from the original purchase date.

- If the problem is determined to be not covered under warranty but can be repaired, we will call with a quote, and to get authorization to proceed with the repair.
- If the problem is not covered under warranty, nor repairable, the product will be returned as is.

Motorola Bluetooth Module System Limited Warranty

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its wireless telephones, pagers and consumer two-way radios that operate via Family Radio Service or General Mobile Radio Service ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products Covered	Length of Coverage	Exclusions
A Products and Accessories as defined above, unless otherwise provided for below.	A One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.	<p>Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.</p> <p>Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.</p> <p>Wiring and other electrical harnesses. Wiring and other electrical harnesses integrated into clothing or wearable items and which connect Products or Accessories are excluded from coverage.</p>

Products Covered	Length of Coverage	Exclusions
<p>1 Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.</p>	<p>1 Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.</p>	<p>Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) impact, collision or other contact with solid objects; (c) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (d) contact with solvents, adhesives, or other chemicals; (e) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (f) other acts which are not the fault of Motorola, are excluded from coverage.</p>

Products Covered	Length of Coverage	Exclusions
1 Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.(con't)	1 Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product (con't)	Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage. Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Products Covered	Length of Coverage	Exclusions
2 Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	2 Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.	Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage. Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.
3 Consumer and Professional Two-Way Radio Accessories.	3 Ninety (90) days from the date of purchase by the first consumer purchaser of the product.	
4 Products and Accessories that are Repaired or Replaced.	4 The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.	

Products Covered	Length of Coverage	Exclusions
B Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk)	B Ninety (90) days from the date of purchase.	<p>Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.</p> <p>Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.</p>

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent

reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones: 1-800-331-6456 Pagers: 1-800-548-9954 Two-Way Radios and Messaging Devices: 1-800-353-2729
Canada	All Products: 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL

MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Wireless Phone Safety Tips

Drive Safe, Call Smart SM

Check the laws and regulations on the use of wireless phones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Contact www.motorola.com/callsmart for more information.

Your wireless phone lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your wireless phone while driving, remember the following tips:

Get to know your Motorola wireless phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.

When available, use a handsfree device. If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original TM handsfree accessories available today.

Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.

Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.

Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, or medical emergencies.¹

Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.¹

Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.¹

¹.Wherever wireless phone service is available.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device Ref IC RSS 210. The term "IC:" before the certification/registration number only signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment. See Ref IC Self-Marking 6(f) and RSP-100 Sec. 4.

FCC Notice to Users

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

