

Safety Precautions

- This manual contains important information on safety precautions and product handling to prevent an accident. Make sure to read this manual carefully before using this product.
- Keep this manual in a safe place where you can find easily after reading this manual.
- Seller will bear no responsibility over the loss caused by memory erasure due to product breakdown, repair or other reasons.

※ Warning and Caution symbols



Warning

► If mishandled, the user might get injured or product malfunction may occur.



Caution

► If mistreated, the user may get harmful effect, or there may be errors in the system.

MP3
PLAYER

Table of Contents

■ Safety Precautions	4~6
■ Product Features	7
■ Name of the Unit	8
■ Description on LCD	9
■ Before Using	10~13
- Installing Batteries	10
- Battery Lifetime	11
- Hold On/Off	12
- Power On/Off	12
- Connecting an Earphone	12
- Attaching the Necklace String	13
- Mode Switching	13
- Navigation Function	13
■ Music Mode	14~19
- Basic Functions	14
- Play/Stop	14
- Volume Control	14
- File Move/Search/Select (FF/REW)	15
- A-B Section Repeat	15
- Menu Setting	16
- Menu Configuration	16
- EQ (EQUALIZER)	17
- USER EQ (User-defined EQ)	17
- REPEAT	17
- DELETE	18
- SYSTEM	18
- ABOUT	19
- EXIT	19
■ Voice Mode	20~25
- Basic Functions	20
- Recording	20
- Play/Stop	20
- Volume Control	21
- File Move/Search/Select (FF/REW)	21
- A-B Section Repeat	22
- Menu Setting	22
- Menu Configuration	23
- REPEAT	23
- DELETE	24

Table of Contents

- SYSTEM-----	25
- ABOUT-----	25
- EXIT-----	25
■ FM Mode-----	26~30
- Basic Functions-----	26
- Scanning FM Frequency-----	26
- Automatic frequency scanning-----	26
- Manual frequency scanning-----	26
- Volume Control-----	26
- FM Recording-----	26
- Automatic Preset Saving-----	27
- Manual Preset Saving-----	27
- Tuning to the Saved Channel-----	28
- Deleting the Saved Channel (Deleting Preset)-----	28
- Reception Mode Switching-----	28
- Switching Mono and Stereo Mode-----	28
- Menu Configuration-----	29
- AUTO SCAN (Automatic Preset Saving)-----	29
- AREA (Area Setting)-----	29
- SYSTEM-----	30
- EXIT-----	30
■ Installing Program-----	31~32
■ Uninstalling Program-----	33~34
■ Connecting to a PC-----	35
■ Downloading Files-----	36~37
■ Uploading Files-----	38~39
■ Removing Files-----	40~41
■ Formatting a Memory-----	42~43
■ Troubleshooting-----	44
■ Specifications-----	45
■ Note-----	46



Safety Precautions

Storage precautions



Do not store the product at the high-temperature place (above 40 °C). Especially, do not store the product in the window-closed vehicle in summer.



Do not store the product at high humidity, wet or dusty area.



Keep out of the children's reach.

Usage precautions



Do not drop the product or apply strong shock.



Do not scrub the product surface using alcohol, thinner or benzene.



Do not apply strong shock to the LCD.




Remove batteries immediately if the product gives off smoke or deformed due to heat.

MP3
PLAYER



Safety Precautions

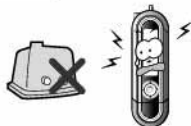

Do not use the product in the prohibited area where the electronic device usage is forbidden such as the aircraft.



There is a risk of the car accident if you use this product while you're driving or walking on the street.
Do not use the earphone or handle the product while wearing an earphone.



If you set the volume too high, your hearing ability may be impaired.
Set the proper volume.



Do not disassemble the product at your discretion.

MP3
PLAYER



Safety Precautions

Battery Usage Precautions



Make sure to use the battery specified in this manual.
(AAA alkaline battery)



Do not have a short circuit, disassemble or heat the product.



Frictional heat can set the fire.
Keep away from the metallic objects such as battery, coin or lock.



Check the proper polarities (+/-).



Remove the batteries from the product if you don't use the product for a long time.



Warning

- If your cloth or skin is stained with an electrolyte, cleanse with water immediately and consult your doctor.
- If your eyes are stained with an electrolyte, do not rub it and wash it with clean water immediately and consult your doctor.

MP3
PLAYER