

Product Features

■ Portable mass USB storage device

You can upload/download files conveniently and quickly in the Windows Explorer without additional program.

■ 7-color backlight

You can select the color of the backlight you want.

■ Multi Codec player

Supports playback for MP3 and WMA files.

■ Multi language text support

The LCD displays file information written in 24 different languages including Korean, English, Chinese (Simplified/Traditional) and Japanese.

■ Firmware upgrade

You can upgrade the product firmware to maintain the best quality.

■ FM reception and recording

The automatic station scanning function and the preset function allows you to enjoy and record the FM broadcasting.

■ Automatic FM station scanning

The player can detect and save the available FM frequency automatically.

■ EQ

You can select one of the five equalizer modes - Rock, Jazz, Classic, Pop or User EQ.

■ User-defined equalizer (User EQ)

The player implements rich sound effects using minute adjustment in 5 bandwidths.

■ Convenient File Management

You can create and delete folders in your PC to manage files conveniently.

■ Easy to use Navigation function


You can search files easily with the tree structure navigation function in PC.

■ Low power consumption

Low power consumption enables you to use the product for a long time.

MP3
PLAYER

 
Name of the Unit

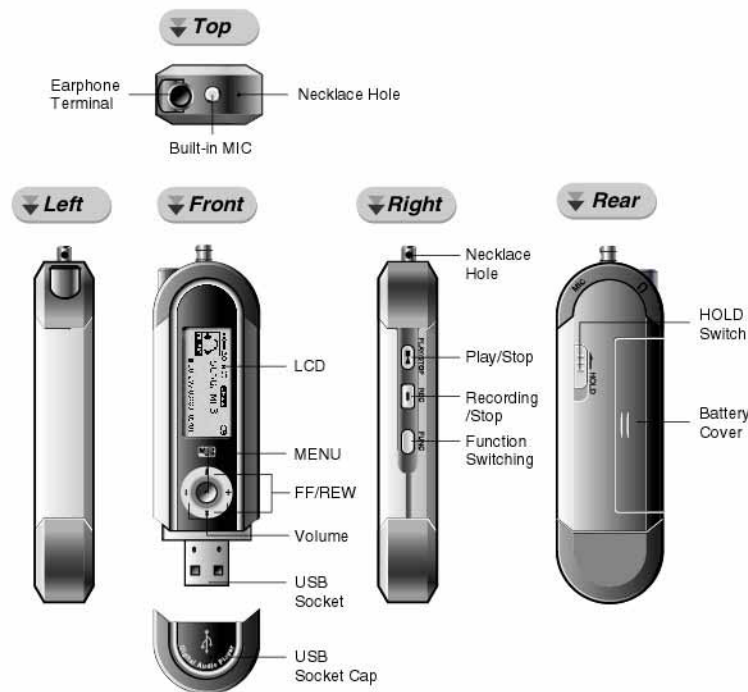

MP3
PLAYER


Description on LCD
 
<Music Mode>




LINE 1: Displays the current music mode icon and the file name.
 LINE 2: Displays the volume, repetition, EQ and battery icon.
 LINE 3: Displays the Play/Stop status, playback time/total file playback time and playback file number/total files.
 
<Voice Mode>



LINE 1: Displays the Voice mode icon and the file name.
 LINE 2: Displays the volume, repetition and battery icon.
 LINE 3: Displays the Play/Stop status, playback time/total file playback time and playback file number/total files.

 
<FM Mode>



LINE 1: Displays the Mono/Stereo icon, preset channel number and frequency.
 LINE 2: Displays the volume and battery icon.
 LINE 3: Displays the frequency meter.

Before Using

 ■ Installing Batteries

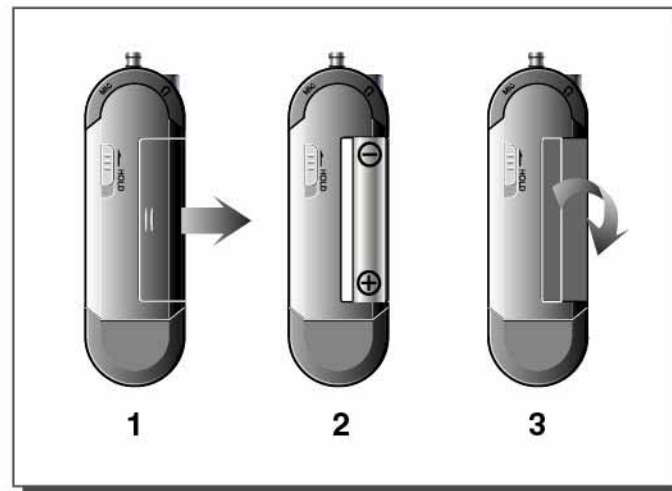

1. Press the battery cover softly and push towards the arrow direction.
2. Insert the battery with correct polarity.
3. Close the battery cover.



Caution

- ▶ Stop playback when replacing the battery.
- ▶ Check the polarities of the battery.

Before Using

Battery status icon



Note

- ▶ If the battery is low, the LCD will display "Low Battery Shut Down...", and the player will be automatically turned off.

Low Battery
Shut Down...

Battery Lifetime

Battery	MP3 Playback (VOL. 15)	Voice Recording	FM Reception (VOL. 15)
AAA Alkaline	10 hours	10 hours	13 hours

Note

- ▶ Battery lifetime can vary depending on the sound volume and battery type.
- ▶ The player will be automatically turned off after 30 seconds, 1, 3 or 5 minutes later according to user selection.
- ▶ You can prevent battery waste due to button manipulation by mistake if you turn the HOLD switch on.

MP3
PLAYER

Before Using

Hold On/Off

You can prevent unintended button manipulation by setting the hold mode on.



Hold on: Push the HOLD [] button to the arrow direction.

Hold off: Push the HOLD [] button to the arrow direction in reverse.

 
Power On/Off

Power on: Press the MENU [] button once shortly. Then, the player will be turned on and remains in a waiting mode.

Power off: Press the MENU [] button longer than 3 seconds to turn off the player.




POWER ON

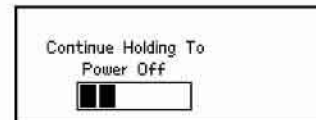

POWER OFF

Connecting an Earphone

 Connect the earphone plug to the player's earphone terminal.

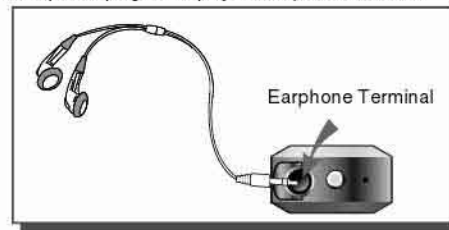

MP3
PLAYER