


## Voice Mode

### Menu Configuration

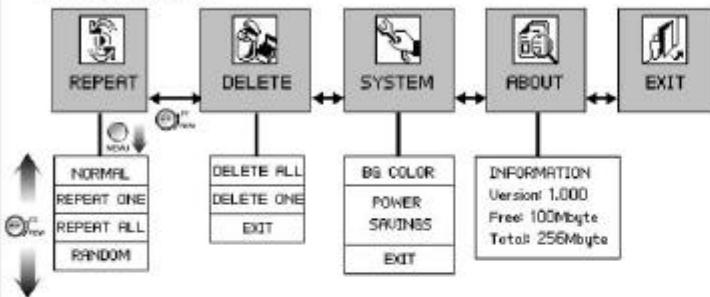

#### ■ REPEAT

Sets the voice file playback method in the voice mode



NORMAL : Plays back every selected file once.

REPT ONE : Plays back the selected file repetitively.

REPT ALL : Plays back all selected files repetitively.

RANDOM : Plays back all selected files at random.

MP3  
PLAYER

23

## Voice Mode

### ■ DELETE

Deletes the saved voice file.



DELETE ALL: Deletes all saved voice files. Folders will remain even if files are removed.

Are you sure  
you want to  
delete all file?  
Yes No Exit

DELETE ONE: Deletes the selected voice file only.

Are you sure you want  
to delete the file  
SONG\_1.mp3  
Yes No Exit

#### Note

▶ Only voice files are deleted in voice mode.

EXIT : Returns to the main menu.

MP3  
PLAYER

24


## ④ Voice Mode

### ■ SYSTEM


Deletes the saved voice file.



BG COLOR: Selects a LCD backlight color

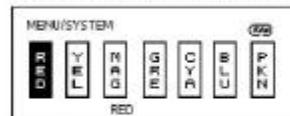

POWER SAVINGS : Sets the time duration when the player is automatically turned off if you don't press any button in stop mode. If you set to DISABLE, the automatic shutdown function will not be activated.

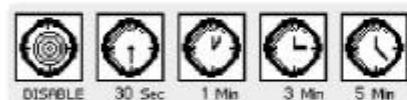

### ■ ABOUT

Displays the firmware version and the memory capacity.

INFORMATION	
Version: 1.000	Current firmware version
Free: 100Mbyte	Available memory capacity
Total: 256Mbyte	Total memory capacity

### ■ EXIT

Saves all settings and returns to the voice mode.

MP3  
PLAYER

## ④ FM Mode

### Basic Functions

#### ■ Scanning FM Frequency

Scans the frequency of the broadcasting to listen.

#### ■ Automatic frequency scanning

Turn the FF/REW [ ] dial and hold it to scan the frequency automatically while you're listening to the radio.

#### ■ Manual frequency scanning

Turn the FF/REW [ ] dial once shortly while listening to the radio.

#### ■ Volume Control

Press the [ ], [ ] button shortly to increase the volume by 1 step, or hold the button to increase the volume continuously.



### Warning


- Do not increase the volume too high during playback using an earphone. Your hearing ability can be impaired.
- Turn the volume down first and increase to the one you want.

#### ■ FM Recording


Records the radio channel that you're currently listening to.

Record: Press the REC/STOP [ ] button once shortly.

Stop: Press the REC/STOP [ ] button once shortly again.

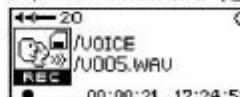

Recording

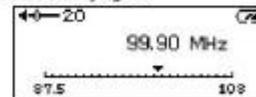

Stop Recording

#### Note


- FM recording files will be saved and identified by the letter "V" ahead of three digit numbers.
- You can play back the saved channel in a voice mode.

## FM Mode

### ■ Automatic Preset Saving (AUTO SCAN)

Scans the FM broadcasting service automatically and saves it in a channel number 1 to 20.

1. Press the MENU [ ( ) ] button shortly while you're listening to the radio to enter into the menu mode. Select the AUTO SCAN, then the AUTO SCAN starts.
2. After completing the AUTO SCAN, it switches to the preset reception mode.

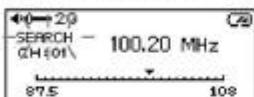


■ Note

- ▶ If you select the Preset Auto Save mode, all the saved station will be cleared.
- ▶ All the available channels may not be detected in the weak FM reception area.

### ■ Manual Preset Saving

Scans the FM broadcasting service manually and saves it in a channel number 1 to 20.

1. Find the frequency of the radio station to save and press the REC/STOP [ ( ) ] button once for a long time.
2. The MEMORY? and the channel number are displayed at the left upper side of the LCD.
3. Select the channel number to save using the FF/REW [ ( ) ] dial and press the REC/STOP [ ( ) ] button once for a long time to save the station in the selected channel.

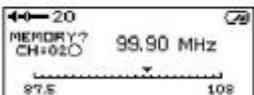

■ Note

- ▶ If no channel has been saved, the EMPTY will be displayed.
- ▶ "●" will be marked for the channel saved number, whereas "○" will be marked for the available channel.

## FM Mode

### ■ Tuning to the Saved Channel

Listens to the broadcasting by the channel saved in the Preset mode (Automatic/ Manual).

1. Switch to the Preset mode by pressing the PLAY/STOP [ ( ) ] button longer once.
2. Turn the FF/REW [ ( ) ] dial once shortly in the Preset mode to move forward/backward in the channels.
3. The EMPTY will be displayed if no channel has been saved.

### ■ Deleting the Saved Channel (Deleting Preset)


Deletes the broadcasting channel saved by AUTO SCAN or manually.

1. Select a channel to delete using the FF/REW [ ( ) ] dial in the Preset mode.
2. Press the REC/STOP [ ( ) ] button once for a long time.
3. The selected channel will be deleted and it will remain as an empty channel.


### ■ Reception Mode Switching

You can switch between the Preset reception mode and the FM reception mode.

Press the PLAY/STOP [ ( ) ] button once for a long time.

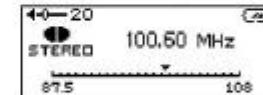

General FM reception mode

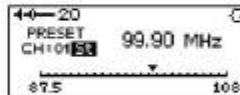

Preset reception mode

### ■ Switching Mono and STEREO Mode


Press the PLAY/STOP [ ( ) ] button once shortly in the Preset reception mode to switch the Mono and Stereo.

■ Note

- ▶ The reception mode will be converted with MONO if you turn the power off.

## FM Mode


### Menu Configuration

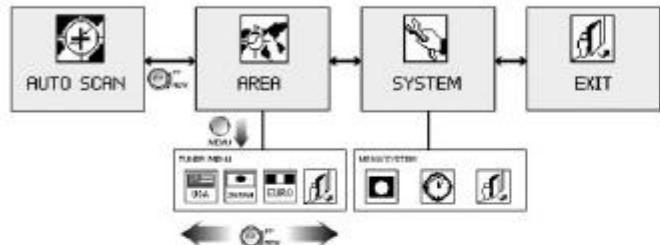

#### AUTO SCAN (Automatic Preset Saving)

Scans the available broadcasting station and saves the found channel in the channel number 1 to 20.

#### AREA (Area Setting)

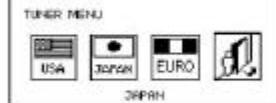

- USA: North America, Korea
- JAPAN
- EURO: Europe, Asia

#### Note

► Available frequency band according to area

Area	Frequency Band	Mobile Frequency Unit
N.America/Korea	88 MHz ~ 108 MHz	100 KHz
Europe/Asia	88 MHz ~ 108 MHz	50 KHz
Japan	76 MHz ~ 108 MHz	76.0 MHz ~ 90.0 MHz : 100 KHz 90.0 MHz ~ 108.1 MHz : 50 KHz


MP3  
PLAYER

## FM Mode

### SYSTEM



BG COLOR: Selects a LCD backlight color.

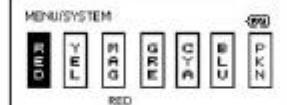

- POWER SAVINGS: Sets the time duration when the player is automatically turned off if you don't press any button in stop mode. If you set to DISABLE, the automatic shutdown function will not be activated.



### EXIT


Saves all settings and returns to the FM mode.

MP3  
PLAYER

## Installing Program

Take the following steps to install the program used for player memory formatting and firmware upgrade.

1. When you insert an installation CD included in the product package into the CD-ROM driver, the InstallShield Wizard will start automatically. Press the [Next] button according to the message displayed on the window to complete program installation.

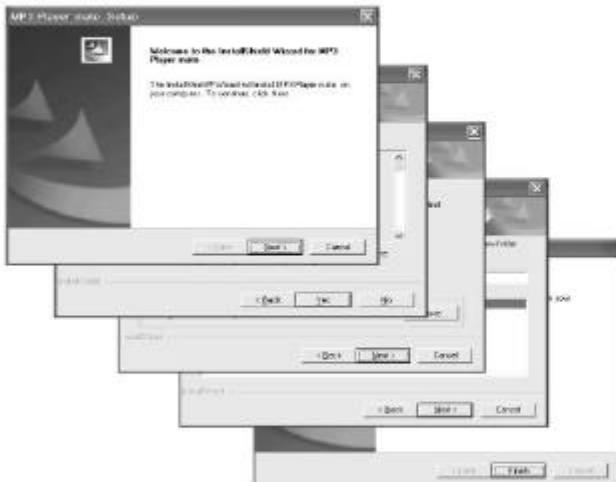

## Installing Program

2. The firmware download and MSCN formatting program will be listed in Start ➤ Programs ➤ MP3 Player mate program group.



### Caution

► Do not connect the player to the PC before installing the program in Windows 98/SE. The program may not work properly.

## ④ Uninstalling Program

You can uninstall the programs used for formatting and firmware upgrade.

1. Select Start ➤ Programs ➤ MP3 Player mate ➤ Uninstall menu.



2. Click the [OK] button when the "Confirm Uninstall" dialog box appears.



MP3  
PLAYER

33

## ④ Uninstalling Program

3. Lastly, click the [Finish] button to remove the program.




MP3  
PLAYER

34

## ④ Connecting to a PC

Connect the player to your PC using the USB cable, as shown in the following figure.

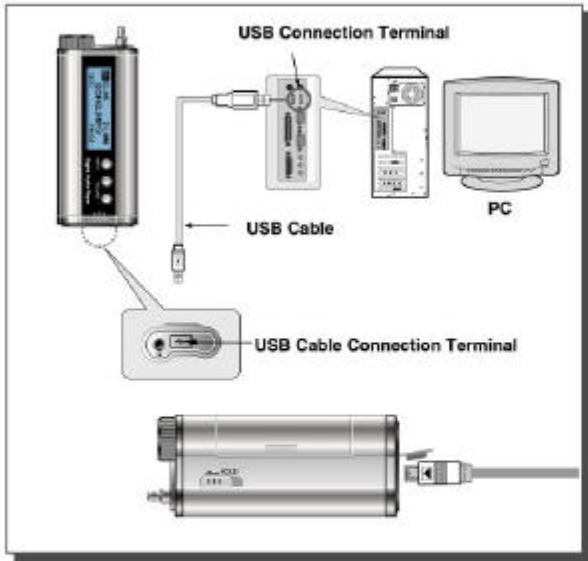


### Warning

- ▶ Connect the USB cable to the PC after checking the shape of the player's USB connection terminal. If you apply excessive power in inserting the cable, the product or your PC can be damaged seriously.




## ④ Downloading Files

1. Turn the player on and connect to your PC using the USB cable.
2. Wait for a while. Then, the [Removable Disk] item appears in the Explorer folder tree. The saved files will be displayed on the right side window.

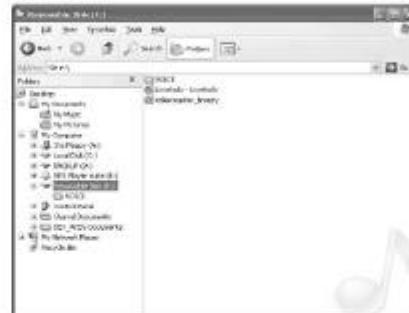


3. Open the folder where you have saved MP3 files and select file(s) to download to the player.

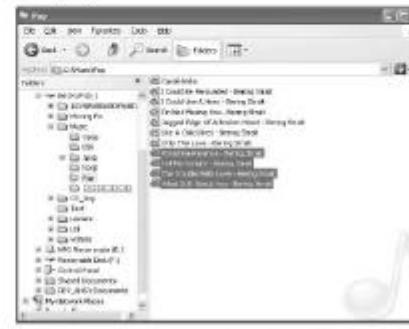


## ④ Downloading Files

4. Click with the right mouse button and select the [Copy] pop up menu to download the selected files to the player.

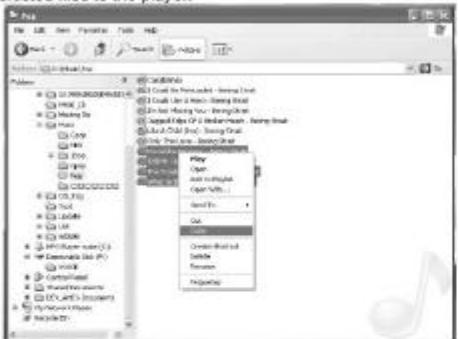

5. Select the [Removable Disk] in the Explorer folder and select the [Paste]. Then, file uploading will be completed.

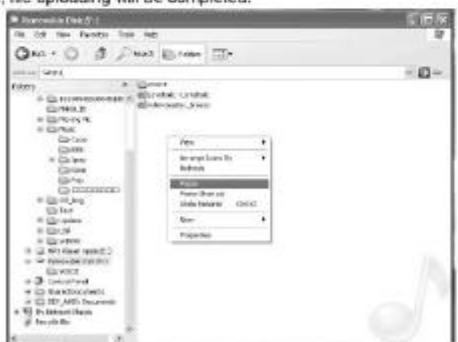


MP3  
PLAYER


37

## ⑤ Uploading Files

1. Select the uploading files from the right side window of the Windows Explorer.

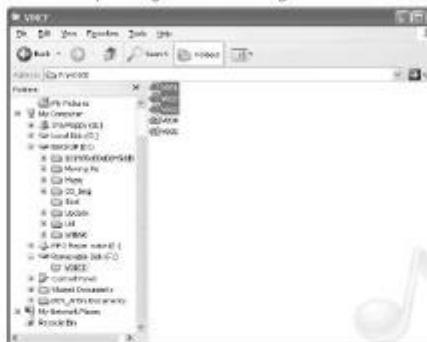

2. Click with the right mouse button and select the [Copy] popup menu.

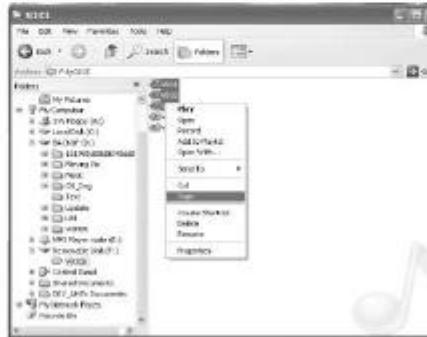


MP3  
PLAYER

38

## Uploading Files

3. Select the target folder in your PC and select the [Paste] popup menu.  
Then, file uploading will be completed.

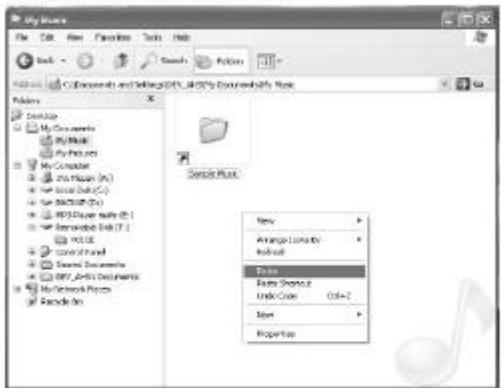

### Note


- ▶ You cannot play back other Wave files having a different file name format other than "V000.wav". The file name should start with "V" and three digit numbers should follow.
- ▶ You may select the file(s) and drag and drop it on the target location to upload or download it.
- ▶ You can create folders in your PC and save them in the player.

MP3  
PLAYER

39

## Removing Files

1. Click the [Removable Disk] folder item and then, select the file(s) to delete from the right side window.

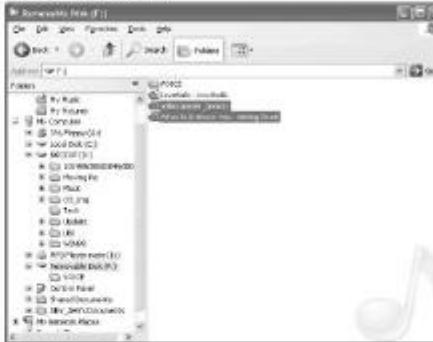

2. Click with the right mouse button and select the [Delete] popup menu.



MP3  
PLAYER

40

## Removing Files

3. Click the [Yes] button to remove the file(s).



**Note**  
► You can also delete file(s) by selecting it and press the [Delete] button.

MP3  
PLAYER

41

## Formatting a Memory

1. Connect the player to your PC using an USB cable.
2. Select Start ➡ Programs ➡ MP3 Player mate ➡ Format menu.



3. When the "Format" window appears, press the [Start] button to start memory formatting.



MP3  
PLAYER

42

## Formatting a Memory

4. Press the [Close] button when memory formatting is completed.



**Note**

► When the player is not working normally (button is disable), format the memory as described above. Then, the player will work normally but all saved files will be removed.



### Warning

► Make sure to use the Formatting program.  
► Do not remove the USB cable while formatting the memory.

**MP3**  
PLAYER

43

## Troubleshooting

Please check the following points if the player fails to run properly.

Symptom	Reasons	Corrective Actions
Nothing appears on the LCD	Is the battery exhausted? Is the battery polarity is correct?	Replace with new one. Check the polarity. (+/-)
Unable to record.	Is the HOLD button on? Is the memory is enough?	Release the hold mode. Remove the unnecessary files.
Unable to play back	Is a battery exhausted?	Replace with new one.
No sound heard from the earphone	Is the HOLD button on? Is there anything saved in the player?	Release the hold mode. Check the file number.
Unable to upload/download a file	Is a battery exhausted? Is the volume set to 0? Is an earphone plugged properly?	Replace with new one. Set the volume. Plug in the earphone completely.
	Is the driver installed properly? Is the USB cable plugged properly?	Install the driver. Plug in the USB cable completely.

**MP3**  
PLAYER

44

## Product Specifications

Item	Specification				
Model Name	MP-500D	MP-500E	MP-500F		
Memory Capacity	128 MB	256 MB	512 MB		
Max. Recording Time	524 Min	1067 Min	2134 Min		
Battery Lifetime	MP3 Playback: 11.5 hours, Voice Recording: 14 hours, FM Reception: 15 hours				
Frequency Range	500 Hz ~ 3500 Hz				
Data Rate	8 Kbps ~320 Kbps, VBR				
Supported	MP3	MPEG 1, 2, 2.5, WMA			
File Format	Voice	ADPCM (IMA)			
Earphone	16 Ohm				
USB Cable	PC Interface USB 1.1				
LCD	Graphic (128x48) 4 Line LCD				
Supported Language	24 languages including Korean, English, Japanese and Chinese				
Practical Max. Output	8 mW				
FM Frequency Range	76.5 Mhz~108 Mhz				
Dimensions	34X82.5X14.85 mm (WXHxD)				
Weight	30g (excluding battery)				
Storage Media	Imbedded Flash Memory				
Power Supply	1.5V AAA Alkaline 1 EA				
Operational Temperature	0 ° ~ 40 °				
Accessories	User's Manual, Earphone, AAA Alkaline Battery 1EA USB Cable, Installation CD, Necklace String				

\*Product specifications and appearance are subject to change for product improvement without a prior notice.

## Note

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note :** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.