



USER'S MANUAL
WVR-165



Digital Recorder

Safety Instructions

- These instructions describe the precautions and about how to deal with the product to prevent personal injury or property loss. Please read the following safety precautions carefully.
- Keep this instruction in the place which you can find easily whenever you need.

Warning and Caution



Warning

♪ This symbol indicates that personal injury may occur or the product may be damaged when you fail to follow the given instruction.



Caution

♪ This symbol indicates that property loss may occur or the product may malfunction when you fail to follow the given instruction.

Voice Recorder

Contents

■ Safety Instructions	1
■ Precautions	3-5
■ Product Features	6
■ Names of Parts	7
■ Before Using	
- Inserting Battery	8
- Powering On/Off	10
■ Recording	11
■ Playback	12
■ Moving to/Scanning/Selecting File (FF/REW)	13
■ Deleting Recorded Sound	14
■ Deleting File	15-16
■ Recording Functions	
- Recording Monitoring	17
- Index Added Recording	17
■ Playback Functions	
- Volume Control	18
- Additional Recording	18
- RESUME	19
- Scan and Playback	19
■ Other Functions	
- Selecting Folder	20
- Selecting Recording Mode	20
- Voice Operated Recording System (VOS)	21
- Repair	21
■ PC Interface	22
■ Connecting to External Device	23-24
■ Telephone Recording	25
■ Troubleshooting	26
■ Button Menus	27
■ Specifications	28
■ NOTE	29

Voice Recorder



Percautions

i Precautions for use of the product

Do not install the product in a place exposed to these conditions:



High temperature (above 40 °C)
Poorly ventilated or closed
(car inside, especially summer)



Much moisture (humidity, above 75%)
Dusty place



Make sure not to place cash cards
or pass cards, susceptible to magnetic
influences, near to the speaker of the
product.



Do not clean using chemicals
such as alcohol, benzene, or sinner, etc.



Place the battery in a location that
your children or infants cannot access to.



Do not drop down any materials on the
product or impact against the product.



Do not impact against the LCD of the product.

- Does not have any responsibility for property loss due to your use of the product even if you use the product correctly. Also does not have any responsibility for demanding any compensation from others.
- Does not have any responsibility for memory data corruptions and resulted property loss due to product malfunction or fault, repair, and/or other reasons.

Voice Recorder



Percautions

 
i Precautions for use of the battery



Make sure to use the specified standard
battery. (; AAA ; Alkaline battery)



Do not impose heat on it. Do not
disassemble or short-circuit. Otherwise,
it may cause damages or malfunctions
to the product.



Do not mix a new battery with the old one.



Make sure that the polarities are correct
when inserting a battery.



Make sure to remove the battery when you
do not use the product for a long time.



Place the battery in a location that your
children or infants cannot access to.



Warning

When your skin or clothes is stained with electrolyte.
Wash them with clean water immediately.
When your skin has been hurt, make sure to consult
your doctor.

When electrolyte enters your eye;
Do not rub your eye. Wash it with clean water
immediately and make sure to consult your doctor.



Percautions

i Safety Precautions



If the product smokes or any modification occurs due to heating, remove the battery immediately.



Do not use the product in an airplane or a place where electronic devices should not be used.



Do not use an earphone or operate the product during driving or walking.



Do not listen to with a loud volume. Otherwise it may damage your hearing. Control the volume again.



Do not disassemble the product arbitrarily.

Voice Recorder

Product Features

i Compact Size

Handy to carry due to compact size and light-weight.

i Adapting flash memory

Recorded sound is preserved even if the power is cut off.

i Automated Power Off

Automated power break reduces battery consumption.

i Recording Mode

You can record in HQ or LP mode.

i Long-time Recording

You can record for a long period of time in LP mode.

i Repair Function

Recorded sound can be recovered even if the power is cut off during recording.

i VOS(Voice Operated Recording System)

Recording is proceeded only when voice is emitted to reduce the memory usage.

i Search and Playback

The first 5 seconds of each recorded file is played back one by one.

i Connecting to External Device

You can record in connection with an external device.

i Telephone Recording

You can record telephone conversations.

i Easy-to-Use Folder/File Management

Usage	Folder	Numbers of saved files
Voice	A, B, C	100 per folder
Saving data	D	Within available memory


i Portable External Storage Device

D folder can be used for a USB storage drive.

For information about how to use, refer to the user manual of Power Voice II.

Voice Recorder

Names of Part

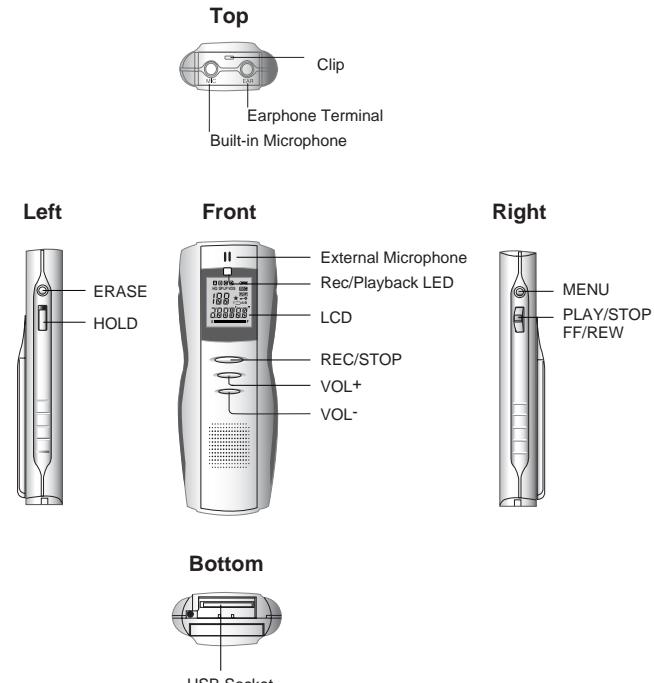


Voice Recorder

7

Before Using

Inserting Battery

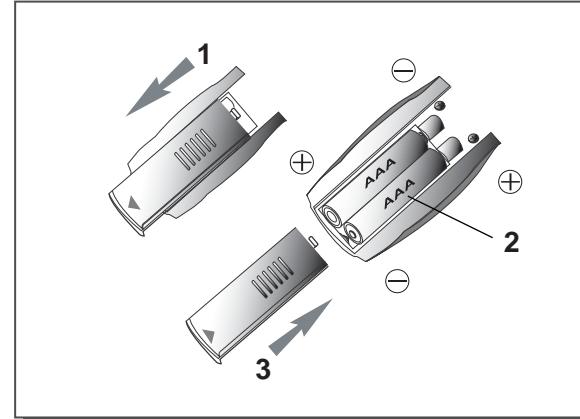

1. Push the battery cover slightly and slide it in the arrow direction.
2. Insert two "AAA" alkaline batteries. Make sure that the polarities (+, -) are correct.
3. Close the battery cover.



Warning


- Make sure to replace the batteries in stop mode.
- Make sure that the polarities (+, -) are correct.
- Do not mix a new battery with old one.

Voice Recorder

8

Before Using

Battery Usage Icon

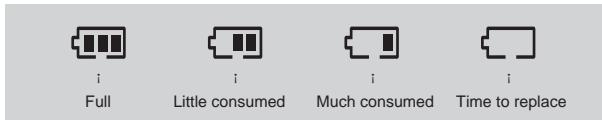

◊ Note ◊—
"LO Batt" is displayed when the voltage is low due to consumption.

Battery Lifetime ("AAA" Alkaline)

Battery	Recording	Playback
"AAA" Alkaline	19 hours	11 hours


◊ Note ◊—
◊ Battery lifetime is subject to battery type and the volume you use.
◊ Rechargeable batteries drop down the playback time remarkably and the product may not operate normally.
◊ The power is turned off automatically for efficient use of the battery if you do not use the product for more than 1 minute.
◊ When you do not use the product, set the HOLD switch to ON to prevent unwanted consumption of the battery due to misuse of the buttons.

Voice Recorder


Before using

Powering On/Off

1. Set the HOLD button to OFF (HOLD OFF).
2. Press the PLAY/STOP button shortly once to turn the power on.
3. The power is turned off if there is no operation for 1 minute.

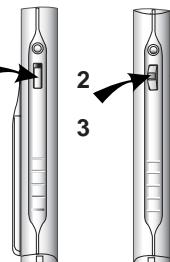

 ◊ Note ◊—
◊ In HOLD ON mode, "HOLD" is displayed and the power is not turned on.
◊ The power is also turned on pressing the REC/STOP button shortly.




Voice Recorder

Recording

Records voice or sound.

1. Set the HOLD button to OFF (HOLD OFF).
2. Turn the power on.
3. Press the REC/STOP button shortly once to start recording.
4. Press the REC/STOP button shortly again to stop recording.

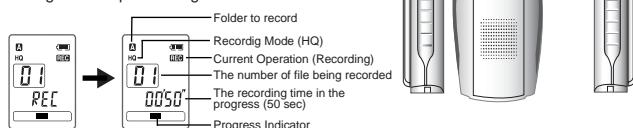

◆ Note ◆

◆ If the recording source is shorter than 2 seconds, it is not recorded.

◆ Volume control is disabled during recording.

◆ If the number of the files is more than 100 for a folder, "FULL" is displayed and recording is disabled. Move to other folder and try to record again.

 
<When the number of files is more than 100>



<When you fail to record due to recording time over>



◆ When the recording time is over, "FULL" is displayed and recording is disabled. (See the specifications.)



Caution



◆ Try a test recording first to prevent recording failure.

Voice Recorder

Playback

You can hear the recorded sound using the built-in speaker or earphone.

1. Set the HOLD button to OFF (HOLD OFF).
2. Select the number of the folder or the file you wish to playback (See page 14 and 23).
3. Control the volume using the VOLUME button.
4. Press the PLAY/STOP button shortly once to playback the selected file.
5. Press the PLAY/STOP button shortly again to stop playback.

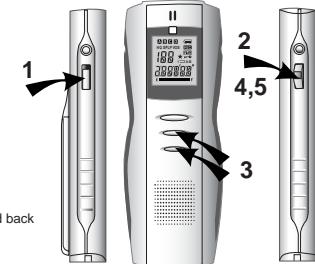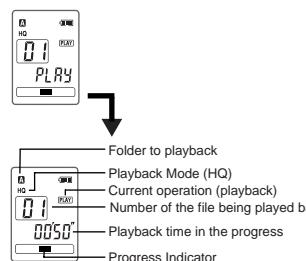

Warning


◆ Do not listen to recorded files with a loud volume. Otherwise it may damage your hearing.
◆ Start from a low volume, and then set the volume to an appropriate level.

Voice Recorder

Moving to/Scanning/Selecting File (FF/REW)

You can move to, search, or select a file using the FF/REW button.

- Moving to the previous or next file:
Press the FF/REW button shortly during playback.
- Scanning file: Press the FF/REW button longer during playback.
During the first 10 seconds: Moves to the previous or next file by second.
After 10 seconds: Moves to the previous or next file by 10 seconds.

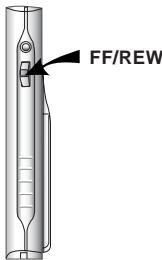

- When you want to listen to the recorded sound from the 30-minute position on the fourth of 5 recorded files:
 - Move to the fourth file by pressing the FF/REW button shortly in the stop mode.
 - Press the PLAY button.
 - Press the FF/REW button longer to move fast to a position. Fast forward/rewind works while you are holding it down. When moved to the 30-minute position, stop holding it down and playback starts from the position you stop.

Voice Recorder

13

Deleting Recorded Sound

Deletes the sound recorded in the recorder.

Deleting one file

Delete the current file displayed on the LCD.
The file numbers are decreased by one after deleting file.

When deleting the number 3 file:



- Select the file to delete in stop mode.
- Press the ERASE button once for more than 1 second.
The "ERASE" message blinks and the first and end 5 seconds of the recorded file are played back.



<Deleting the number 1 file>

- Press the ERASE button shortly again to delete file.

Note

If you do not press any button for 10 minutes after the "ERASE" message is displayed on the LCD, the ERASE function is released automatically.



Caution

The deleted recording file cannot be recovered.
Make sure to decide properly whether to delete.

Voice Recorder

14

Deleting File


Deleting all files in a folder.

Deletes all the recorded files saved in a folder.

1. Select the folder to delete (See page 23).
2. Press the ERASE and REC/STOP buttons at the same time in stop mode for more than 3 seconds. The "AL ERASE" message blinks on the LCD.



3. Press the ERASE button shortly again to delete all files in the folder.

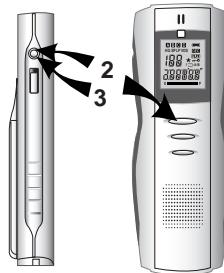

Caution

◊ The deleted recording file cannot be recovered.
Make sure to decide properly whether to delete.

Voice Recorder

Deleting File


Formatting

Deletes all recorded files in the recorder.

1. Press the ERASE and REC/STOP buttons at the same time in stop mode for more than 7 seconds. The "AL CLEAR" message blinks on the LCD.



2. Press the ERASE button shortly again to delete all recorded files saved in the product.

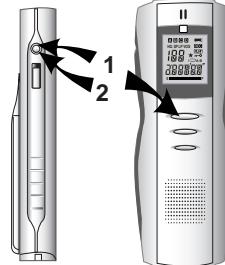

◊ Note ◊

◊ If the product doesn't operate normally (for example, the buttons do not work.), format the product as directed above and the product will operate normally.



Caution

 
◊ The deleted recording file cannot be recovered.
Make sure to decide properly whether to delete.

Voice Recorder

Recording Functions

Recording Monitoring

Records the sound with hearing the recording sound using an earphone.



Connect an earphone to the earphone terminal of the product.

Index Added Recording

Adds the indexing number (file number) of the file being recorded for easier identification.

Press the FF button during recording, the file number of the file being recorded is increased and saved automatically.

When you press the FF button and record for 30 minutes after recording for 30 minutes starting from the number 1 file, the sound is recorded in the number 1 file for 30 minutes and in the number 2 file for 30 minutes.

Voice Recorder


Playback Functions

Volume Control

Controls the volume using the VOLUME button. The range is between 0 and 20.

Additional Recording

Records additional sound at the end of the file being played back.

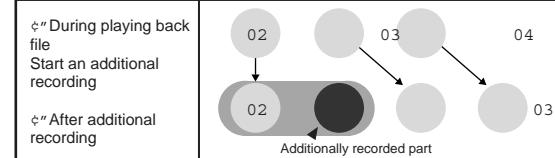

During playing back file
Start an additional recording

After additional recording

1. Press the REC/STOP button longer once during playback.
2. The "Add-R" message is displayed and the additional recording starts.

3. To stop additional recording, press the REC/STOP button shortly once.

When you want to add an additional recording to the number 2 file:
1. Press the FF/REW button to search the file # 2.
2. Press the PLAY button to playback the file.
3. Press the REC/STOP button longer more than 1 second during playback.
4. The "ADD-R" message is displayed and the sound is recorded and added to the end of the number 2 file.
5. Press the REC/STOP button to stop the additional recording.



Voice Recorder

Playback Functions

RESUME

Playbacks from the position you stopped when you stopped playback by pressing the PLAY/STOP button during playback and then press the PLAY/STOP button again.

◊ Note ◊—

◊ If you press other button than the PLAY/STOP button after stopping playback, the file is played back from the first position.

Scan and Playback

The first 5 seconds of each files are played back one by one.

1. Press the PLAY/STOP button longer more than 1 second in the stop mode or during playback.
2. The "SCAN" message is displayed on the LCD screen and the first 5 seconds of the recorded files are played back in the order.
3. Press the PLAY/STOP button shortly once to stop scan and play.



Voice Recorder

Other Functions

>Selecting Folder

Specifies the position the recording is saved to.



1. Press the MENU button shortly once in the stop mode.
2. Select a folder using the FF/REW button.

The folder changes in the order of A->B->C by each press.

>Selecting Recording Mode

You can record in appropriate mode you want according to your situation.

1. Press the MENU shortly twice in the stop mode.
2. Select the HQ or LP using the FF/REW button.



HQ mode : High quality recording mode
LP mode : Long time recording mode

◊ Note ◊—

◊ The HQ mode has better recording quality than LP mode.

◊ Recording time means the available maximum recording time.

If you have recorded to the maximum recording time on the number 1 file in the HQ mode, no more can be recorded and you must delete the recorded files in order to record again.

Voice Recorder

Other Functions

Voice Operated Recording System (VOS)

To reduce the memory usage, recording is proceeded only when voice is emitted.



1. Press the MENU button shortly three times in the stop mode.
2. Select the ON or OFF using the FF/REW button.

◊ Note ◊—

◊" The battery consumption in the VOS ON mode is the same with other mode.

Repair Function

If the battery ran out or dropped off from your product and the power was cut off, the "REPAIR" message is displayed on the LCD screen and the previous content you were recording is recovered when you supply the power again.




◊ Note ◊—

◊" The longer you have recorded previously, the longer the REPAIR time is taken. The "REPAIR" message is displayed on the LCD screen while repair is proceeding.

Voice Recorder

PC Interface

You can connect the recorder to your PC with a USB cable and transmit data between them. For more information on how to transmit data, refer to the user manual of Power Voice II.

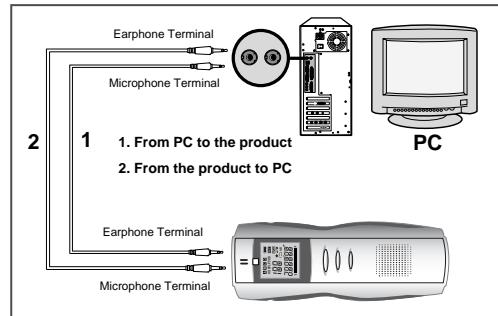

◊ Note ◊—

◊" When connecting to the PC with a USB cable, the "PC LINK" message is displayed on the LCD screen.




◊" USB Interface function is available only when the power of the Voice recorder is enough.

Voice Recorder

Connecting to External Device

Recording Using External Microphone


You can also record by connecting an external microphone you purchased separately to the microphone terminal of your recorder. If you fix an external microphone onto your collar, you can act freely and you can record more clear sound when you come near to the source of sound.

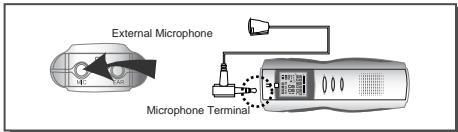

When recording the sound of an external device to your recorder

You can record the sound of an external sound device to your recorder.

1. Connect the output terminal (earphone terminal) of an external device and the microphone terminal of the recorder with an audio cable you purchased separately.
2. Control the volume of the external device properly.
If the volume of the device is loud, the sound may be distorted when you playback the recorded sound.
3. Press the playback button of the external device and then press the RECORD button of your voice recorder.

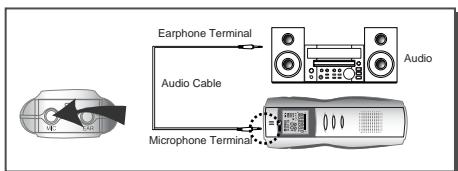

◊ Note ◊

◊" The sound is recorded in mono mode. You can check the recording status using an earphone.


Voice Recorder

Connecting to External Device

Recording the sound recorded in your recorder onto an external device

You can transmit the sound recorded in your recorder onto an external device.

Connect the earphone terminal of your voice recorder and the input terminal (microphone terminal) of an external device with an audio cable you purchased separately. Then, press the PLAY/STOP button of your voice recorder and press the RECORD button of the external device.

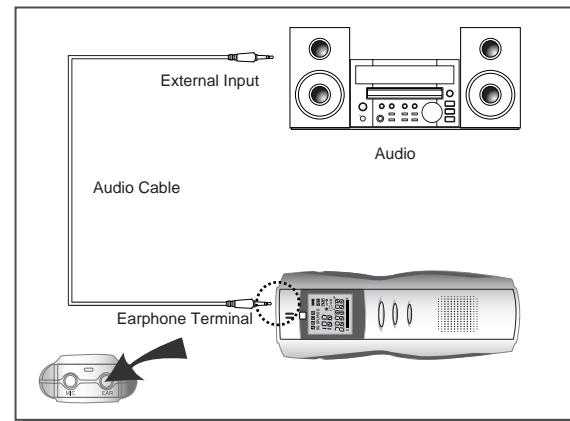

◊ Note ◊


◊" Please try a test recording before recording.

◊" Please control the recording volume with the volume control of your voice recorder.

Voice Recorder

Telephone Recording

◆ Connect an adaptor you purchased separately for telephone recording and the cable as shown in the following figure. Press the REC/STOP button to record telephone conversations.

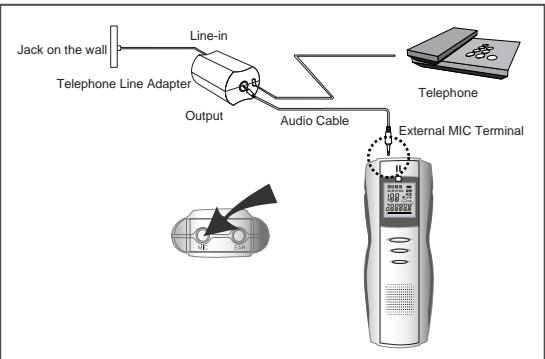

◆ Note ◆

◆ If you record telephone conversations in VOS ON mode, the voice may stop temporarily. We recommend to record in VOS OFF mode.

◆ If several telephones are connected to a telephone line, the voice of the opposite person may be recorded in low volume. We recommend to connect a single telephone to a line.



Caution

◆ The telephones which does not meet the standard of modular jack of the digital telephone available in the digital communication are not supported.

Voice Recorder


Troubleshooting

◆ When you encounter any problem, check the following items.

Symptom	Cause	Action
Nothing is displayed on the LCD screen.	Check whether the battery runs out. Check whether the polarities are correct.	Replace the battery with a new one. Make sure that the polarities are correct.
Cannot not record.	Check whether the HOLD button is set to ON. Check whether the memory is full.	Set the HOLD button to OFF. Delete unnecessary recorded sound. (See page 15 to 17)
	Check whether the battery runs out.	Replace the battery with a new one.
Cannot playback.	Check whether the HOLD button is set to ON. Check whether your recorder has the sound recorded.	Set the HOLD button to OFF. Verify the number of the sound recorded.
	Check whether the battery runs out.	Replace the battery with a new one.
Cannot hear sound from the speaker.	Check the volume is set to 0. Check the earphone is connected.	Control the volume. Disconnect the earphone.
	Check the volume is set to 0. Check whether the earphone is connected firmly and correctly.	Control the volume. Connect the earphone firmly and correctly.
"ERROR" is displayed on the LCD screen and all buttons does not operate.	Check whether the USB cable is removed during formatting with connected to a PC.	Format your recorder. (See page 17)

Voice Recorder

Button Menus

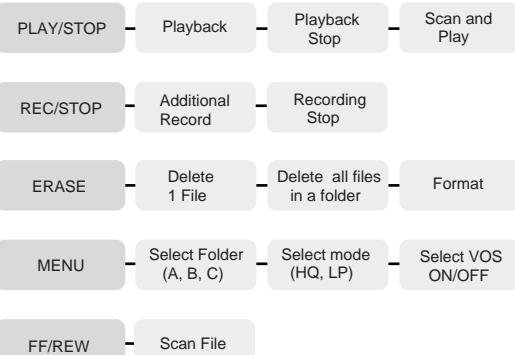

Voice Recorder

27

Specifications

Item	Specification
Model	WVR-165
Maximum Recording Time (HQ)	154 min
Maximum Recording Time (LP)	504 min
Memory	16 MB
Number of Folders & Files	Voice(A,B,C) 3 Folders X 100 Files Data(D) 1 Folder
Frequency	HQ Mode: 50-5100 Hz, LP Mode: 500-3400 Hz
Actual Maximum Output	150mW
Earphone	3.5 Mono Jack
External Microphone	3.5 Mono Jack
USB Cable	PC Interface USB 1.1
Speaker	Dynamic 28mm, 8 Ohm
Dimensions	36 * 108 * 17.9 mm(W * H * D)
Weight	About 43g(Except battery)
Storage Media	Imbedded Flash Memory
Power	DC 3V, "AAA" Alkaline battery X 2
Battery Lifetime	Recording: 19 hours Playback: 11 hours
Operating Temperature	0 ; ~ 40 ;
Accessories	User manual, Earphone, Hand Strap, USB cable, Installation CD

i The specifications and appearance of the product may change without a prior notice in order to improve the quality.

Voice Recorder

28

 **Note**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE:THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Voice Recorder