



SHARPER IMAGE

Rechargeable 2.4GHz DX-2 STUNT DRONE

12+




CHOKING HAZARD
Small parts. Not suitable for children under 3 years of age.


SHARPER IMAGE

Rechargeable 2.4GHz DX-2 STUNT DRONE


CONTENTS




DX-2 Stunt Drone

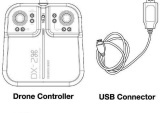

Drone Controller USB Connector

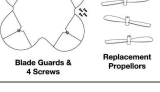

Blade Guards & 4 Screws Replacement Propellers



REMOTE BATTERY INFORMATION

- Slide open battery compartment
- Install 6 "AA" batteries as shown in diagram shown above
- Replace and close battery compartment

LITHIUM-POLYMER BATTERY WARNING

- There is a risk of fire and personal injury if Li-Po battery is punctured, damaged or misused.
- Never expose battery to extreme temperatures or moisture.
- Do not subject battery to strong impacts.
- Always keep battery away from flammable materials.
- Only use manufacturer specified batteries, chargers, and/or adapters, if applicable, specified by the manufacturer.
- Battery is not rechargeable.
- Let battery cool to room temperature before charging.
- While charging, never leave battery unattended.
- Recycle or dispose of battery according to federal, state and local laws.

KEEP THIS INSTRUCTION MANUAL FOR REFERENCE

BATTERY WARNING

Do not short circuit, heat, crush, pierce, or expose to fire. Do not dispose of in fire. Do not throw away. Do not use if damaged or defective. Do not use if swollen, leaking, or distorted. Do not use if the battery is not the correct type or size. Do not use if the battery is not the correct brand or type. Do not use if the battery is not the correct model or version.

Page 2

SHARPER IMAGE

Rechargeable 2.4GHz DX-2 STUNT DRONE

OPERATING DRONE

Step 1 – Pre Flight Checklist

- Read all warnings and instructions
- Install remote batteries, page 2
- Make sure that drone and remote are powered off.
- Install Blade Guards (page 6).
- Charge batteries, page 3.

Step 2 – Choosing a location

- Drone is designed to be flown indoors only.
- Always make sure you have enough space to fly drone.
- Always follow warnings, page 1.

Step 3 – Starting Drone

- Making sure your remote is off, slide drone switch to ON. Drone lights will begin to flicker.
- Choose a flat even surface and follow the diagram.
- Turn remote on. Bring the Throttle all the way up then bring it all the way down. Remote will beep and drone lights will flicker rapidly then turn on permanently once paired.
- Drone is ready for flight.

Step 4 – Lift Off

- Slowly and carefully bring the throttle up. Propellers will begin to spin and drone will begin to elevate. You can compensate for some of the drone drifting by using the Multi Directional Button or by following step 5. You may need to practice this step several times before successfully getting drone into the air.


Step 5 – Drone Begins to Drift

- Follow this step if your drone begins to drift while take off or during flight.
- Drone drifts backwards: Slide the Forward/Backwards Adjustment up.
- Drone drifts forwards: Slide the Forward/Backwards Adjustment down.
- Drone drifts left: Slide the Side to Side Adjustment to the right.
- Drone drifts right: Slide the Side to Side Adjustment to the left.
- Drone spins clockwise (viewing drone from top): Slide the Spin Adjustment to the left.
- Drone spins counter-clockwise (viewing drone from top): Slide the Spin Adjustment to the right.

Step 6 – Operating Drone in Flight

The drone range is approximately 100 feet.

- Read and be aware of all warnings found on page 1.
- Maintain your desired elevation by using the Throttle.
- Use the Throttle joystick in a circle motion to spin the drone.
- Use the Multi Directional Joystick to move forwards, backwards, and side to side.
- Review step 5 if your drone begins to drift.

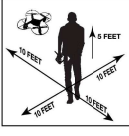

Always turn off remote prior to retrieving or picking up drone. This will help you avoid accidentally activating propellers.

Page 5

SHARPER IMAGE

Rechargeable 2.4GHz DX-2 STUNT DRONE

INTRODUCTION

Congratulations on your purchase of the Sharper Image Rechargeable 2.4 GHz DX-2 Stunt Drone. Get ready to soar to new heights. Master the art of drone flying and stunting with remote control maneuverability. This lightweight stunt drone will provide hours of fun.

SPECIFICATIONS

- Drone Battery: 350 mAh Li-Po
- Remote Controller Battery: 6 x 1.5V AA
- Charging Time: Approximately 60 minutes
- Maximum Recommended Altitude: 115 ft.

TABLE OF CONTENTS

General Warnings Page 1

Contents and Remote Battery Installation Page 2

Charging LiPo and Replacing Propellers Page 3

Remote Overview Page 4

Operating Drone Page 5

Modes and Installing Blade Guards Page 6

Tips and FCC Warning Page 7

SHARPER IMAGE

Rechargeable 2.4GHz DX-2 STUNT DRONE


CHARGING BATTERY

Note: The Battery Charger will light up when it is charging the battery and turn off when the battery is fully charged. Charge time is approximately 60 minutes.

Turn off the drone before charging.

Connect the Battery Charger to the Miso USB port on the Drone.


Connect USB Connector to power source.

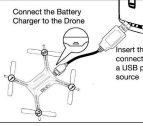

REPLACING PROPELLERS

- Follow diagram to the right.
- Make sure you installed the correct blade. Each blade has a number written on it. Match the blades with the corresponding number on the drone.
- Carefully unscrew the propellers and replace with the new blade.

NOTE: Blade 1 turns counter clockwise and Blade 2 turns clockwise

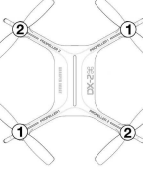

Page 3

SHARPER IMAGE

Rechargeable 2.4GHz DX-2 STUNT DRONE

MODES

Auto Landing Button

- Make sure you have achieved level, balanced flight, where the drone is neither climbing nor descending. This mode allows you to safely and slowly land your drone without having to control the speed. It is done for you automatically.
- The auto landing height is 25-30 ft.
- Press the "L" button to trigger auto land. Remote will beep continuously until drone lands.
- Do NOT touch the left control stick. This will interrupt the landing sequence.
- Press the "L" button to trigger auto land. Remote will beep continuously until drone reaches the ground.
- Press the "L" button again to exit auto landing mode.

NOTE: Please make sure the throttle joystick is on down position before exit auto landing mode

Auto Orientation Button

- Auto Orientation default setting is Off. To enter this mode press Auto Orientation "O" button. Remote will beep twice.
- After drone success paired, the 2 white LED lights toward orientation will be the original forward orientation, when drone is in auto orientation mode, whatever the drone spin, the forward orientation will be previous original forward orientation.
- Remote will beep every 6s to indicate the drone is in Auto Orientation mode.
- To exit mode, press the "L" button. Remote will sound 1 long beep indicating that it has exited Auto Orientation mode.


Stunt Button

Once you are comfortable flying the drone, use the Stunt Button to perform acrobatic stunts.

- Hover the drone to at least above 10 feet.
- Press the Stunt Button. You will hear beeping coming from the remote.
- Move the Multi Directional Button to the desired direction that you would like the drone to flip.
- Once you are comfortable with Stunt Mode, you can create multiple flips. Press the Stunt Button and then move the Multi Directional Button to the desired direction you would like the drone to flip, continue to hold the joystick in the desired direction of the stunt. The drone will perform the stunt once you held the joystick, for a maximum of 3 stunts in a row.

INSTALLING BLADE GUARDS

- Click blade guards in place per diagrams below.
- Use provided screws and a small screwdriver to secure the blade guards before use.



Page 6

SHARPER IMAGE

Rechargeable 2.4GHz DX-2 STUNT DRONE

READ ALL WARNINGS AND PRECAUTIONS BEFORE USE

SAFETY WARNINGS:


- Not recommended for children under 12 years of age. As with all electrical products, precaution should be observed during handling and use to reduce the risk of electrical shock.
- Adult supervision is required at all times.
- Before each use, an adult should review the product and battery to determine that no damage or hazards exist.
- DO NOT TOUCH SPINNING PROPELLERS**
- Do not allow anything to intentionally make contact in any way with spinning propellers
 - Prevent contact with spinning blades by turning off remote prior to handling drone
- Use caution and pay attention to your surroundings while operating drone**
- Do not fly drone into animals, people, or inanimate objects
- Keep drone away from power lines, buildings, trees, public areas, and any other potentially hazardous areas.
- Do not operate in rain, heavy wind, and/or any type of severe weather
- Do not land drone on wet surfaces
- Never touch or allow others to touch drone while it is flying
- Always turn drone off when it is not in use
- Always fly drone in large open areas
- Never fly drone above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.

PLEASE RECYCLE OR DISPOSE OF ELECTRONICS PROPERLY RECYCLING INFORMATION IS AVAILABLE AT RECUTOMERCABLE.COM

Page 1

SHARPER IMAGE

Rechargeable 2.4GHz DX-2 STUNT DRONE

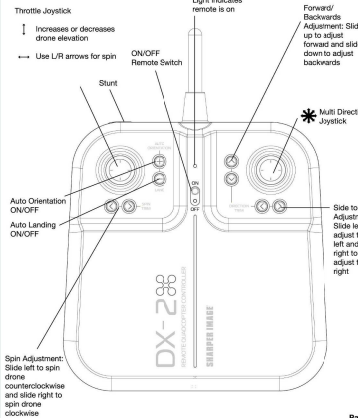

Throttle Joystick
Increases or decreases drone elevation

Use L/R arrows for spin

Light Indicates remote is on

Stunt

Auto Orientation ON/OFF

Auto Landing ON/OFF

Spin Adjustment: Slide left to spin drone counterclockwise and slide right to spin drone clockwise

Forward/Backwards Adjustment: Slide up to adjust forward and slide down to adjust backwards

Multi Direction Joystick

Side to Side Adjustment: Slide left to adjust to the left and slide right to adjust to the right

Page 4

SHARPER IMAGE

Rechargeable 2.4GHz DX-2 STUNT DRONE

FPV

- Do not crash drone into sand or dirt. Drone gears may become clogged
- After first landing try to practice flying off and landing
- Stay normal feet from walls and buildings
- Always Press Throttle all the way down after crashing or when something gets stuck in propeller
- Never fly drone above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others
- The drone shall never be modified or used for anything except its intended purpose.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TROUBLESHOOTING

- When remote light is turned on, the remote light does not illuminate.
- Check that batteries in the remote are installed correctly.
- Replace with new batteries.

When the remote is switched on, the remote LED is flashing and remote is beeping:

- Remote batteries are low, replace them with new batteries.

When the remote is properly paired, but the drone will not lift off:

- Drone Li-Po needs charging. Use charging cable to connect the drone to power source.

After turning the drone, the drone light is very unstable and cannot fly properly:

- One or more blades are most likely damaged.
- Replace with the proper number replacement blade and the flying again.

After impact, the drone is unstable:

- Put the left remote control lever to the left bottom and put the right remote control lever to the right bottom at the same time which connected to the drone (up/down).
- If above does not resolve the issue, reboot the drone and controller and pair again.
- Check Flight Remote Controller must be closed to Drone, not exceed 4 meters.

Note: If there are 3 sets of Drone within 4 meters for Pairing, you must pair one successfully before pairing the second set.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause additional operation.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to a typical residential environment. This equipment generates, uses and can radiate radio frequency energy and, if not properly shielded, may cause interference to other electronic equipment.

To help prevent interference to other electronic equipment, please observe the following precautions:

- Do not use this equipment near or on a person's head.
- Do not use this equipment near or on a person's chest.
- Do not use this equipment near or on a person's face.
- Do not use this equipment near or on a person's neck.
- Do not use this equipment near or on a person's arm.
- Do not use this equipment near or on a person's leg.
- Do not use this equipment near or on a person's hand.
- Do not use this equipment near or on a person's foot.
- Do not use this equipment near or on a person's eye.
- Do not use this equipment near or on a person's ear.
- Do not use this equipment near or on a person's mouth.
- Do not use this equipment near or on a person's nose.
- Do not use this equipment near or on a person's throat.
- Do not use this equipment near or on a person's torso.
- Do not use this equipment near or on a person's back.
- Do not use this equipment near or on a person's shoulder.
- Do not use this equipment near or on a person's hip.
- Do not use this equipment near or on a person's knee.
- Do not use this equipment near or on a person's ankle.
- Do not use this equipment near or on a person's wrist.
- Do not use this equipment near or on a person's hand.
- Do not use this equipment near or on a person's foot.
- Do not use this equipment near or on a person's eye.
- Do not use this equipment near or on a person's ear.
- Do not use this equipment near or on a person's mouth.
- Do not use this equipment near or on a person's nose.
- Do not use this equipment near or on a person's throat.
- Do not use this equipment near or on a person's torso.
- Do not use this equipment near or on a person's back.
- Do not use this equipment near or on a person's shoulder.
- Do not use this equipment near or on a person's hip.
- Do not use this equipment near or on a person's knee.
- Do not use this equipment near or on a person's ankle.
- Do not use this equipment near or on a person's wrist.

SHARPER IMAGE, the name and logo are registered trademarks, reproduced and marked by Sharper Image, LLC under license. All other types and trademarks are property of their respective owners. The drone and design of this package are protected by US copyright law and other types of intellectual property. Distribution, sale and/or use for any purpose without prior written permission. Allowing, reusing or redistributing any of the trademarks or copyright notices in this package is prohibited.

©2018 Sharper Image, LLC. All rights reserved. Distributed by Mercator, LLC, Irvine, CA 92618. PATENT PENDING. Printed in China.

Page 7