



Mercedes-Benz



Betriebsanleitung Universal Media Interface

Owner's Manual Universal Media Interface

Notice d'utilisation Universal Media Interface

Instrucciones de servicio Universal Media Interface

Istruzioni d'uso Universal Media Interface

Gebruiksaanwijzing Universal Media Interface

Teile-Nr. / Part no. / Référence / N. categorico / Código / Onderdeelnr. A 001 584 42 71

Lizenzvereinbarung

Wir sind unter keinen Umständen verantwortlich für den Verlust von Daten und für jedwede besonderen, beiläufigen, mittelbaren oder unmittelbaren Schäden, wie immer diese auch zustande gekommen sind. Bestandteile der im Universal Media Interface eingesetzten Software unterliegen der GPL bzw. LGPL-Lizenz. Eine Kopie dieser Lizenzen und weiterführende Informationen finden Sie unter:
www.peiker.de/umi.html

Wir weisen ausdrücklich darauf hin, dass im Falle von Modifikationen am Universal Media Interface - jedwelcher Art - der Garantieanspruch erlischt.

Licence Agreement

Under no circumstances can we be held responsible or liable for any loss of data or for any type of specific, incidental, direct or indirect damage, regardless of how this damage may have occurred. Components of the software used in the Universal Media Interface are subject to the GPL or LGPL-Licence agreement(s). A copy of these licenses as well as additional information can be found at:
www.peiker.de/umi.html

We state here explicitly that if the Universal Media Interface is modified in any way, all warranty entitlements will become null and void.

Contrat de licence

Ne ne saurions en aucun cas être tenus pour responsables de la perte de données et de tout autre dommage particulier, accidentel, direct ou indirect, de quelque origine que ce soit. Les composantes du logiciel utilisé pour l'interface média universelle sont soumis à la licence GPL ou LGPL. Vous trouverez une copie de ces licences ainsi que de plus amples informations à l'adresse suivante :
www.peiker.de/umi.html

Nous attirons expressément votre attention sur le fait que vous ne pourrez faire valoir vos droits à la garantie en cas de modifications de quelque nature que ce soit qui auraient été apportées à l'interface média universelle.

Acuerdo de licencia

Bajo ninguna circunstancia nos hacemos responsables de la pérdida de datos ni de ningún daño extraordinario, ocasional, directo o indirecto que pudiera producirse, independientemente de su causa. Los componentes del software utilizado en el Universal Media Interface están sometidos a la licencia GPL o LGPL. Una copia de estas licencias, así como información adicional están disponibles en:
www.peiker.de/umi.html

Le advertimos expresamente de que cualquier modificación de la Universal Media Interface, sea del tipo que sea, conlleva la extinción de los derechos de garantía.

Contratto di licenza

Il produttore non si assume assolutamente la responsabilità per eventuali perdite di dati e per alcun danno diretto, indiretto o incidentale, indipendentemente dalle circostanze in cui si tale danno si sia verificato. I componenti dei software impiegati nell'Universal Media Interface sono soggetti a licenza GPL o LGPL. Per ulteriori informazioni e per scaricare una copia della presente licenza consultare il sito:
www.peiker.de/umi.html

Segnaliamo esplicitamente che eventuali modifiche di qualsiasi genere apportate all'Universal Media Interface, comportano l'invalidazione dei diritti di garanzia.

Licentieovereenkomst

Wij zijn in geen enkel geval verantwoordelijk voor het verlies van gegevens en voor bijzondere, toevallige, directe of indirecte schade, ongeacht in welke vorm deze optreedt. Bestanddelen van de software die in de Universal Media Interface wordt gebruikt, zijn onderworpen aan de GPL resp. LGPL-licentie. Een kopie van deze licenties en uitvoerige informatie kunt u vinden onder:
www.peiker.de/umi.html

Wij wijzen er met nadruk op, dat in geval van wijzigingen aan de Universal Media Interface - ongeacht op welke wijze - de garantie vervalt.

Redaktion

Mercedes-Benz Accessories GmbH, Stuttgart · Ein Unternehmen der Daimler AG. Änderungen von technischen Details gegenüber den Angaben und Abbildungen der Betriebsanleitung sind vorbehalten. Nachdruck, Übersetzung und Vervielfältigung, auch auszugsweise, sind ohne schriftliche Genehmigung nicht erlaubt. Redaktionsschluss: 30.04.2008
Titelbild: M+P-03F-7298
03F048-07

Issued by

Mercedes-Benz Accessories GmbH, Stuttgart · A Daimler AG Company. The manufacturer reserves the right to change technical details from those shown in data and illustrations contained in this Owner's Manual. Reprinting, translating and reproduction, in whole or in part, are not permitted without our prior written consent. As at: 30.04.2008
Title Illustration: M+P-03F-7298
03F048-07

Rédaction

Mercedes-Benz Accessories GmbH, Stuttgart · Une entreprise du groupe Daimler AG. Sous réserve de modification de détails techniques par rapport aux indications et illustrations de cette notice d'utilisation. Toute reproduction, traduction ou publication, même partielle, interdite sans notre autorisation écrite. Fin de rédaction : 30.04.2008
Cliché de couverture : M+P-03F-7298
03F048-07

Redacción

Mercedes-Benz Accessories GmbH, Stuttgart · Una empresa de Daimler AG. Nos reservamos el derecho de modificar detalles técnicos con respecto a los datos y las figuras de las instrucciones de servicio. Prohibida la reimpresión, la traducción y la reproducción, total o parcial, sin autorización por escrito. Cierre de redacción: 30.04.2008
Portada: M+P-03F-7298
03F048-07

Redazione

Mercedes-Benz Accessories GmbH, Stuttgart · Un'Azienda del Gruppo Daimler AG. Con riserva di modifiche ai dettagli tecnici rispetto alle illustrazioni riportate nelle presenti Istruzioni di montaggio. La ristampa, la traduzione e la riproduzione, anche parziali, non sono permesse senza espressa autorizzazione scritta. Chiusura redazionale: 30.04.2008
Immagine di copertina: M+P-03F-7298
03F048-07

Redactie

Mercedes-Benz Accessories GmbH, Stuttgart · Een onderneming van de Daimler AG. Wijzigingen in specificaties en technische details ten opzichte van de specificaties en afbeeldingen van deze handleiding voorbehouden. Nadruk, vertaling of verveelvoudiging ook ten dele, zijn zonder schriftliche toestemming niet toegestaan. Redactiesluiting: 30.04.2008
Titelafbeelding: M+P-03F-7298
03F048-07

D	<i>Betriebsanleitung</i>	Seite	3
GB	<i>Owner's Manual</i>	page	27
F	<i>Notice d'utilisation</i>	page	51
E	<i>Instrucciones de servicio</i>	página	75
I	<i>Istruzioni d'uso</i>	pagina	99
NL	<i>Gebruiksaanwijzing</i>	pagina	123

We hope you enjoy your new Mercedes-Benz Universal Media Interface!

Congratulations on your new Universal Media Interface.

These Operating Instructions are valid for vehicles of the W/S 204 model series which are equipped with a Universal Media Interface. These instructions will teach you how to use your Universal Media Interface in combination with your AUDIO 20, and provides you with important tips and advice.

First of all, familiarise yourself with your Universal Media Interface and read the Operating Instructions before driving off. This will enable you to enjoy your Universal Media Interface to the full and help you to avoid dangers to you and others.

Mercedes-Benz continuously adapts its Universal Media Interface to the state of the art and therefore reserves the right to make changes in design, equipment and technology. You cannot, therefore, base any claims on the data, illustrations or descriptions contained in these Operating Instructions.

Any authorised Mercedes-Benz Service Centre will be happy to assist you at any time.

These Operating Instructions are a part of the vehicle's equipment. You should therefore always keep them in the vehicle and hand them over to the new owner if you sell the vehicle.

Mercedes-Benz wishes you pleasant motoring with your new Universal Media Interface.

Mercedes-Benz Accessories GmbH
A Daimler AG company

Table of Contents

Safety	29	iPod®	41
Symbols used	29	General notes	41
Operating safety	29	Connecting the iPod®	42
System Overview	30	Activating the iPod®	42
Navigation System	31	Play mode	43
Map software	31	Operation	44
Information via satellite signal	31	iPod® menu	44
Operation	31	USB (mp3 player)	47
Switching on the navigation system	31	General notes	47
Navigation menu	32	Activating the mass storage device	47
Route guidance	32	Operation	47
Where to?	32	Audio streaming	48
Point of interest (POI)	34	Pairing the audio device with the	
Stopover	35	Universal Media Interface	48
Functions of the full-screen		Selecting a paired audio device	49
map view	36	Operation	49
Information on the			
destination / stopover	36		
Current position	36		
Changing the map view settings	37		
Other settings	38		
FM traffic radio	40		
Displaying traffic jams	40		
Detours to avoid traffic jams	40		

Symbols used

Warning

A warning notice draws your attention to possible hazards to your health or life.

Important

Text marked in this way alerts you to the risk of possible material damage or malfunctions.

Note

Information marked in this way contains useful tips and additional details.

1. These items explain individual operating steps.

- These lists show you selection options.

Display

Messages in the display appear in this font.

Where to? → Favourites

This indicates a sequence of buttons to be pressed in succession.

Operating safety

Risk of accident

 
Devote your attention to the road and traffic situation. Only use the Universal Media Interface or connected devices (iPod, mp3 player, mobile phone, other audio devices) if the traffic situation permits. Operating the Universal Media Interface or the connected devices will distract you from the road and traffic situation and you could lose control of your vehicle and cause an accident.

These operating instructions refer to the audio system operating instructions and assembly instructions for your mobile phone cradle as well as to various operating instructions for connected devices (e.g. iPod[®], audio devices). Please keep them handy for reference.

System overview

Note

The AUX input on the audio system must be activated in order to use the voice and audio playback of the Universal Media Interface.

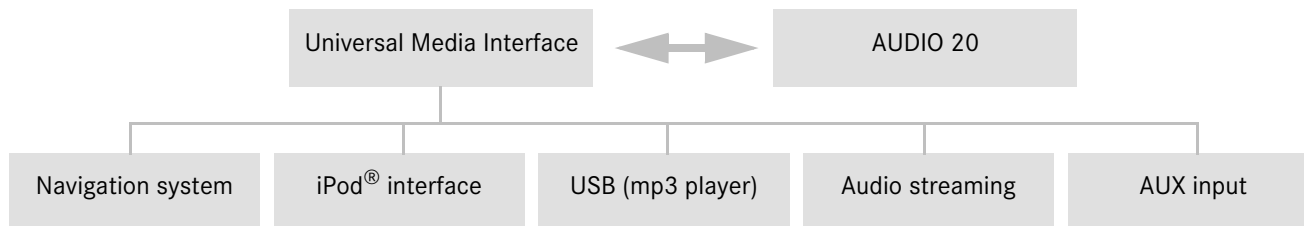

The Universal Media Interface includes a map navigation system for Europe.

For information on operation, see page 31 onwards.

The iPod® interface enables playback of audio files that are stored on the iPod®. Here, the iPod® can be controlled conveniently via the vehicle controls. For information on operation, see page 41 onwards.

The mp3 player plays audio files in the mp3 format that are located on a mass storage device connected to the USB interface. For information on operation, see page 47 onwards.

The audio streaming function enables playback of audio files by means of a paired, compatible Bluetooth® audio streaming device (e.g. mobile phone). For information on operation, see page 49 onwards.

Audio devices can be connected to the AUX interface with 3.5-mm jack plugs (e.g. headphones output of commercially available players). They are operated on the audio device.

Risk of accident

For safety reasons, only enter a destination when the vehicle is stationary. Otherwise, you could be distracted from the road and traffic situation and cause an accident in which you and /or others could be injured. The Universal Media Interface calculates route guidance to the destination without taking account of e.g.:

- Traffic lights
- Stop and give way signs
- Parking or stopping prohibited signs
- Lane narrowing
- Other road and traffic controls and regulations

The Universal Media Interface may give incorrect driving recommendations if the actual road situation differs from the data on the digital map. For example, if the traffic routing has been changed or the direction of a one-way road has been reversed.

For this reason, you must always observe applicable road and traffic controls and regulations during your journey. Road and traffic controls and regulations always have priority over the system's navigation commands.

*optional




Map software


The digital maps generated by the map software become outdated in the same way as conventional road maps. Optimum route guidance can only be provided by the navigation system in conjunction with the most up-to-date map software. Information about new map software versions can be obtained from any Mercedes-Benz Service Centre.

Information via satellite signals

The navigation system must receive satellite signals for route guidance. The system may not be able to acquire satellite signals inside multi-storey car parks or in the vicinity of tall buildings or trees.

Operation

Turn  or slide  to change a selection. Press  to confirm a selection you have made.


Press the  button to switch into the next-highest menu level.

Switching on the navigation system

Note

 
When the navigation system is switched on, no additional information is shown on the display.

When using the hands-free function for the mobile phone via the Bluetooth[®] interface or comfort telephony*, bear in mind that incoming calls are displayed exclusively in the multifunction display. Depending on the audio system and telephone settings, you will hear an additional signal tone. (Please refer to the audio system operating instructions and the installation instructions for the mobile phone cradle.)

1. For information on switching on the audio system, please refer to the audio system operating instructions.
2. Press and hold the  button.


Navigation system

Navigation menu

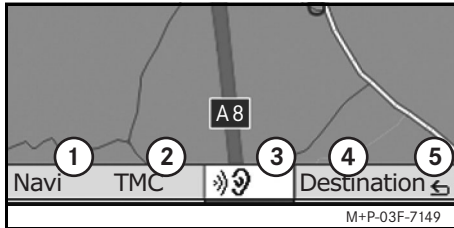

- ① System settings
- ② TMC traffic messages
- ③ Repetition of the current navigation announcement (only when route guidance is active)
- ④ Where to?
- ⑤ Back

 Route guidance

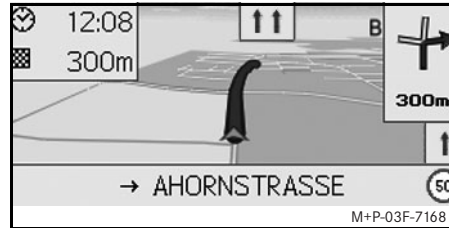

The current position is indicated by an arrow on the road map.

The active route is shown by a blue line that ends at the destination.

The next driving manoeuvre and the distance to it are shown in the direction display at the top right. If this is followed by another driving manoeuvre, this is shown below.

Note

Navigation instructions are also shown in the multifunction display. The corresponding menu must be selected in the multifunction display beforehand. (Please refer to the audio system operating instructions.)

Cancelling/continuing route guidance

1. Select Destination in the navigation menu.
2. Select Cancel route guidance or Continue route guidance.

 
Where to?

The Destination menu contains the following possibilities for entering a destination:

- Address entry
- From memory
- From last destinations
- Points of interest along the route
- Points of interest in the vicinity

Entering the destination address

1. Select *Destination* in the navigation menu.
2. Select *Address* entry.
3. Select *Country* to change the country setting if required.
4. Select *City*.

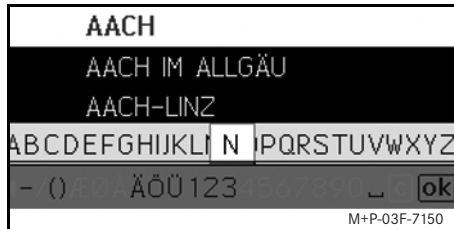

5. Select or enter the city.

Note

Select *Postcode* to define the destination using the postcode.

6. Select *Street*.
7. Select or enter the street.
8. Select *No. .*

9. Select or enter the house number.

Note

Select *Centre*. The city centre of the selected city is set as the destination.

10. Select *Start*.

Route guidance is started. The navigation screen appears in the display as soon as the route has been calculated.

Selecting a destination from the map view

1. Select *Destination* in the navigation menu.
2. Select *Map*.
3. Use the crosshair to select a destination on the map.
4. Select *Start*.

Route guidance is started. The navigation screen appears in the display as soon as the route has been calculated.

Selecting an intersection

1. Select *Destination* in the navigation menu.
2. Select *Address* entry.
3. Select *Country* to change the country setting if required.
4. Select *City*.
5. Select or enter the city.
6. Select *Street*.
7. Select or enter the street.
8. Select *Junction*.
9. Select or enter the street.
10. Select *Start*.

A list of the streets that intersect the selected street appears.

Route guidance is started. The navigation screen appears in the display as soon as the route has been calculated.

Navigation system

Saving a destination

25 destinations can be saved.

1. Select **Destination** in the navigation menu.
2. Select **Address** entry.
3. Enter the destination.
4. Select **Save**.
5. Select an option:
 - Save without name
 - Save with name
 - Save as "My address"

Selecting a saved address

1. Select **Destination** in the navigation menu.
2. Select **From memory**.
A list of up to 25 saved destinations appears.
3. Select the destination.

Note

Before route guidance to your home address can be started, this address must be saved at **My address**.

4. Select **Start**.

Route guidance is started. The navigation screen appears in the display as soon as the route has been calculated.

Selecting one of the last navigated destination

The last 10 destinations are saved.

1. Select **Destination** in the navigation menu.
2. Select **From last destinations**.
3. Select the destination.
4. Select **Start**.

Route guidance is started. The navigation screen appears in the display as soon as the route has been calculated.

Point of interest

Note

The distance to the destination specified by the navigation system corresponds to the distance in a straight line at the time of the query. It is specified without taking account of roads and does not update itself as your journey continues.

Selecting a point of interest in a city

1. Select **Destination** in the navigation menu.
2. Select **Address** entry.
3. Select **Country** to change the country setting if required.
4. Select **City**.
5. Select or enter the city.
6. Select **POI**.
7. Select reference:
 - Address
 - Global
8. Select a category, e.g. **Petrol station**.

A list of filling stations at the destination appears.

Note

Only the categories for which there are points of interest at the selected destination are displayed for selection.

9. Select the destination.
10. Select **Start**.

Route guidance is started. The navigation screen appears in the display as soon as the route has been calculated.

Selecting points of interest in the vicinity

1. Select **Destination** in the navigation menu.
2. Select **From POIs**.
3. Select a category, e.g. **Petrol station**.

A list of filling stations in the vicinity appears.

4. Select the destination.
5. Select **Start**.

Route guidance is started. The navigation screen appears in the display as soon as the route has been calculated.

Selecting points of interest along a route

1. With route guidance active, select **Destination** in the navigation menu.
2. Select **From POIs along route**.
3. Select a category, e.g. **Petrol station**.

A list of filling stations along the active route appears.

4. Select the destination.
5. Select **Start**.

Route guidance is started. The navigation screen appears in the display as soon as the route has been calculated.

Stopover**Entering a stopover**

You can add a stopover to your route while route guidance is active.

1. Select **Destination** in the navigation menu.
2. Select a stopover from the list of stopovers or enter a destination manually.



3. Confirm the input as a stopover.

Removing a stopover

1. Select **Destination** in the navigation menu.
2. Select **Delete stopover**.

Note

The stopover is removed from the route guidance without any further query.

 
Navigation system

Functions of the full-screen map view

Additional information can be shown or hidden in the full-screen map view.

Note

The additional information is displayed and updated during the journey if there is satellite reception.

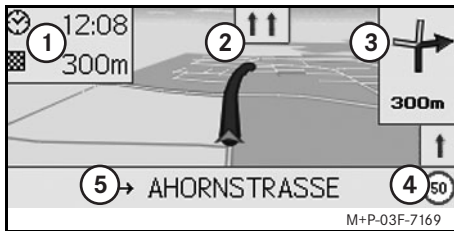

- ① Top information box
- ② Lane display
- ③ Direction display
- ④ Maximum speed
- ⑤ Lower information box

Map section

Turning enables you to zoom the displayed map section in or out.

After you press for a longer period, a crosshair appears and the map section can be moved around as you wish. Press the button to return to the view of your current position.

Viewing angle

The viewing angle on the map can be changed by sliding or if Track up has been specified as the perspective of the map view.

Navigation announcement

With route guidance active, the current navigation announcement is repeated when you press .

Top information box

Activated / deactivated by sliding .

Bottom information box

Activated / deactivated by sliding .

Information on the destination / stopover

1. Select Navi in the navigation menu.
2. Select Destination information or Stopover information.

The destination address, estimated arrival time and the remaining distance are displayed.

3. Select Save.

Current position

1. Select Navi in the navigation menu.
2. Select Position information.

The coordinates and altitude in metres of the current position as well as the number of satellites used for navigation are displayed.

3. Select Save.

Changing the map view settings

Top information box

1. Select **Navi** in the navigation menu.
2. **Configuration** → **Information box top**.
3. Select the type of display:
 - **Static**: the information box appears permanently. You can hide it by sliding ←○.
 - **Dynamic**: the information box is hidden automatically after approx. 10 seconds.
4. Select the display content:
 - **Arrival time/total dist.:** estimated arrival time and remaining distance are displayed.
 - **Arrival time/next man.:** estimated arrival time and remaining distance to the next driving manoeuvre are displayed.
 - **Altitude/satellites:** the altitude in metres of the current position and the number of satellites used for navigation are displayed.

Note

If the route guidance is inactive, **Altitude/satellites** is displayed continuously in the top information box.

Bottom information box

1. Select **Navi** in the navigation menu.
 2. **Configuration** → **Information box bottom**.
 3. Select the type of display:
 - **Static**: the information box appears permanently. You can hide it by sliding ○→.
 - **Dynamic**: the information box is hidden automatically after approx. 10 seconds.
 4. Select the display content:
 - **Current street name:** name of the road/street on which the car is driving is shown.
 - ***Direction:** the next road/street on which the car will drive is shown.
- * If this information is unavailable, the name of the road/street on which the car is driving is shown.

- **Arrival time/total dist.:** estimated arrival time and remaining distance are displayed.

Display of points of interest

1. Select **Navi** in the navigation menu.
2. **Configuration** → **Visible POIs on map**.
3. Select the categories.

Note

For points of interest to be shown in the map view, **Navi** → **Map** → **Show POIs** must be activated.

The higher the level of detail in the map view, the longer it takes for the map to be displayed.

Map

1. Select **Navi** in the navigation menu.
2. Select **Map**.
3. Select the perspective of the map view:
 - **North up:** two-dimensional map view with north at top.
 - **Track up:** three-dimensional map view in direction of travel.

Navigation system

4. Select additional information:
 - Autozoom: the displayed map section is automatically zoomed in or out according to the speed.
 - Show lane adviser: with route guidance active on multi-lane roads, this indicates the recommended driving lanes using blue arrows.
 - Show turn adviser: with route guidance active, this shows the next driving manoeuvre.

Important

The Universal Media Interface may give the incorrect speed limit if the actual road situation differs from the data on the digital map. For this reason, you must always observe applicable road and traffic controls and regulations during your journey.

- Show speedlimits: shows the permitted speed limits on each section of the route that are stored in the data of the map.

- Show POIs: displays points of interest on the map.

Note

The point of interest categories can be selected at Navi → Configuration → Visible POIs on map.

Other settings

Changing the language settings

1. Select Navi in the navigation menu.
2. Configuration → Adviser language.
3. Select the language.

Note

With Auto detect, voice output is in the set language of the audio system.

Changing the system settings

1. Select Navi in the navigation menu.
2. Configuration → Distance unit.
3. Select an option:
 - Kilometres
 - Miles

Navigation settings

1. Select Navi in the navigation menu.
2. Select Mode.
3. Select a route preference:
 - Short route: route guidance with shorter driving time, but possibly with longer distance.
 - Fast route: route guidance with shorter driving time, but possibly with longer distance.
 - Economic route: route guidance with a combination of the fastest and shortest route.

 


4. Select avoidances.

Select the road types to be avoided during route guidance. The Universal Media Interface will however not avoid these street types if alternative routes take you too far out of your way or if no other roads are available.

Note


With Navi → Mode → Attend TMC activated, traffic obstructions reported via the TMC traffic radio receiver are avoided automatically.

Repeating navigation announcements


- Select  in the navigation menu.
- In the full-screen map view, press .
- Press the  button on the multifunction steering wheel.

The current navigation announcement is repeated.

 


Regulating the volume of the navigation announcement

1. In the full-screen map view, press .
The current navigation announcement is repeated and the volume bar appears.



2. During the announcement, set the volume by turning .
The volume bar disappears automatically.



Muting the navigation announcement

- In the navigation menu, select  and press  for a longer period.
- Press and hold the  button on the multifunction steering wheel.
The navigation announcement is muted.

Restoring settings to the factory settings

1. Select Navi in the navigation menu.
2. Configuration → Factory defaults and confirm with Yes.

Switching off the navigation system

- Press and hold the  button.
- Press the  button repeatedly until the navigation menu closes.

FM traffic radio

Displaying traffic obstructions

Note

 
A TMC radio station transmits free-of-charge TMC traffic reports in addition to the radio programme. The TMC traffic radio receiver can receive current TMC traffic reports and take them into consideration for dynamic route guidance. The navigation system is thus able to re-route around a traffic jam, for example. There may be differences between the reports received and the actual traffic situation.

1. Select **TMC** in the navigation menu.
When route guidance is active, a route-related list of all traffic obstructions on the remaining part of the route is displayed.

Notes

With **Navi** → **Mode** → **Attend** TMC activated, traffic obstructions reported via the TMC traffic radio receiver are avoided automatically.

With route guidance inactive, a list of all reported traffic obstructions is displayed.

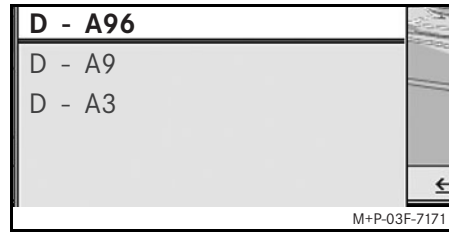

2. Select a traffic obstruction from the list.
Further details are displayed.

Detouring around other traffic obstructions

 
If there is a traffic obstruction on the current route for which there is no TMC traffic message, the route can be blocked manually. The Universal Media Interface calculates a new route to drive around the traffic obstruction.

1. Select **Navi** in the navigation menu.
2. Select **Detour**.

3. Select **Less** and **More** to set the length of the block.
4. Select **Start**.

The Universal Media Interface calculates an alternative route.

You can receive traffic information using the TMC traffic radio receiver. If there are TMC traffic messages, coloured arrows are displayed along the course of the traffic jam:

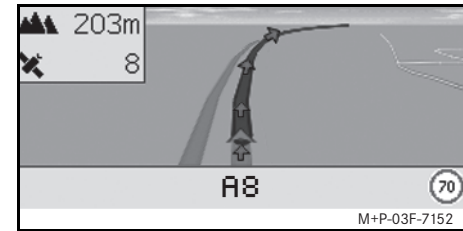

- Yellow arrows: slow-moving traffic.
- Red arrows: stop-and-go or stopped traffic.

General notes

The following iPod® models can be used in conjunction with the Universal Media Interface:

- iPod® Generation 3
- iPod® Generation 4
- iPod® photo
- iPod® mini
- iPod® U2
- iPod® nano
- iPod® video
- iPod® Classic
- iPod® touch
- iPhone®

Note

The list of compatible iPod® models corresponds to information available when the Operating Instructions went to press. Information regarding the compatibility of new iPod® models can be obtained from your Mercedes-Benz Service Centre.

These models shall be referred to below as the iPod®.

For instructions on how to operate the iPod® outside the vehicle, please refer to the iPod® User's Guide.

It is recommended to install the most current software version on the iPod®. Please refer to the separate iPod® User's Guide for more detailed information.

For optimal sound quality and to avoid volume fluctuations, it is recommended that you use iTunes® when converting CDs. On the iPod®, the equalizer should be switched off. Please refer to the iPod® User's Guide for more detailed information.

Once the iPod® is connected, its battery is charged via the Universal Media Interface as soon as the key is turned to position 2 in the ignition lock.

Note

With iPod® generation 3, it is not possible to charge the battery via the Universal Media Interface.

The iPod® is not designed for extreme temperatures which may occur inside the vehicle and may be damaged as a result. It is therefore recommended that you not leave the iPod® inside a parked vehicle.

iPod®

Connecting the iPod®

Risk of accident

 
Only connect the iPod® when the vehicle is at a standstill. Otherwise, there is a risk that you could be distracted from traffic conditions and cause an accident.

1. Open the glove compartment.
2. Connect the plug connector to the iPod®, and stow the iPod® inside the glove compartment.

Activating the iPod®

1. Switch on the audio system and call up the base menu "Disc". (Please refer to the audio system operating instructions.)
2. With the CD menu active, switch first of all into the AUX menu.

The last selected audio source is activated.

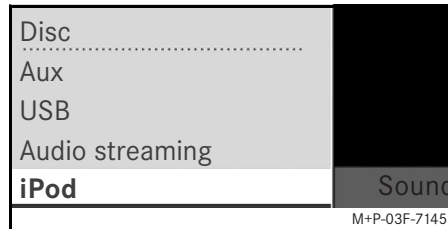

3. If necessary, change the audio source: select iPod.

The iPod® is activated by the operating system and continues to perform the function which was selected before being connected.

Note

If the message **Error** appears in the display, the iPod® must be reset (reset function). Please refer to the separate iPod® User's Guide for more detailed information.

Adjusting the volume

The volume can be adjusted using the thumbwheel on the Audio 20. (Please refer to the audio system operating instructions.)

Note

Any voice announcements while route guidance is active will not interrupt playback of the audio files.

Operating the iPod®

Risk of accident

Only use the iPod® when traffic conditions allow you to do so. You could otherwise be distracted from traffic and cause an accident in which you and /or others could be injured.

Do not wear headphones while driving the car; otherwise you may not be able to hear what is going on around you.

Once the iPod® is connected, the "click wheel" on the iPod® will not be active.

 

Play mode



① Main screen

② Menu bar




Starting playback

 1. Slide  to switch from the menu bar ② to the main screen ①.
2. Press  to start playback.






Note

Operation via the steering wheel buttons is only possible with the "comfort multi-function steering wheel" when the "Audio" submenu has been selected. (Please refer to the audio system operating instructions.)

Fast forward / reverse

- Slide and hold  when the main screen is selected.
- Press and hold the  or  button on the multifunction steering wheel.

Changing tracks

- Turn  when the main screen is selected.
- Slide  when the main screen is selected or briefly press the  button. The next track is played.
- Slide  when the main screen is selected or briefly press the  button. The previous track is repeated or the track currently being played is repeated if it has been played for more than approx. 5 seconds.

iPod®

Operation

Turn or slide to change a selection.

Press to confirm a selection you have made.

Press the button to switch into the next-highest menu level.

iPod® menu

1. Press the button when the main screen is selected.

The iPod® menu is opened.

2. Select a submenu:

- Artists
- Albums
- Genres
- Tracks
- Composers
- Audiobooks
- Podcasts
- Shuffle tracks
- Playlists

Note

Selection in the individual submenus is only possible if information on the individual tracks has been stored. (Please refer to the iPod® User's Guide.)

Selecting an artist

1. Open the Artists submenu.

All the stored artists are displayed.

2. Select an artist from the list.

Note

Select **All artists** for a list of all the stored albums of all the stored artists.

The stored albums of the selected artist are displayed.

3. Select an album from the list.

Note

Select **All albums** for a list of all the stored tracks of all the stored albums.

The stored tracks of the selected album are displayed.

4. Select a track from the list.

Note

Select **Shuffle tracks** to start random playback of the tracks of the selected album.

Playback of the selected track is started. The play mode appears in the display.



- ① Track name
- ② Artist
- ③ Album title
- ④ Track length
- ⑤ Expired track time

Selecting an album

1. Open the **Albums** submenu.
All the stored albums are displayed.
2. Select an album from the list.

Note

Select **All albums** for a list of all the stored tracks of all the stored albums.

The stored tracks of the selected album are displayed.

3. Select a track from the list.

Note

Select **Shuffle tracks** to start random playback of the tracks of the selected album.

Playback of the selected track is started. The play mode appears in the display.

Selecting the genre

1. Open the **Genres** submenu.
2. Select a genre from the list.

Note

Select **All genres** for a list of all the stored artists.

The stored artists in the selected genre are displayed.

3. Select an artist from the list.

Note

Select **All artists** for a list of all the stored albums of all the stored artists.

The stored albums of the selected artist are displayed.

4. Select an album from the list.

Note

Select **All albums** for a list of all the stored tracks of all the stored albums.

The stored tracks of the selected album are displayed.

5. Select a track from the list.

Note

Select **Shuffle tracks** to start random playback of the tracks of the selected album.

Playback of the selected track is started. The play mode appears in the display.

Selecting a track

1. Open the **Tracks** submenu.
All the stored tracks are displayed.
2. Select a track from the list.

Note

Select **Shuffle tracks** to start random playback of all tracks.

Playback of the selected track is started. The play mode appears in the display.

iPod®

Selecting a composer

1. Open the `Composers` submenu.
All the stored composers are displayed.
2. Select a composer from the list.

Note

Select `All composers` for a list of all the stored albums of all the stored composers.

The stored albums of the selected composer are displayed.

3. Select an album from the list.

Note

Select `All albums` for a list of all the stored tracks of all the stored albums.

The stored tracks of the selected album are displayed.

4. Select a track from the list.

Note

Select `Shuffle tracks` to start random playback of the tracks of the selected album.

Playback of the selected track is started. The play mode appears in the display.

Selecting an audiobook

1. Open the `Audiobooks` submenu.
All the stored audiobooks are displayed.
2. Select an audiobook from the list.

Playback of the selected audiobook is started. The play mode appears in the display.

Selecting podcasts

1. Open the `Podcasts` submenu.
All the stored tracks are displayed.
2. Select a track from the list.

Playback of the selected track is started. The play mode appears in the display.

Random track playback

1. Open the `Shuffle tracks` submenu.
Random playback of all the stored tracks is started. The play mode appears in the display.

Selecting a playlist

1. Open the `Playlists` submenu.
All the stored playlists are displayed.
2. Select a playlist from the list.
Playback of the selected list is started.
The play mode appears in the display.

Note

It is not possible to create new playlists using the Universal Media Interface.

General notes

In the case of mass storage devices with built-in batteries, there can be function restrictions when the battery is completely discharged.



Risk of accident

Only connect the mass storage device when the vehicle is at a standstill. Otherwise, there is a risk that you could be distracted from traffic conditions and cause an accident.

Activating the mass storage device

1. Switch on the audio system and call up the base menu "Disc". (Please refer to the audio system operating instructions.)
2. With the CD menu active, switch first of all into the AUX menu.
The last selected audio source is activated.
3. If necessary, change the audio source: select USB.
The folder structure of the connected mass storage device is displayed.

Note

Files stored in the formats .mp3 and .ogg are displayed in the folder structure. Playback is restricted to mp3 files.

4. Select the file folder.

The stored audio file of the selected folder are displayed in alphabetical order.

Note

Up to 1000 audio files per file folder are displayed.

5. Select an mp3 file from the list.

Playback is started. The play mode appears in the display.

Note

If the mass storage device is disconnected from the Universal Media Interface during playback or playback is interrupted by switching to another audio source, the current playback position of the selected mp3 file is stored in the Universal Media Interface. The next time the mass storage device (with unchanged content) is selected or the system is switched to USB, playback of the last selected mp3 file is continued automatically.

Operation

Operation and the play mode are the same as on the iPod®. (See page 43.)

Audio streaming

Pairing the audio device with the Universal Media Interface

Risk of accident

Only pair the Universal Media Interface with the audio device with the vehicle at a standstill. Otherwise, there is a risk that you could be distracted from traffic conditions and cause an accident.

The Universal Media Interface and audio device must be paired before they can be used together. This can be done on either the audio device or the Universal Media Interface.

After they have been paired, the two devices are automatically connected within the vehicle whenever they are switched on.

Notes

Corresponding settings may need to be configured on the audio device being used for the pairing process and for automatic connection to the Universal Media Interface. (Please refer to the audio device operating instructions.)

For successful pairing, the audio device and Universal Media Interface must be switched on and Bluetooth® must be enabled. The audio device to be paired must be in the vehicle.

Pairing on the Universal Media Interface

1. Switch on the audio system and call up the base menu "Disc". (Please refer to the audio system operating instructions.)
2. With the CD menu active, switch first of all into the AUX menu.
The last selected audio source is activated.
3. If necessary, change the audio source: select **Audio Streaming**.
4. Enable the Bluetooth® function of the audio device and make it visible to other devices. (Please refer to the operating instructions for the audio device.)
5. Select **Search for BT devices**.
All Bluetooth® audio streaming-compatible devices are shown.
6. Select the desired audio device for connection setup.

7. Enter the PIN of the audio device on the Universal Media Interface and confirm with OK. (Please refer to the operating instructions for the audio device.)

Note

If no PIN is specified for the audio device, a combination of numbers of your choice can be entered on the Universal Media Interface. This must then be entered on the audio device.

The paired Bluetooth® device that is compatible with audio streaming is activated by the operating system and playback of the existing audio files is started.

Pairing on the audio device

1. Switch on the audio system and call up the base menu "Disc". (Please refer to the audio system operating instructions.)
2. With the CD menu active, switch first of all into the AUX menu.
The last selected audio source is activated.
3. If necessary, change the audio source: select **Audio Streaming**.

4. Select Device visible.

The Universal Media Interface is available for approx. 5 minutes for establishment of a Bluetooth® connection and can be detected by the audio device.

5. Activate the Bluetooth® function of the audio device. (Please refer to the audio device operating instructions.)
6. On the audio device, start the search for other Bluetooth® devices. (Please refer to the audio device operating instructions.)

All available Bluetooth®-capable devices are shown.

7. Select UMI from the list of devices for connection setup.
8. First enter the PIN you have chosen the audio device, then on the Universal Media Interface, and confirm with OK. The paired Bluetooth® device that is compatible with audio streaming is activated by the operating system and playback of the existing audio files is started.

Notes

A maximum of 10 audio devices can be paired with the Universal Media Interface. If another audio device (an 11th device) is paired with the Universal Media Interface, the first audio device that was paired is deleted.

For correct setup of a Bluetooth® connection between the Universal Media Interface and an audio device, neither the Universal Media Interface nor the selected audio device may be simultaneously connected to another device via Bluetooth®.

Selecting a paired audio device


 

 

1. Switch on the audio system and call up the base menu "Disc". (Please refer to the audio system operating instructions.)
2. With the CD menu active, switch first of all into the AUX menu.
The last selected audio source is activated.
3. If necessary, change the audio source: select Audio Streaming.

4. Enable the Bluetooth® function of the paired audio device.

5. Select the desired audio device from the list Paired devices.

The paired Bluetooth® device that is compatible with audio streaming is activated by the operating system and playback of the existing audio files is started.

Operation

- Turn  when the main screen is selected.
- Slide  when the main screen is selected or briefly press the  button. The next track is played.
- Slide  when the main screen is selected or briefly press the  button. The previous track is repeated or the track currently being played is repeated if it has been played for more than approx. 5 seconds.

