

USER MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE PLAYING, AND
RETAIN THIS INSTRUCTION FOR FURTHER REFERENCE.**

RADIO CONTROL FREQUENCY

**FOR INTERFERENCE-FREE RESULTS, DO NOT OPERATE THIS VEHICLE WITH
OTHER RADIO-CONTROLLED TOYS NOT INCLUDED IN THIS SET WITHIN
TRANSMISSION RANGE.**

TRANSMITTER AND RECEIVER

**SINCE RADIO WAVES CONTROL THIS VEHICLE AND IN ORDER TO AVOID
INTERRUPTION, DO NOT OPERATE THIS VEHICLE NEAR ELECTRICAL OR
TELEPHONE LINES, CB INTERFERENCE, CD PLAYERS, MOBILE PHONES,
ELEVATORS, STEEL GIRDERS, OTHER ELECTRONIC DEVICES AND NEAR
HIGHWAYS.**

INSTALLING THE BATTERIES

- **REMEMBER TO SET THE "ON-OFF" SWITCH AT BOTTOM OF THE VEHICLE TO
"OFF" POSITION BEFORE INSERTING THE BATTERIES.**
- **UNSCREW AND OPEN BATTERY COMPARTMENT COVER TO INSERT
BATTERIES IN THE VEHICLE AS SHOWN IN DIAGRAM. MAKE SURE ALL
BATTERIES ARE AT THE CORRECT POLARITY.**
- **CLOSE THE COVER AND TIGHTEN THE SCREW.**
- **TO INSERT BATTERY IN THE CONTROLLER, OPEN BATTERY COMPARTMENT
COVER TO INSERT BATTERY AS SHOWN IN DIAGRAM.**
- **CLOSE THE COVER.**
- **DO NOT LEAVE BATTERIES IN THE VEHICLE AND TRANSMITTER WHEN THE
TOY IS NOT IN USE.**
- **DO NOT MIX OLD AND NEW BATTERIES TOGETHER.**
- **DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE
(NICKEL-CADMIUM) BATTERIES.**
- **FOR BEST PERFORMANCE, ALKALINE BATTERIES ARE RECOMMENDED.**
- **DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR
LEAK.**

OPERATING THE VEHICLE

- FOR YOUR SAFETY, NEVER PLAY WITH THIS TOY ON THE STREET.
- TURN THE "ON-OFF" SWITCH AT THE BOTTOM OF THE VEHICLE TO "ON" POSITION, THEN THE VEHICLE WILL BE IDLE.
- PULL THE TRIGGER DOWNWARD ON THE TRANSMITTER, THE VEHICLE WILL RESPOND IN GOING FORWARD.
- RELEASE THE TRIGGER, THE VEHICLE WILL STOP.
- PUSH THE TRIGGER UPWARD ON THE TRANSMITTER, THE VEHICLE WILL TURN IN REVERSE.

OPERATION TIPS

1. OPERATE ONLY ON SMOOTH (BUT NOT SLIPPERY), DRY AND CLEAN SURFACE.
2. DO NOT PLAY WITH THIS TOY ON GRASS, SAND OR CARPET.
3. DO NOT DRIVE THE TOY THROUGH WATER.
4. ALWAYS POINT THE CONTROLLER ANTENNA UPWARD FOR BETTER TRANSMISSION.
5. DO NOT MAKE ANY PHYSICAL CONTACT WITH THE CONTROLLER ANTENNA WHILE OPERATING.
6. KEEP THE TOY IN A DRY AND COOL PLACE AFTER PLAYING. DO NOT LEAVE IT DIRECTLY UNDER SUNLIGHT.

CONFORMS TO TOY SAFETY STANDARD ASTM F963-96a

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**

- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.

"Modifications not authorized by the manufacturer may void users authority to operate this device"