





⚠ WARNING:

CHOKING HAZARD – Small parts.

Not for children under 3 yrs.

• GOES FORWARD • TURNS IN REVERSE



PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE PLAYING, AND RETAIN THIS INSTRUCTION FOR FUTURE REFERENCE. RADIO CONTROL FREQUENCY FOR INTERFERENCE-FREE RESULTS, DO NOT OPERATE THIS VEHICLE WITH OTHER RADIO-CONTROLLED TOYS NOT INCLUDED IN THIS SET WITHIN TRANSMISSION RANGE.

TRANSMITTER AND RECEIVER
SINCE RADIO WAVES CONTROL THIS VEHICLE AND IN ORDER TO AVOID INTERRUPTION, DO NOT OPERATE THIS VEHICLE NEAR ELECTRICAL OR TELEPHONE LINES, CB INTERFERENCE, CD PLAYERS, MOBILE PHONES, ELEVATORS, STEEL GIRDERS, OTHER ELECTRONIC DEVICES AND NEAR HIGHWAYS.

INSTALLING THE BATTERIES

REMEMBER TO SET THE "ON-OFF" SWITCH AT BOTTOM OF THE VEHICLE TO "OFF" POSITION BEFORE INSERTING THE BATTERIES.

UNSCREW AND OPEN BATTERY COMPARTMENT COVER TO INSERT BATTERIES IN THE VEHICLE AS SHOWN IN FIGURE. MAKE SURE ALL BATTERIES ARE AT THE CORRECT POLARITY.

CLOSE THE COVER AND TIGHTEN THE SCREW.

TO INSERT BATTERY IN THE CONTROLLER, OPEN BATTERY COMPARTMENT COVER TO INSERT BATTERY AS SHOWN IN FIGURE.

CLOSE THE COVER.

DO NOT LEAVE BATTERIES IN THE VEHICLE AND TRANSMITTER WHEN THE TOY IS NOT IN USE.

DO NOT MIX OLD AND NEW BATTERIES TOGETHER.

DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

FOR BEST PERFORMANCE, ALKALINE BATTERIES ARE RECOMMENDED.

OPERATING THE VEHICLE
- FOR YOUR SAFETY, NEVER PLAY WITH THIS TOY ON THE STREET.
- TURN THE "ON-OFF" SWITCH AT THE BOTTOM OF THE VEHICLE TO "ON" POSITION, THEN THE VEHICLE WILL GO BACKWARD IN CIRCULAR PATH.
- PULL THE TRIGGER DOWNWARD ON THE TRANSMITTER, THE VEHICLE WILL RESPOND IN GOING FORWARD.

OPERATION TIPS

1. OPERATE ONLY ON SMOOTH (BUT NOT SLIPPERY), DRY AND CLEAN SURFACE.

2. DO NOT PLAY WITH THIS TOY ON THE STREET, IN GRASS, SAND OR CARPET.

3. DO NOT DRIVE THE TOY THROUGH WATEN.

4. ALWAYS POINT THE CONTROLLER ANTENNA UPWARD FOR BETTER TRANSMISSION.

5. DO NOT MAKE ANY PHYSICAL CONTACT WITH THE CONTROLLER ANTENNA WHILE OPERATING.

6. KEEP THE TOY IN A DRY AND COOL PLACE AFTER PLAYING. DO NOT LEAVE IT DIRECTLY UNDER SUNLIGHT.

CONFORMS TO TOY SAFETY STANDARDS ASTM F963-96a.

"MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE"

NOTE:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART IS OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:


- REORIENT OR RELOCATE THE RECEIVING ANTENNA.

- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIPICUTI DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.

BATTERY INSTRUCTION DIAGRAMS



USES 1 x 9V BATTERY (NOT INCLUDED)

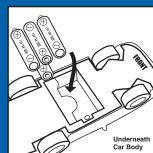

USES 4 X 1.5V "AA" SIZE BATTERIES (NOT INCLUDED)