



Thank you for purchasing Wideye™ XC1 Wireless Game Controller for XBOX™. With advance wireless 2.4GHz Frequency Hopping radio frequency technology and superior Lag-Free performance, you will be playing comfortably anywhere in the room while maintaining complete control over your gaming experience. For safe operation of this product, please read this guide and the instructions of your game system carefully before use.



## User Guide Version 1.0

Wideye™ XC1  
Wireless Game Controller for XBOX™



www.wideye.com.sg

### Package Contents

- Wireless Game Controller x 1 unit
- Base Unit Receiver x 1 unit
- User Guide x 1 unit
- Warranty Card x 1 unit



### About your Wideye™ XC1

Your Wideye™ XC1 retail package contains a Controller and a Base Unit, as shown in Figure 1

The functions of the buttons and LED of the Controller are illustrated in Figure 2.



### Power Saving Mode

If the Controller is not being used for 2.5 minutes, it will be partially turned off and go into "Sleep" mode to conserve battery consumption. To wake up the Controller from "Sleep" mode, simply press any of the buttons. If the Controller is not to be used for a long period of time, it is advisable to remove the batteries from the battery compartment.

### Battery Life Indicator

If the installed batteries are weak, the LED will start to blink. Replace the batteries immediately.

### Cautions

- Do not expose the Wideye™ XC1 Wireless Game Controller to high temperature, high humidity or direct sun light
- Do not use benzine, thinner or other chemicals to clean the product. If you wish to clean the product, please use a soft dry cloth
- Do not attempt to disassemble or modify the product
- If you feel tired, or experience discomfort or pain in your hands or arms while using this product, please stop immediately. If the condition persists, consult your doctor
- Do not operate this product in any other way except with your hands. Do not bring the Controller close to your head, face or near the bones of any part of your body
- Do not use the vibrating function of this product if you have any ailment of the bones, or joints of your hands and arms. This may aggravate the injuries
- Avoid prolonged use of this product. Take a break in every 30 minutes
- Do not insert the batteries wrongly
- Misuse of batteries may cause them to leak or explode that may result in injuries
- Keep this product out of reach from children under the age of three (3). This product contains tiny components, which may cause choking if swallowed
- If the product is hot or perform abnormally, stop using it immediately

### FCC Information

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This equipment may not cause harmful interference
- This equipment must accept any interference received including interference that may cause undesired operation



### Registration

Wideye™ XC1 Wireless Game Controller is pre-registered in the factory for excellent out-of-box experience. However, if you encounter interference during usage, please follow the steps below to re-register the unit:

- Ensure that the Controller is switched "OFF" before proceeding
- Insert three (3) AA batteries into the battery compartment of the Controller
- Hold the **BACK** and **START** buttons down simultaneously and switch the Controller "ON"
- The green LED shall blink, which indicates that the Controller has entered into the registration mode
- Hold the **LINK** button of the Base Unit down and insert the XBOX™ connector into the console; release the LINK button after the insertion
- When the Controller and Base Unit are linked, the Controller's LED will turn ON for a while and turn OFF again

After the registration, this product is ready for use.

### Controller Neutral Position Reset

If the Left or Right Button are pressed, or the Left or Right Stick are moved out of neutral position when the power is turned ON, these positions will be set as the neutral position, causing incorrect control during game play.

To reset the controller, release all buttons and sticks to allow them to return to the correct neutral position, then turn the power of the Controller OFF and ON.

**Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- 

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**IMPORTANT NOTE:****FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



