


# Back of the EUT

Battery Compartment

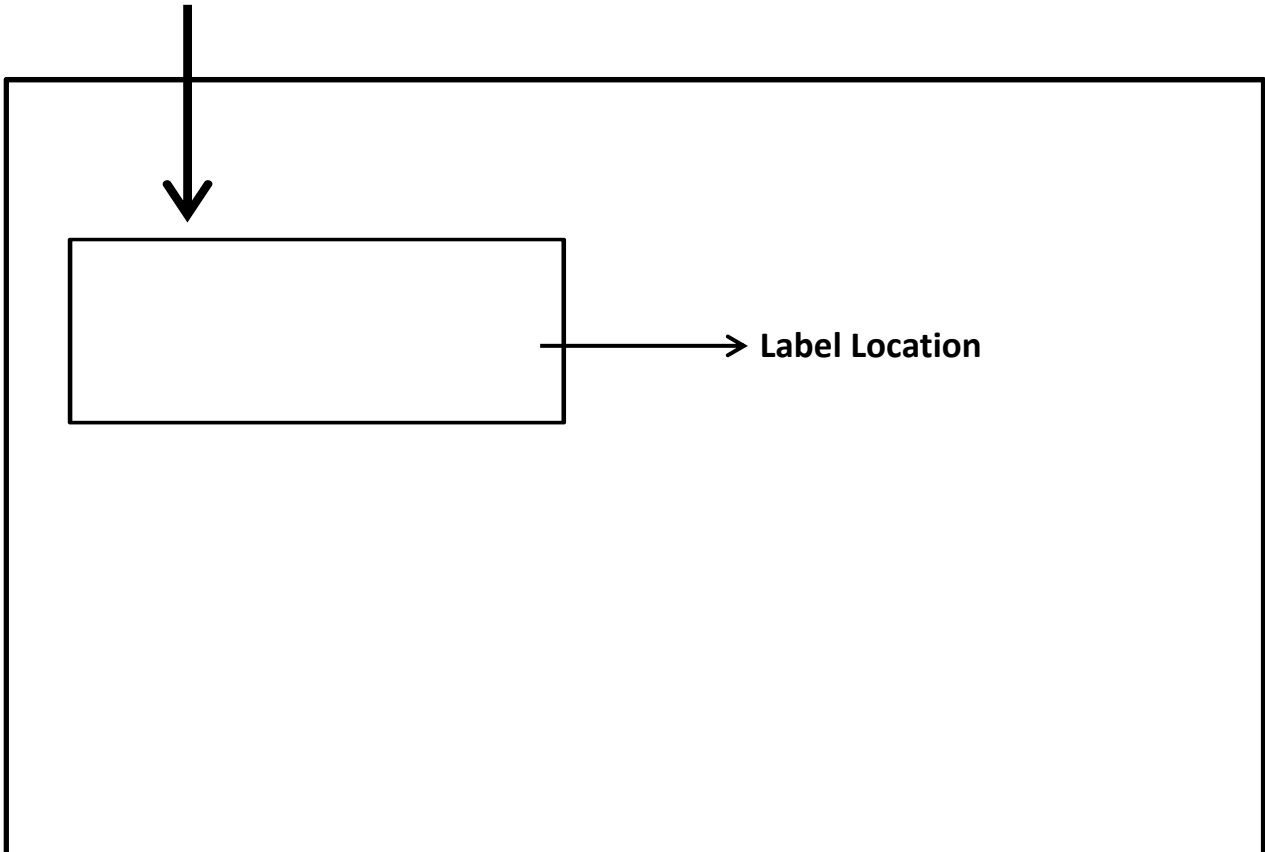

Label located in the battery compartment and it is visible to the users when they install the battery.