
## **Back of the EUT**

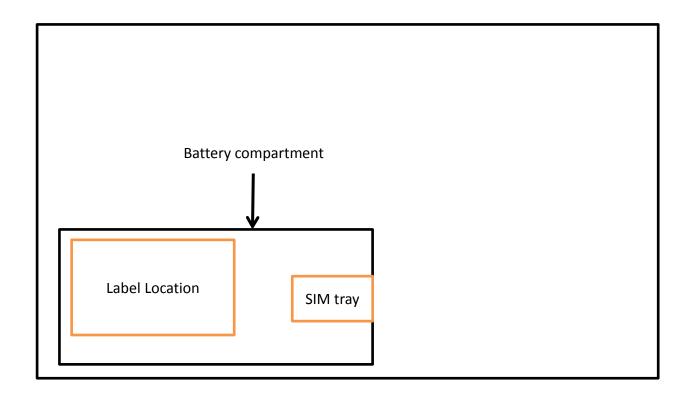

Label located in the battery compartment and is visible to the users as they install the SIM card.