



IL948
Section E
Preliminary Rev. 0 - 06/2013

Tek-CARE®550
Wireless Nurse Call System

Installation and Operation Manual

www.tektone.com

Phone: (828) 524-9967

Toll-Free: (800) 327-8466

Sales: Option 2

Tech Support: Option 3

277 Industrial Park Road
Franklin, NC 28734
tektone@tektone.net
Fax: (828) 524-9968

Tek-CARE®550 is a dual-band wireless nurse call system designed for use in senior living, assisted living and independent living facilities, as well as skilled nursing environments. The system includes a complete selection of wireless transmitters, including resident pendants, customizable 2-button pull-cord stations, single & dual room stations, and duty stations. Tek-CARE®550 is patent pending, and will be UL®1069 Listed, cUL® Listed, and UL® 2560 Listed.

Tek-CARE®550 Installation Manual

Copyright © 2013 TekTone® Sound & Signal Mfg., Inc., All rights reserved.

No part of this publication may be copied without the express written permission of TekTone® Sound & Signal Mfg., Inc. The content of this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by TekTone® Sound & Signal Mfg., Inc. TekTone® Sound & Signal Mfg., Inc. assumes no responsibility or liability for any errors or inaccuracies that may appear in this documentation.

TekTone, the TekTone logo, Tek-Alert, Tek-Bridge, Tek-Call, Tek-Care, Tek-Check-In, Tek-Com, Tek-Entry, Tek-Guard, Tek-Micro, Tek-MMARS, Tek-Paging, Tek-Safe and Tek-Status are either registered trademarks or trademarks of TekTone® Sound & Signal Mfg., Inc. in the United States and/or other countries. All other trademarks are the property of their respective owners.

TekTone® Sound & Signal Mfg., Inc., 277 Industrial Park Road, Franklin, North Carolina 28734, USA.

Table of Contents

Table of Contents	iii
FCC and IC Statements	v
TekTone® SF551 Pendant Transmitter	v
TekTone® PM550 Wireless Radio Module	vi
Canada	viii
System Overview and Introduction	1
Tek-CARE®550	1
Tek-CARE®500	1
Keys to a Trouble-Free Installation	1
System Installation and Setup	2
Equipment Installation	2
Tek-CARE®550 System Components	2
Tek-CARE®500 System Components	4
TekTone® Wireless System Setup Overview	6
System Setup Workflow	7
Install the Tek-BRIDGE™	8
Program and Install the NC555 Gateways and NC551 Repeaters	9
Program Tek-CARE®550 System Transmitters	11
Add Facility Maps and Locations	13
Assign Locations to Stationary Transmitters	14
Install Transmitters in the Facility	14
Add Custom Resident Information Fields	15
Modifying, Creating, and Removing Zones	15
Assign Transmitters to Zones	16
Create Resident Check In Times	16
Create Custom Staff Types	17
Create Shifts	17
Programming Optional System Features	18
Install Remote Event Monitors	18
Set Up Email and SMS Output	19
Set Up Paging	20
Configure Call Types and Hardware Types	22
Set Up Central Monitoring	23
HL7 Admission, Discharge, & Transfer Settings	24
Versus® Badge System Integration	24
Set Up Password Protection	25
Save and Commit the Custom Configuration	25
System Customization	26
Add Residents and Assign Them to Locations	26
Assign Transmitters to Locations and Residents	27
Assign Check-In Times to Check-In Transmitters	29
Add Facility Staff	30
Create Staff Groups	31
Create Staff Assignments	32
Update the Saved Configuration and Print the Central Monitoring Device List	33

Table of Contents

Using the Tek-CARE® Reporting System.....	34
Creating Reports	34
Viewing and Interpreting Report Data	35

Illustrations

FCC and IC Statements

TekTone® SF551 Pendant Transmitter

FCC ID: **QZ8-SF551**
IC: **1720A-SF551**

FCC Compliance Statement (Part 15.19)

The TekTone® SF551 Pendant Transmitter complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning (Part 15.21)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement (Part 15.105 (b))

The TekTone® SF551 Pendant Transmitter has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This portable transmitter with its antenna complies with FCC/IC RF exposure limits for general population / uncontrolled exposure.

TekTone® PM550 Wireless Radio Module

FCC ID: QZ8-PM550
IC: 1720A-PM550

PM550 Wireless Radio Module Description:

The PM550 Wireless Radio Module provides the 900MHz wireless radio transmitter that these TekTone® products use to communicate with 900MHz receivers, such as NC552 Locators and NC551 Repeaters:

LI552 Wireless Dome Light
NC551 Repeater
SF552 Universal Transmitter
SF559 Wireless 2-Button Pull-Cord Station
SF561 Single Room Station
SF562 Dual Room Station
SF565 Wireless Duty Station

These TekTone® products employ various of methods of triggering a 900MHz wireless radio transmission, including push button, pull cord, push button call cord, and ancillary contact inputs.

FCC Compliance Statement (Part 15.19)

The TekTone® PM550 Wireless Radio Module complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning (Part 15.21)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement (Part 15.105 (b))

The TekTone® PM550 Wireless Radio Module has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

RF Exposure (OET Bulletin 65)

To comply with FCC/IC RF exposure requirements for mobile transmitting devices, this

transmitter should only be used or installed at locations where there is at least 20cm separation distance between the antenna and all persons.

TekTone® Responsibilities to comply with FCC and Industry Canada Regulations

The TekTone® PM550 Wireless Radio Module has been certified for integration into products only by TekTone® under the following conditions:

1. The antenna(s) must be installed such that a minimum separation distance of 20cm is maintained between the radiator (antenna) and all persons at all times.
2. The transmitter module must not be co-located or operating in conjunction with any other antenna or transmitter.

As long as the two conditions above are met, further transmitter testing will not be required. However, TekTone® is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).

IMPORTANT NOTE: In the event that these conditions cannot be met (for certain configurations or co-location with another transmitter), then the FCC and Industry Canada authorizations are no longer considered valid and the FCC ID and IC Certification Number cannot be used on the final product. In these circumstances, TekTone® will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC and Industry Canada authorization.

End Product Labeling

The TekTone® PM550 Wireless Radio Module is labeled with its own FCC ID and IC Certification Number. If the FCC ID and IC Certification Number are not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. In that case, the final end product must be labeled in a visible area with the following:

Contains Transmitter Module FCC ID: QZ8-PM550

Contains Transmitter Module IC: 1720A-PM550

-or-

Contains FCC ID: QZ8-PM550

Contains IC: 1720A-PM550

TekTone® must only use quarter wave monopole or PCB inserted antennas which have been certified for use with the TekTone® PM550 Wireless Radio Module,

TekTone® must not provide information to the end user regarding how to install or remove this RF module or change RF related parameters in the user manual of the end product.

The user manual for the end product must include the following information in a prominent location:

“To comply with FCC and Industry Canada RF radiation exposure limits for general population, the antenna(s) used for this transmitter must be installed such that a minimum separation distance of 20cm is maintained between the radiator (antenna) and all persons at all times and must not be co-located or operating in conjunction with any other antenna or transmitter.”

Canada

TekTone® Model: SF551 Pendant Transmitter

FCC ID: QZ8-SF551
IC: 1720A-SF551

TekTone® Model: PM550 Wireless Radio Module

FCC ID: QZ8-PM550
IC: 1720A-PM550

Section 7.1.2 of RSS-GEN

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Section 7.1.2 du RSS-GEN

Conformément à la réglementation d'Industrie Canada, cet émetteur radio ne peut fonctionner à l'aide d'une antenne d'un type et maximum (ou moins) Gain approuvé pour l'émetteur par Industrie Canada. Pour réduire le risque d'interférence avec d'autres utilisateurs, le type d'antenne et son gain doivent être choisis afin que la puissance isotrope rayonnée équivalente (PIRE) ne dépasse pas ce qui est nécessaire pour une communication réussie.

Section 7.1.3 of RSS-GEN

This Device complies with Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions: 1) this device may not cause interference, and 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Section 7.1.3 du RSS-GEN

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes: 1) cet appareil ne doit pas provoquer d'interférences et 2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.

System Overview and Introduction

Tek-CARE®550

The Tek-CARE®550 Wireless Nurse Call System is a complete UL® 1069 and UL® 2560 listed system designed to provide a range of communication options and system functions to meet the needs of modern hospitals and care centers. The Tek-CARE®550 system is designed for reliability, ease of installation, and ease of use. It can be equipped with a variety of transmitters and receivers to allow communication between patients and staff as well as communication within the facility staff by use of e-mail, text messaging, and pagers.

The Tek-CARE®550 system is comprised of the Tek-BRIDGE, a master station computer that runs the monitoring and configuration software, remote Event Monitor software installed on facility PCs, Gateways and Repeaters which transmit messages from the system devices to the Tek-BRIDGE, and system devices such as pendant transmitters, wireless dome lights, pull-cord and pushbutton room stations, and staff pagers. The system is completely customizable to suit the needs of the facility it serves. In addition to Tek-CARE®550 devices, the Tek-CARE®550 system also supports the full range of FA (Frequency Agile) and ES (EchoStream) devices used with the Tek-CARE®500 system.

The Tek-CARE®550 system can also be fully integrated with other TekTone® systems and many other building systems such as fire alarm and security systems.

Tek-CARE®500

The Tek-CARE®500 Wireless Emergency Call System offers advanced security and safety features for senior living facilities. The Tek-CARE®500 system can communicate with both FA and ES devices, but cannot interface with Tek-CARE®550 devices. The Tek-CARE®500 system offers a wide range of device choices including window and door alarms, smoke alarms, and motion detectors as well as call buttons and pendant transmitters. As with the Tek-CARE®550 system, the Tek-CARE®500 system also uses a Tek-BRIDGE master station computer to run the Event Monitor and configuration software.

Installation of the both the Tek-CARE®550 and Tek-CARE®500 systems is designed to be simple and straightforward, and depending on the size of the facility can normally be accomplished by a single individual or a small team.

Keys to a Trouble-Free Installation

- Carefully read this manual and follow all procedures outlined within.
- Use the included programming worksheet to note device numbers and locations.
- Test each device as it is mounted in its final location.
- Before making any changes to the configuration with the Config Tool, select **File>Load Configuration from System**.
- After making changes to the configuration using the Config Tool, select **File>Save Configuration** and **File>Commit Configuration to System** to ensure that the current system configuration is loaded onto the system.
- Create a backup of the configuration on the included flash drive when system setup is complete.
- Do not mount TekTone devices using non-TekTone® hardware. Metal backboxes will interfere with signal transmission.

System Installation and Setup

Equipment Installation

Before beginning installation of a TekTone® wireless system, ensure that a site survey has been completed by a qualified TekTone® representative using the **SF551SS Site Survey Kit** for the Tek-CARE®550 system or the **NC500ESSK Site Survey Kit** for the Tek-CARE®500 system. This is a necessary step to correctly determine what equipment is necessary and where it should be located. A thorough site survey will also identify potential problem areas in a facility so that those issues may be addressed.

Tek-CARE®550 System Components

Devices compatible with the Tek-CARE®550 system are listed below. Each unit is packaged with specific installation, programming, and operating instructions. For more detailed information, see the individual specification sheets at our website, www.tektone.com.

In addition to devices directly compatible with the Tek-CARE®550 system, Tek-CARE®500 wireless devices and foreign devices may be integrated as well, though additional licenses for each foreign device or system must be purchased from TekTone®.



Tek-BRIDGE™: The core component of the Tek-CARE®550 system. The Event Monitor and Config Tool software run on the Tek-BRIDGE™. The Tek-BRIDGE™ must remain running at times for the nurse call system to function. The Tek-BRIDGE™ consists of a master station computer.



NC555 Gateway: Communicates messages from NC551 Repeaters to the Tek-BRIDGE™. The gateway receives signals from repeaters via 2.4GHz radio signals and relays information to the Tek-BRIDGE™ via TCP/IP Ethernet. The gateway is powered by an included PK505 Plug-in Transformer and a BA550 Backup Battery is included inside the gateway's housing.



NC551 Repeater: Receives messages from system wireless devices and communicates them to the NC555 Gateway. The repeater receives system device messages on a 900MHz radio link and then relays each message to the gateway via 2.4GHz radio signals. The repeater is powered by an included PK505 Plug-in Transformer and a BA550 Backup Battery is included inside the repeater's housing.



NC552 Locator: Used to determine the approximate location of mobile transmitters. The Tek-BRIDGE™ determines the call's location based on the signal strength information embedded in the message. The locator is powered by a BA505 battery and an optional PK505 Plug-in Transformer. A pole/wall mount bracket is included.



NC553 Relay: Used to signal ancillary devices such as wired dome lights or door release magnets. Powered by a PK505 plug-in transformer. The relay is powered by a BA505 battery and an optional PK505 Plug-in Transformer.



LI552 Wireless Dome Light: The LI552 Wireless Dome Light provides visual indication of calls when used with the Tek-CARE®550 Wireless Nurse Call System. The LI552 indicates an emergency call by flashing the two red LEDs associated with the location from which an emergency call has been placed. The LED dome light is powered by a PK505 Power Transformer, purchased separately.



SF551 Pendant Transmitter: Waterproof pendant transmitter with a recessed pushbutton. The device and battery status are continually supervised by the Tek-BRIDGE™. The pendant includes a necklace and is powered by a user-replaceable BA501 3v lithium coin battery.

System Installation and Setup



SF559 Two Button Pull-Cord Station: Wall-mounted, water-resistant pull-cord station with interchangeable inserts for six button configurations and/or emergency pull cord. Available button inserts for the SF559 Two Button Pull-Cord Station include Staff Assist, Code Blue, Code Pink, L1/L2 Presence, Check-In/Help, and Emergency. The two button pull-cord station is powered by a replaceable BA505 3v lithium battery or an optional PK505 plug-in transformer.



SF561 Single and SF562 Dual Room Stations: Wall-mounted room call stations that utilize pushbutton or geriatric call cords. Room Stations are powered by a replaceable BA505 3v lithium battery. An optional PK505 plug-in transformer may also be added.



SF552 Universal Transmitter: Used to integrate normally open (NO), normally closed (NC), latching, or momentary inputs from an ancillary alarm device into the Tek-CARE®550 system. The universal transmitter can be used to monitor building systems, alarm systems, or to add other wireless device types such as panic or pushbuttons. An optional pole/wall mount bracket allows the transmitter to be surface mounted on a wall or attached to a pole to monitor devices such as an IV pump.



NC502 PC-Alarm Panel: Interfaces between the Tek-BRIDGE™ and a POTS line for the purpose of sending alarm messages to a central monitoring station.



NC369 Paging Transmitter: When RF (Radio Frequency) paging is a required component of a facility's nurse call system, the NC369 Paging Transmitter is used. The paging transmitter enables both automatic and manual pages to be sent to NC399P Alphanumeric Pagers.



NC399P Alphanumeric Pager: The NC399P Alphanumeric Pager receives automatic and manual paging messages from the Tek-CARE®550 system sent by the NC369 Paging Transmitter.



PK505 Power Transformer: The PK505 power transformer supplies 12VDC line power to the NC555 Gateway, NC551 repeater and all wall-mount Tek-CARE®550 system transmitters. It is included with the NC555 Gateway and NC551 Repeater. Other devices that require line power from the PK505 Power Transformer are the LI552 LED Dome Light, SF552 Universal Transmitter, NC552 Locator, NC553 Relay, and the SF565 Duty Station. the PK505 Power Transformer is optional for the SF552 Universal Transmitter, SF559 2-Button Pull-Cord station, and SF561 and SF562 Room Stations.



BA501 Battery: Replacement 3V Lithium button cell battery for the SF551 Pendant Transmitter. CR2450 or equivalent.



BA505 Battery: Replacement 3V Lithium battery for SF552, SF559, SF561, SF562, NC552, and NC553. CR17345 or equivalent.



BA550 Backup Battery: The BA550 Backup Batter is used to in the NC555 Gateway and NC551 Repeater. The BA550 Backup Battery allows critical system functions to remain operating in the event of a line power failure. Gateway and Repeater switchover to battery power is annunciated at the Tek-BRIDGE™

Tek-CARE®500 System Components



NC510 and NC510ES Receivers: The NC510 and NC510ES receivers connect directly to the Tek-BRIDGE™ and receive calls from wireless devices in the facility. The NC510 receiver communicates with FA devices, and the NC510ES receiver communicates with ES devices.



NC511ES Repeater/Locator: The repeater/locator extends the range of roaming transmitters and can determine the approximate location of a roaming transmitter within the facility. An optional weatherproof housing (TekTone® part number IH511) is available if the repeater/locator is to be mounted outdoors or if additional protection for the repeater/locator is desired.



NC502 PC-Alarm Panel: Interfaces between the Tek-BRIDGE™ and a POTS line for the purpose of sending alarm messages to a central monitoring station.



NC369 Paging Transmitter: When RF (Radio Frequency) paging is a required component of a facility's emergency call system, the NC369 Paging Transmitter is used. The paging transmitter enables both automatic and manual pages to be sent to NC399P Alphanumeric Pagers.



NC399P Alphanumeric Pager: The NC399P Alphanumeric Pager receives automatic and manual paging messages from the Tek-CARE®500 system sent by the NC369 Paging Transmitter.



SF501ES Water Resistant Single Button Pendant Call Transmitter: The single button pendant call transmitter is a water resistant mobile transmitter that includes both a belt clip and necklace. An alarm placed from the SF501ES must be reset by pressing the recessed reset button on the reverse side of the pendant transmitter. To send a call from the device, press the large call button for one second.



SF501/2ES Water Resistant Dual Button Pendant Call Transmitter: The dual button pendant call transmitter is a water resistant device that includes both a belt clip and necklace. An alarm placed from the SF501/2ES must be reset by pressing the recessed reset button on the reverse side of the pendant transmitter. To place a call from the device, press both buttons simultaneously for one second.



SF502ES Wall Mounted Call Transmitter: The SF502ES Wall Mounted Call Transmitter is a single-button emergency call transmitter. The alarm sent from the SF502ES transmitter must be reset at the Tek-BRIDGE. The SF502ES may also be configured as a resident check-in button, or the included necklace may be attached so that it may be used as a portable transmitter.



NC505ES Remote LCD Receiver: Used to connect external dome lamps and dialers to the Tek-CARE®500 system, which gives additional annunciation capabilities beyond the Event Monitor software on the Tek-BRIDGE™. The NC505ES is not dependant on the Tek-BRIDGE™ to annunciate calls it receives, and does not annunciate signals from the NC501ES receiver.



SF520ES Door/Window Egress Transmitter: This transmitter is used to monitor door and window activity. It may be used as either NO (Normally Open) or NC (Normally Closed) to allow use in a variety of applications. Alarms are either automatically reset when the device returns to a normal state or when calls are reset at the Tek-BRIDGE™ depending on system programming.



SF525ES and SF525/2ES NO/NC Universal Contact Transmitters: The SF525ES and SF525/2ES transmitters are used with any standard NO or NC switch, enabling the Tek-CARE®500 system to monitor a variety of inputs. The SF525ES includes one selectable NO/NC inputs and the SF525/2E includes one selectable NO/NC input plus an NC-only input. The secondary NC-only input's call type has not been preassigned. The call type must be assigned using the Hardware page in the Config Tool software. Alarms are automatically reset when returned to a normal state or when calls are reset at the Tek-BRIDGE™ depending on system programming.



SF527ES Wireless Support Module: The SF527ES Wireless Support Module may be connected to an SF337C Waterproof Switch or SF339 Pushbutton Emergency Switch to allow these switches to operate as wireless devices. This is especially useful in an environment such as a shower or bathroom where calls must be easily placed and water resistance is desired.



SF529ES Resident Check-In/Assistance Call Station: The Wireless Resident Check-In and Assistance Station is used when both a high-priority call and resident check-in is desired. High priority calls must be reset at the point of origin. The SF529ES Resident Check-In/Assistance Call Station includes a plastic pull cord kit.



SF530ES Room Station: The Room Station transmitter is used where use of call cords are desired. Alarms must be reset at the point of origin. The SF530ES Room Station provides a standard 1/4" call cord receptacle and a reset pushbutton. The device also includes cord-out detection, annunciated at the Tek-BRIDGE™.



SF531ES Emergency Switch: The SF531 Emergency Switch is used where a high priority call is desired, but water resistance is not required. The SF531ES Emergency Switch includes a plastic pull-cord kit. Alarms placed from the transmitter must be reset at the point of origin.



SF505ES Smoke Detector: The SF505ES Smoke Detector transmits an alarm signal when the smoke detector is activated. The signal will reset automatically when the detector is clear of all smoke.



SF515ES Motion Detector: The SF515ES Passive Infra-Red Motion Detector is sensitive to moving heat sources. It can be used as a check-in device or as a security device on the Tek-CARE®500 system.

TekTone® Wireless System Setup Overview

The Tek-BRIDGE™ master station must be dedicated to the Tek-CARE® system. Due to the critical nature of the system, do not run applications other than those associated with the Tek-CARE® system on the Tek-BRIDGE™. Since the functions of the system are critical, all power saving features of the Tek-BRIDGE™ have been disabled.

The software suite used on the Tek-BRIDGE™ includes two applications-**the LS450 Config Tool**, used to set up the system and make programming changes to the existing system and the **LS576 Event Monitor and Reporting System**, used to monitor all calls and perform some system programming functions. The Event Monitor software enables hospital staff to watch call activity, monitor system status, review resident information, and much more.


Open the Event Monitor software by double-clicking the LS576 icon on the Tek-BRIDGE™ desktop:



Open the Config Tool software by double-clicking the LS450 icon on the Tek-BRIDGE™ desktop:




The **Config Tool** performs the functions of initial system setup, programming gateways and repeaters, and system customization. The Config Tool is normally used only during initial system setup and system modification or maintenance. In certain situations, transmitters can be added to the system though the Config Tool. The home screen of the Config Tool is shown below.

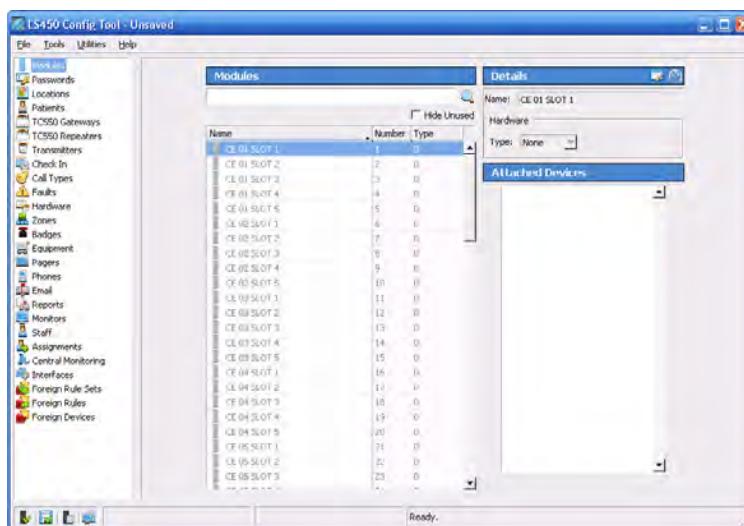

The **Event Monitor** is the software that hospital staff will interact with on a daily basis. This application allows hospital staff to view system status, faults, troubles, and incoming calls from transmitters. Some system programming functions may also be performed using the Event Monitor software. The main Event Monitor will run on the Tek-BRIDGE™, but the Tek-CARE® system provides for up to nine **LS586 Remote Event Monitors** that may be installed on other facility PCs. These remote Event Monitors are managed by the Tek-BRIDGE™ via the facility LAN. The remote Event Monitor software is a supplemental system monitoring tool and must not be used as the primary means of annunciation for the Tek-CARE® system. The Tek-CARE® system includes a license for one Remote Event Monitor and is able to support up to nine Remote Event Monitors. Contact TekTone® Customer Service to purchase additional Remote Event Monitor licenses.

The home screen of the Event Monitor and Remote Event Monitor is shown below.

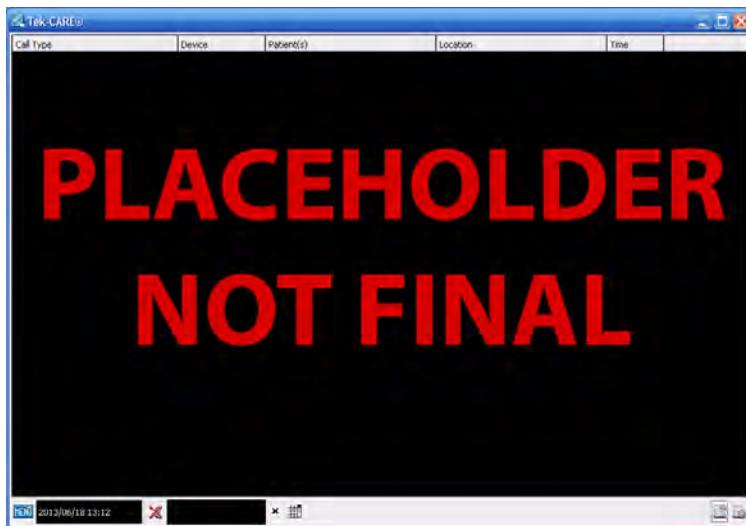

*It is important to remember that both the Config Tool and Event Monitor can make changes to the Tek-CARE® system, but only changes made in the Event Monitor are automatically written to the system. Changes made in the Event Monitor will not be automatically reflected in the Config Tool. As such, it is important to select **File>Load Configuration from System** in the Config Tool after any changes are made in the Event Monitor software—this updates the configuration in the Config Tool to match the current configuration on the Tek-CARE® system. If the current system configuration is not loaded into the Config Tool, changes made in the Event Monitor will not remain on the Tek-CARE® system after the configuration is committed from the Config Tool.*

System Setup Workflow

The Tek-CARE® systems are designed for ease of installation and can be programmed and installed by a single individual, though testing will be simpler with an assistant. TekTone® recommends that the gateways, repeaters, receivers, and system devices be programmed into the Tek-CARE® system before they are mounted in their final locations. This will speed installation and provides for the opportunity to test devices individually as they are programmed into the system.

The following list is simply an outline of the overall installation procedure. Installation details are discussed further in the following pages.

- Install the Tek-BRIDGE™ where it is accessible to facility staff.
- If required, connect the Tek-BRIDGE™ to the facility LAN.
- Start the **LS576 Event Monitor** software
- Start the **LS450 Config Tool** software.
- **For Tek-CARE®550 Systems:** Program and commission the **NC555 Gateways** and **NC551 Repeaters** that will operate on the system.
- **For Tek-CARE®500 Systems:** Install **NC501** and/or **NC510ES Receivers**
- Add system transmitters.
- Load the configuration from the system into the **Config Tool** and continue with system programming. Set up optional system features including paging, email and text message notification, resident records, and other system options.

- Set up central monitoring (if used).
- Program foreign devices into the system.
- Save and implement the custom system configuration.
- Integrate other TekTone® systems such as the Tek-CARE®400.
- Save the final system configuration.
- Test the system.
- Create a backup of the system configuration.

Install the Tek-BRIDGE™

Set up the Tek-BRIDGE™

TekTone® recommends that the Tek-BRIDGE™ be plugged into an uninterruptable power supply (UPS) or dedicated life safety electrical circuit. If a UPS is required, a TekTone® PK250B Uninterruptable Power Supply is recommended. Connect the monitor, keyboard, and mouse to the Tek-BRIDGE™ and turn both the computer and monitor on.

The Tek-BRIDGE™ is preprogrammed with a Windows® password. The default username and password are as follows:

Username: tekbridge pc

Password: tekton

The default system password may be changed at any time by choosing **Start>Control Panel>User Accounts>TekBridge PC>Change my Password** or **Remove my Password**.

After the computer finishes its startup process, verify that the system clock in the system tray is correct. If it is not, be sure to set the correct time and date before proceeding.

Connect to the Facility's LAN

The Tek-BRIDGE™ must be connected to the facility's local area network (LAN) if the system will use any of the following functions:

- Install and use **LS586 Remote Event Monitor** software on facility PCs
- View and create custom reports using facility PCs
- Use the Email Output function to send automatic emails or text messages in response to nurse call events

Without a LAN connection, the Event Monitor and Reporting functions of the system are only available at the Tek-BRIDGE™. The Tek-CARE® system includes one LS586 remote Event Monitor license, with the ability to expand up to nine total remote Event Monitors. For facilities that require additional licenses, contact TekTone® at (800) 327-8466.

LAN Connection Procedure

Connect the Tek-BRIDGE™ to the facility's LAN using a standard network cable. The maximum wire distance is 150'.

The Tek-BRIDGE™ is equipped with three Ethernet ports, one for Tek-CARE®550 system hardware connections, a second for Tek-CARE®400 network connection, and a third for the Facility LAN connection. The settings for the Facility LAN port must match those of the host LAN. Contact the facility's IT department for any necessary system changes

prior to connecting the Tek-BRIDGE™ to the LAN.

In order to set up system functions associated with the LAN connection, the IP address of the Tek-BRIDGE™ must be provided. To find the IP address of the Tek-BRIDGE™, open the Windows® Start Menu and choose **Run**. Type **cmd** into the search bar and press the enter key. When the command prompt window appears, type **ipconfig** and press the enter key. In the list that appears, find the IP address for Local Area Connection 3. This is the IP address that will identify the Tek-BRIDGE™ when it is connected to the facility LAN.

Note the Tek-BRIDGE™ IP address here: _____

Prepare the Tek-CARE® system for setup

Double-click the **LS576 Event Monitor** icon on the desktop to open the Event Monitor software. The Event Monitor software is a module on the Tek-CARE® system and must be running for configurations created in the Config Tool to be committed to the system.

Set Date and Time in the Event Monitor

The time and date stored in the Event Monitor software does not update automatically from the Windows® system clock and does not automatically adjust for daylight savings time.

- To set the system time, click the **Menu** button in the Event Monitor. Choose **Set Time** from the list of options.
- Adjust the time and date in the window to reflect the current date and time. Set the time in 24-hour format.

Double-click the **LS450 Config Tool** icon on the desktop to start the Config Tool software.

When the splash screen opens, choose if the system will be a standalone system or if it will be networked with an existing system. Click the New Default Configuration With NC470 button to begin a new system setup with the full functionality of the system.

This could probably be expanded into a full discussion of what buttons/IP address/network selections do what. Right now, the Config Tool is still in development.

Once the Config Tool has fully loaded, select **File>Save Configuration As** and choose a file name for the configuration you will be creating.

Interacting with the Tek-CARE® Software

When programming the Tek-CARE® system, the user must be familiar with the different buttons used to interact with the Tek-CARE® software.


 **Edit:** Before information in a field may be changed, click the **Edit** button to unlock the pane for editing.

 **Apply:** Click this button to confirm your programming changes. After clicking **Apply**, the field being edited will be locked.

 **Cancel:** Click **Cancel** to undo any programming changes made in the editing pane and lock the pane.

 **Add:** This button is used to add residents, transmitters, gateways, repeaters, and several other items to the Tek-CARE® system.

Figure 1—Config Tool

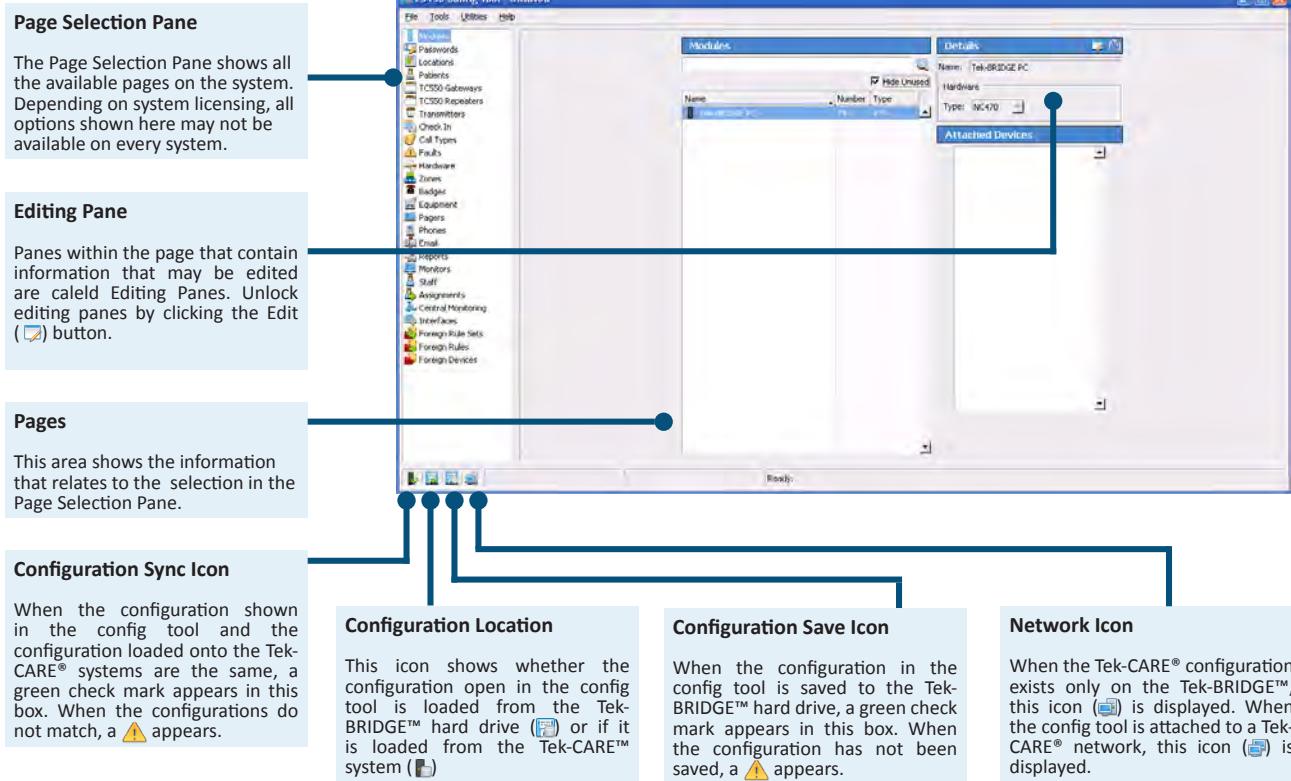

 **Delete:** Used to delete records, transmitters, residents, and several other items from the Tek-CARE® system.

 **Add Multiple:** Used to add multiple records to the Tek-CARE® system at once. Especially useful for adding RF pagers with consecutive CAP codes to the Tek-CARE® system.


 **Delete Multiple:** Used to delete multiple records from the Tek-CARE® system at once.

Program and Install the NC555 Gateways and NC551 Repeaters

Before the system can be fully set up, any gateways and repeaters that will be used on the system must be programmed.

Programming NC555 Gateways

1. Remove the cover from the gateway and ensure that the backup battery is not connected. See [Figure 2](#).
 - *First, insert a small flathead screwdriver into the seam on the rear of the device. Carefully pry up and out to open the rear of the cover. The rear seam and one edge will separate.*
 - *Second, insert a small flathead screwdriver into the seam on the edge of the device that did not separate. Gently pry up and out to open the cover.*
2. Plug the supplied Ethernet patch cable into both the gateway and the Ethernet port designated for Tek-CARE® 550 equipment on the **Tek-BRIDGE™**.
3. Connect the PK505 Power Transformer to the Gateway as shown in [Figure 3](#). **DO NOT** plug in the transformer.
4. If more than one gateway is to be used on the system, install an **NC554/5** or **NC554/8 Network Switch**. Connect an Ethernet patch cord from the Tek-BRIDGE™ to the network switch and connect the Ethernet patch cord from each gateway to the network switch.
5. In the page selection pane of the **Config Tool**, select **TC550 Gateways** to open the page shown below.

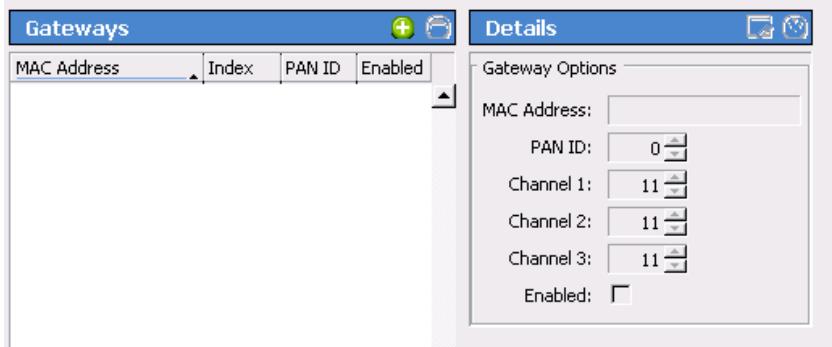

6. Click the **Add** button in the **Gateways** pane to unlock the **Details** editing pane.
7. In the **MAC Address** entry field, type the long address provided with your gateway.
8. Choose a **PAN ID** number. TekTone® recommends that PAN ID numbers for gateways be between 1 and 10 to simplify installation.
9. Set values for **Channel Numbers**. **Channel numbers must be between 11 and 25.**

Figure 2—NC555 Gateway and NC551 Repeater Cover Removal


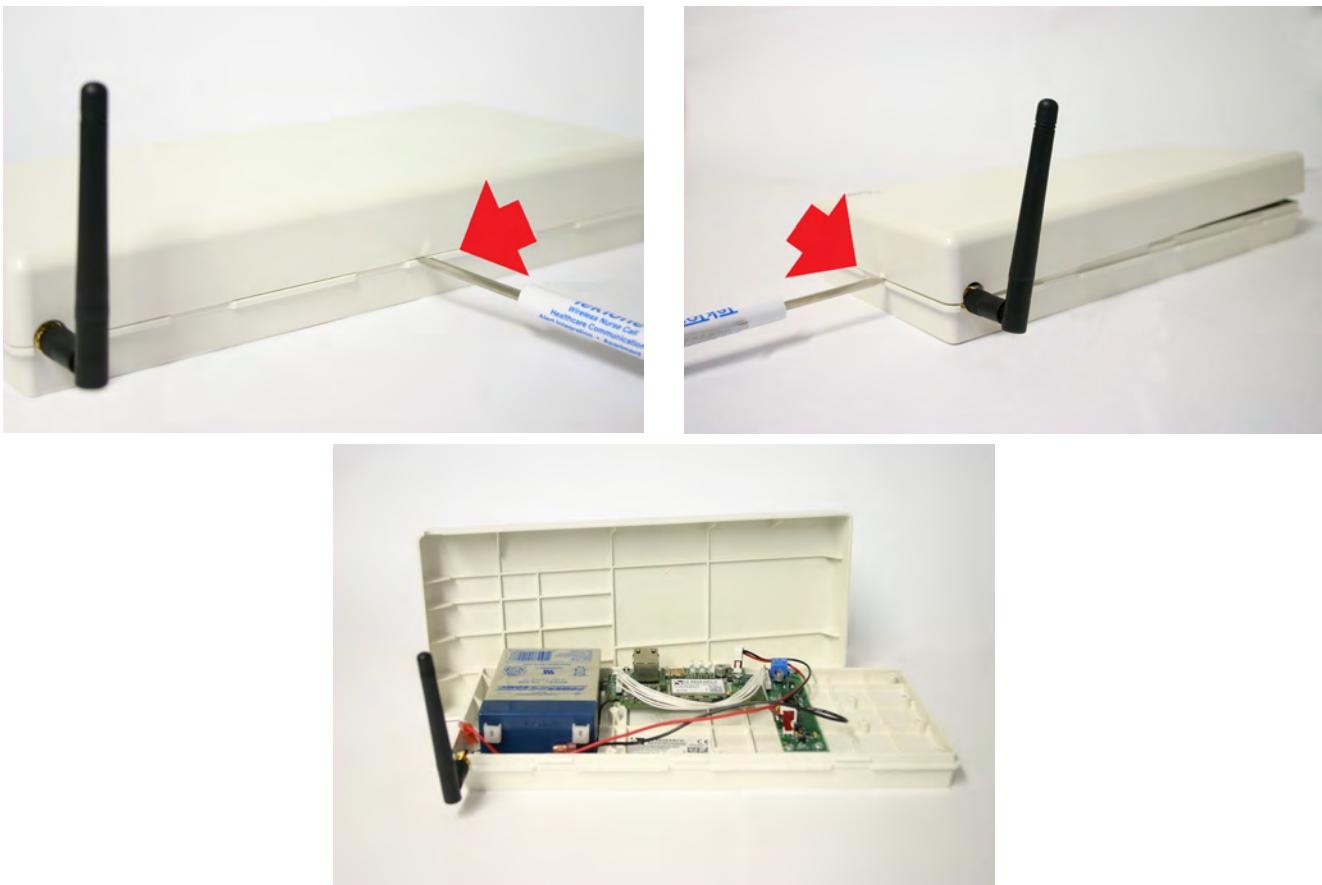


Figure 3—NC555 Gateway Connections

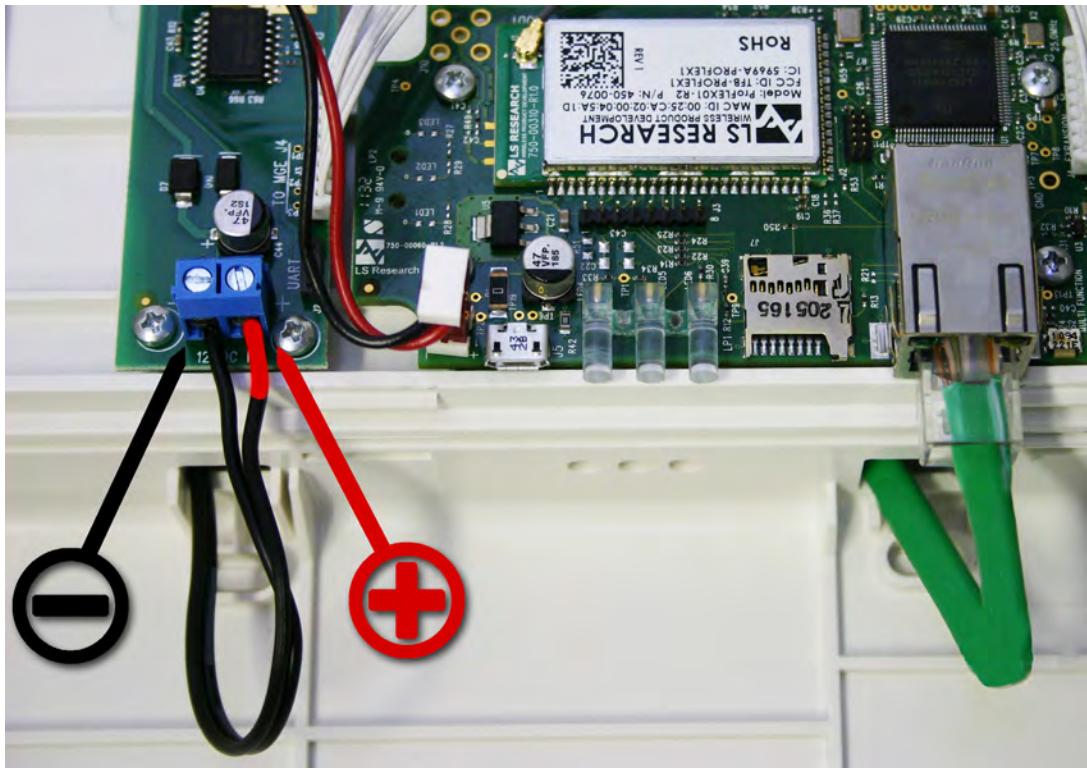


- If possible, avoid duplication of channel numbers across gateways. This allows for interference free system performance.

10. Verify that the **Enabled** box is checked.
11. Once all fields in the **Details** editing pane have been filled, click the **Apply** button. The **Details** editing pane will then become locked, and information about the new gateway will appear in the **Gateways** pane.
12. If only one gateway is being installed on the system, proceed to **Programming NC551 Repeaters**. If multiple gateways are to be installed on a single system, repeat the steps above until all repeaters have been programmed.

Once all the appropriate settings have been chosen for the first gateway, continue adding any additional gateways by repeating the gateway programming process. After all gateways that will be used on the system have been programmed, move on to programming the **NC551 Repeaters**.

Programming NC551 Repeaters

1. Remove the cover from the repeater and ensure that the backup battery is not connected. Removal of the repeater cover is the same as removal of the gateway cover as illustrated in [Figure 2](#).
2. In the page selection pane, select **TC550 Repeaters** and click the **Add** button to begin repeater setup.

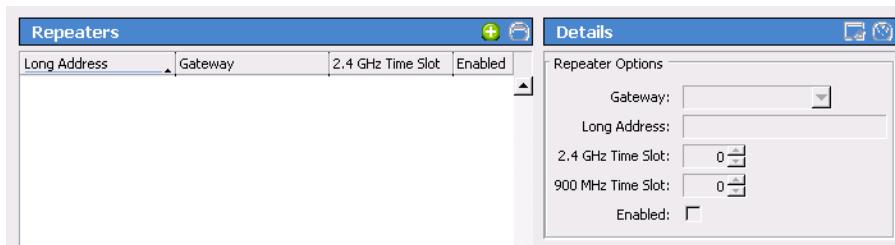

3. In the **Details** editing pane, choose the gateway that the repeater will be associated with from the **Gateway** drop-down menu.
 - If more than one gateway is installed on a system, it is helpful to note which gateways are associated with which repeaters by labeling the exterior of the gateways and repeaters.
4. In the **Long Address** entry field, type the long address provided with your gateway.
5. In the **2.4 GHz Time Slot** box, choose a value between 0 and 14. Avoid duplication of 2.4 GHz Time Slot values across repeaters if possible.
6. In the **900 MHz Time Slot** box, choose a value between 0 and 5. Avoid duplication of 900 MHz Time Slot values if possible.
7. Make sure the **Enabled** box is checked.
8. Click the **Apply** button.
9. If multiple repeaters are to be installed on a single system, repeat the steps above. Once all repeaters have been programmed, proceed to **Commissioning NC555 Gateways and NC551 Repeaters**.

Commissioning NC555 Gateways and NC551 Repeaters

Once all the gateways and repeaters to be used on the system have been programmed, choose **Commission TC550 Gateways and Repeaters** from the **Tools** menu in the menu bar of the Config Tool.

Note: Read and follow these instructions carefully to ensure proper commissioning of the gateways and repeaters

1. When the **Select TC550 Network Interface** appears, select **192.168.55.1** and click **Ok**.
2. Select which gateways and repeaters to be commissioned by checking or unchecking the boxes beside each available gateway and repeater.
3. **Carefully read and follow the directions of each on-screen prompt.**
4. **Note:** When the commissioning wizard attempts to communicate with each repeater during the commissioning process, it may be necessary to press **Retry** 10-15 times before communication between the gateway and repeater is established.
5. **Once all gateways and repeaters have been commissioned, unplug their power supplies and Ethernet cables, connect the backup batteries, and replace their covers.**
6. Install the gateways and repeaters in their final locations and reconnect power and Ethernet cables. See *Figure 5* for a gateway and repeater mounting diagram.

When all gateways and repeaters have been commissioned successfully, proceed to adding system transmitters.

Select File>Save Configuration to save your programming changes, then select File>Commit Configuration to System to update the Tek-Care® system.

Program Tek-CARE®550 System Transmitters

There are two methods for adding transmitters to a Tek-CARE®550 system. The primary method uses the Event Monitor software. By using the Event Monitor software to add transmitters, less manual data entry is required since the software can automatically detect identification information embedded in the devices.

The secondary method for adding transmitters is through the Config Tool. Though useful for maintenance tasks or adding a small number of devices to an existing system, TekTone® does not recommend using the Config Tool to add all system devices on initial setup unless extenuating circumstances are encountered. Adding transmitters in the Config Tool requires manual entry of device number, long addresses, and other device information.

As transmitters are added to the system, **Device Numbers (Dev#)** are automatically assigned to each transmitter. As transmitters are added, label each device with its assigned **Dev#** and fill out the programming worksheet with all pertinent information.

Failure to mark each transmitter with its **Dev#** or failure to fill out the programming worksheet will prolong and complicate installation.

Adding Tek-CARE®550 Transmitters with the LS576 Event Monitor

Before beginning to program transmitters with the Event Monitor, select the **Transmitters** page in the page selection pane of the **Config Tool**. Scroll over to **Settings** and ensure that the **TC550 Enabled** box is checked.

Once the **TC550 Enabled** box has been checked, choose **File>Save Configuration** to

save all changes, and then choose **File>Commit Configuration to System**.


Once the configuration has been successfully committed to the system, switch to using the Event Monitor software.

1. In the lower left corner of the Event Monitor, click on the **Menu** button.
2. Select **Commission TC550 Transmitters** from the menu.

*At this point, a window will appear that monitors communication traffic between transmitters and the Tek-BRIDGE™. This traffic window shows the device IDs for transmitters that will be added to the system. Ensure that the **Hide Transmitters Already in System** box is checked to eliminate unnecessary traffic reports.*

3. Ensure that the battery is installed or the plug-in transformer is connected to the device to be added to the system.

4. On the circuit board of the device to be commissioned, find the label with the eight digit long address of the device as shown in *Figure 4*. Add four zeroes to the beginning of the long address printed on the label to find the full long address.

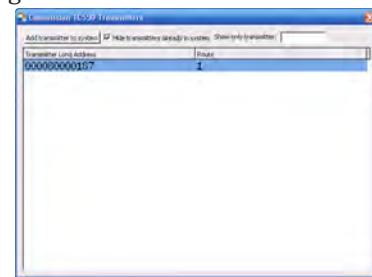

- For **Pendant Transmitters and Two-Button Pull-Cord Stations**, press a button or pull the cord. In the **Traffic Window**, watch for the long address to appear.
- For **Single or Dual Room Stations**, plug in a call cord and press the call button or press the reset button. In the **Traffic Window**, watch for the long address to appear.
- For **Locators, Relays, Universal Transmitters, and Dome Lights**, remove the cover of the device, following the included instruction sheet. Find the small white pushbutton labeled **Commission** and press it. In the **Traffic Window**, watch for the long address to appear.

5. Select the device ID of the device to be added to the system from the traffic window and click **Add Transmitter to System**.

6. In the **Details** editing pane of the Event Monitor, select the appropriate device from the **Model** drop-down list.

7. If adding an **SF559 Two-Button Pull Cord Station**, choose the entry from the **Used As:** drop down menu that matches the button insert placed in the device

8. Do not select a location or resident to associate with the transmitter at this point.

9. Click **Accept** to complete the programming process.

10. Repeat for each additional transmitter.

11. When all transmitters have been added in the Event Monitor software, open the Config Tool and select **File>Load Configuration**

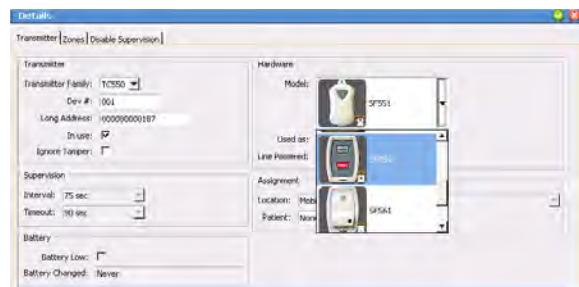


Figure 4—Long Address Label (SF559 Shown)



from System to update the configuration in the Config Tool.

Select File>Save Configuration to save your programming changes.

Adding Tek-CARE®550 Transmitters with the Config Tool

In certain cases, adding transmitters manually through the Config Tool is preferable to adding them automatically in the Event Monitor. These situations may include when two independent Tek-CARE®550 systems are located in close proximity to each other or if a small number of devices need to be added to an existing system. The Config Tool method requires that certain information about the transmitters be entered manually.

1. With the Event Monitor software running, open the **Config Tool** software and choose the appropriate network interface. On the right side of the Config Tool splash screen, choose **Load Configuration from System** to ensure that the most current configuration will be edited.
2. Select **Transmitters** in the page selection pane.
3. Click the **Add** button in the **Transmitters** pane. This unlocks the **Details** pane for editing.
4. In the **Details** pane, select **TC550** from the **Transmitter Family** drop-down box to add Tek-CARE®550 transmitters.
5. Choose a four digit **Device Number (Dev#)** to be assigned to the device to be added and type it into the box.
6. Open the case of the device to be added. Find the eight digit long address sticker located on the circuit board and copy it into the **Long Address** field in the **Details** pane. Add four zeroes to the beginning of the long address. The
7. If the device will be used immediately, ensure that the **In Use** box is checked. If the device is to be placed in reserve, but not to be enabled until a later time, leave this box unchecked. Before placing the device in reserve or storage, remove the battery from the device.
8. Select the appropriate device type from the **Hardware** drop-down menu. If adding an **SF559 Two-Button Pull Cord Station**, choose the entry from the **Used As:** drop down menu that matches the button insert placed in the device.
9. If the transmitter will be powered by a plug-in power supply, be sure and check the **Line Powered** box.
10. If the device is being added to an existing system, choose the appropriate location (if any) from the **Location** drop-down menu in the **Assignment** pane. If the device is being added to a new system, select **Nowhere** as the location. Locations will be added later.

Select File>Save Configuration to save your programming changes, then select File>Commit Configuration to System to update the Tek-Care® system.

Add Facility Maps and Locations

The Tek-CARE® system has the option to store maps of the care facility it is installed in. These maps can be used to view transmitter locations and, when adding resident information, associate a particular transmitter with a room, and thus an individual resident entry.

Locations are where transmitters are physically installed throughout the facility. Locations must be defined whether or not facility maps are used. Each stationary

device must be assigned to a physical location. Mobile devices are assigned to the **Mobile** location.

Click on the **Locations** tab in the page selection pane of the Config Tool.

If you have Proximity Maps of your facility to add:

1. Using the Config Tool, ensure that the configuration loaded in the Config Tool is the current configuration on the system by choosing **File>Load Configuration from System**.
2. Copy your facility maps to the Tek-BRIDGE™ hard drive. Proximity maps should be image files in any of these formats: BMP, GIF, JPG, JPEG or PNG.
3. Click on the **Add** button in the **Proximity Maps** area.
4. Click on the **Load from File** button in the **Proximity Maps-Details** pane, browse to the first map you copied to the hard drive, and click the **Open** button.
5. Type a name for the map (such as Building 1, North Wing or 2nd Floor), and click **Apply**.
6. Repeat to add more proximity maps.

Now, add Locations:

1. Click on the **Add** button in the **Locations** pane.
2. In the **Locations-Details** pane, type a location name (such as a room number or room name such as StaffLounge or Men's Room). If applicable, choose a room side.
3. If proximity maps were added, open the **Proximity Map** drop-down menu and select which proximity map you would like the location to be placed on.
4. Click the **Apply** button in the **Locations-Details** pane.

If proximity maps are used, markers for each location should be placed on the proximity map. When a location is selected in the **Locations** pane, an orange marker will appear on the proximity map. With the location you wish to place on the proximity map selected in the **Locations** list, click the **Edit** button on the **Proximity Maps-Details** pane. Click and drag the orange marker to its corresponding location on the proximity map. When the marker has been placed in the correct position on the proximity map, click **Apply**.

5. Repeat to add all locations.

Select File>Save Configuration to save your programming changes.

Assign Locations to Stationary Transmitters

When transmitters are added to the system, they are automatically assigned to a default location. Pendant transmitters are assigned to the **Mobile** location, and **NC552 Locators** are used to help determine their locations within the facility. For stationary transmitters, the **Nowhere** location is automatically selected. In this step, stationary transmitters will be assigned to specific locations within the facility.

As the transmitters were added, the programming worksheet should have been filled out with information about where each transmitter will be located. This information will be used to program the location information for each transmitter.

Add Location Information to Transmitters

1. Click **Transmitters** in the page selection pane.

System Installation and Setup

2. Select a transmitter by selecting its **Dev#** from the list in the **Transmitters** pane.
3. With the transmitter selected, click the **Edit** button in the **Details** editing pane and choose a location from the **Location** drop-down menu.
4. Click the **Apply** button. Repeat for all additional transmitters.

Select File>Save Configuration to save your programming changes.

Install Transmitters in the Facility

Once all transmitters have been added to the system and locations have been added to the Tek-CARE® system, it is time to physically install the transmitters throughout the facility. Referring to the programming worksheet, install each device in its assigned room.

When mounting TekTone® wireless devices, the mounting hardware that is included with the transmitter must be used to avoid RF interference. Do not use metal backboxes to install TekTone® wireless devices. The included mounting hardware has been carefully engineered to work properly with each individual device.

Refer to the instructions included with each transmitter for mounting instructions. Be sure to adhere to local building codes when mounting stationary transmitters.

Device Specific Installation Instructions

Important Information on PK505 Power Transformer

The PK505 Power Transformer is used to power many Tek-CARE® wireless transmitters and receivers.

The following Tek-CARE®550 devices require the use of the PK505 Power Transformer:

- NC555 Gateway
- NC551 Repeater
- LI552 Dome Light
- NC552 Locator
- NC553 Relay
- SF565 Duty Station

The PK505 Power Transformer is optional for the following Tek-CARE®550 devices:


- SF552 Universal Transmitter
- SF559 Two-Button Pull-Cord Station
- SF561 and SF562 Room Stations

When used with the Tek-CARE®550, each PK505 can power multiple devices, totalling a maximum of 32 device points. (Maximum distance is 500□ using 18 gauge wire; 250□ using 22 gauge wire.)

Note: The NC555 Gateway and NC551 Repeater must each have a dedicated PK505 Power Transformer.

Device Points	Device
32	NC551 Repeater NC555 Gateway
4	LI552 Dome Light
2	SF565 Duty Station

Figure 5—Gateway Mounting Measurements

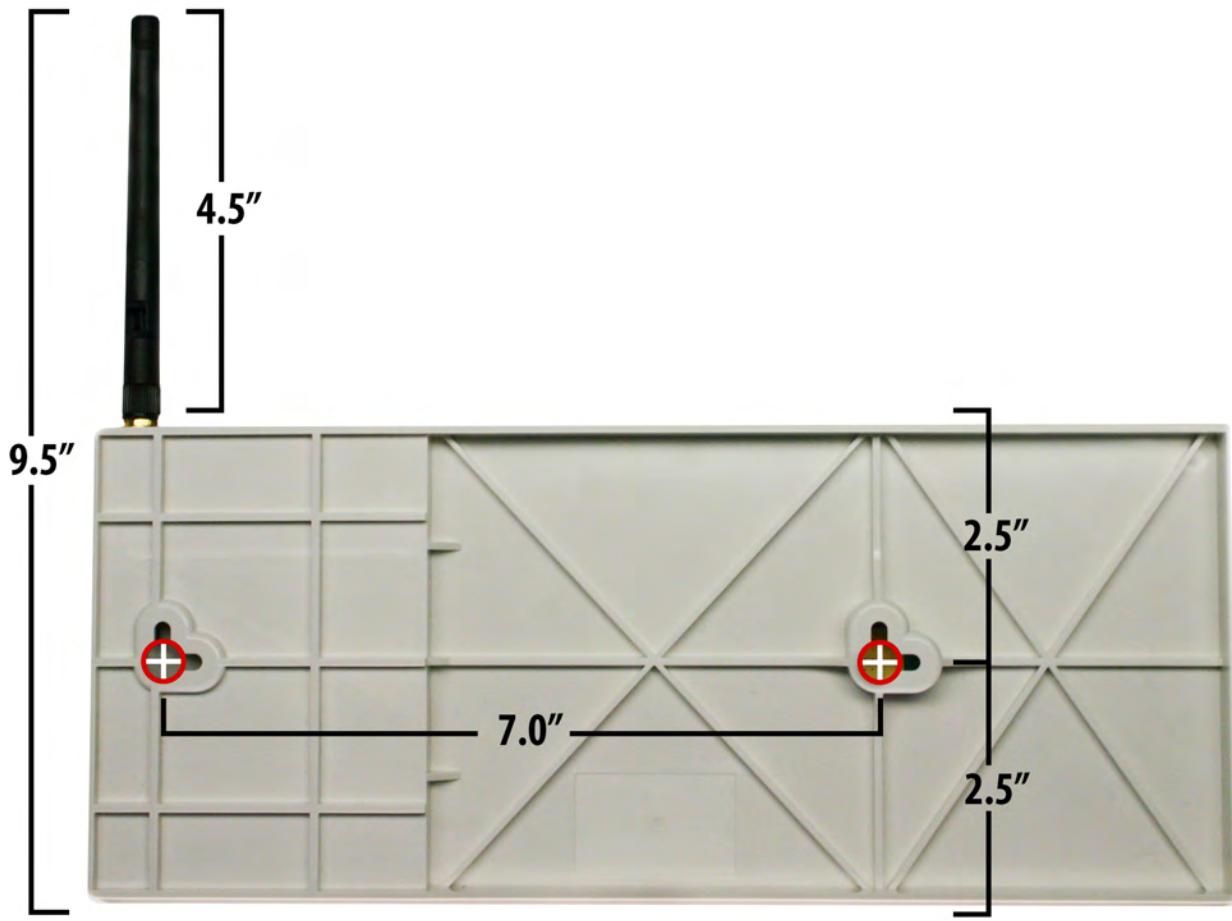

Device Points	Device
1	NC552 Locator NC553 Relay SF552 Universal Transmitter SF559 2-Button Pull-Cord Station SF561 Single Room Station SF562 Dual Room Station

Device Mounting

Tek-CARE® wireless devices may be mounted in the following ways

- Surface mount on drywall (Must use drywall anchors)
- Surface mount on headwall
- Mounted on plastic back boxes
- Surface mount on wood

When installing Tek-CARE® wireless devices, take care to install devices according to applicable building codes.

Never mount Tek-CARE® wireless devices in or on metal backboxes. Metal backboxes will interfere with signal transmission. Specify plastic back boxes for Tek-CARE® wireless device mounting.

For transmitters which use mounting brackets, simply place the bracket where the device is to be mounted, and mark the two mounting holes.

For NC555 Gateways and NC551 Repeaters, refer to the included drill guide. Gateways and Repeaters should be installed in secure locations where facility residents are unlikely to tamper with the devices.

Test Transmitters after Installation

TekTone® recommends testing each device immediately following installation. For smaller facilities simply place a call from each transmitter and check the Event Monitor screen on the Tek-BRIDGE™. As calls are placed, make sure that the location in the Event Monitor correlates with the location noted on the programming worksheet.

In larger facilities, testing of installed devices can be expedited by using a remote Event Monitor installed on a portable laptop. If the Tek-CARE® system is connected to the facility LAN and the facility has a WiFi network, follow the remote Event Monitor setup instructions on page [_](#) to install remote Event Monitor software on the connected laptop. Once the remote Event Monitor is set up, the laptop may be carried throughout the facility and used to monitor calls placed from transmitters during testing.

This step helps to identify any installation errors early in the installation process so that the rest of the installation goes smoothly. Use the completed programming worksheet to verify that transmitters have been installed in the correct locations.

Add Custom Resident Information Fields

In addition to resident names and locations, the Tek-CARE® System can be customized to store any other resident data desired by the facility such as resident home address, medications, physician information, or food allergies. Once the custom configuration has been committed to the system, these fields will appear in the Event Monitor software.

To add custom fields for additional resident information:

1. Click **Residents** in the page selection pane of the Config Tool.

2. Click on the **Add** button in the **Resident Fields** area.
3. Type a name for the field in the **Resident Fields-Details** area, and click on the **Apply** button. Only letters and numbers should be used when adding new fields. Example field names include Resident Phone, Physician, Physician Phone, Relative, Relative Phone, Medications, etc.
4. Repeat to add more custom fields.
5. Fields appear in the **Residents-Details** area in the order in which they are entered. To change the sequence, click on a field name in the **Resident Fields** area, and then click on the green up and down arrows at the right to move the field up or down.

Select File>Save Configuration to save your programming changes.

Modifying, Creating, and Removing Zones

Use the information in this section to set up zones. Transmitters can be assigned to zones later using the Event Monitor. Zones are used to assign a group of transmitters to send automatic text messages to the pagers of selected staff or staff groups. They are also used as filtering criteria for the Event Monitor software. Define a zone as a geographical area of the facility, and then assign transmitters to the zone.

The system has 75 preset zones named Z01 through Z75. Each of these zones is preconfigured to include all transmitters. Preset zones may be renamed or deleted, and new zones can be created. (When new zones are created, they do not include any transmitters until they are added using the Event Monitor.)

Rename preset zones to names that have meaning for the facility's staff.

Using the Config Tool, click on a zone in the **Zones** list and then click on the **Edit** button in the Details area. Type a new name and click on the **Apply** button. This renamed zone will include all transmitters unless they are removed using the Transmitters tab.

Delete Unneeded Preset Zones

Select the zone to be deleted in the zones list and then click the **Delete** button.

Add Additional Zones

Click on the **Add** button, type a name in the Details area, and then click on the **Apply** button. This new zone will not include any transmitters until transmitters are added using the Event Monitor, detailed in the following section.

Assign Transmitters to Zones

In this step, transmitters will be assigned to zones created in the previous step. Refer to the completed programming worksheet for transmitter device numbers and locations.

To assign a transmitter to one or more zones

1. In the Event Monitor software, click the Registers button and then choose Transmitters from the page selection pane.
2. Select a transmitter from the transmitters list. Click on **Zones** tab, then the **Edit** button to unlock the zone list.
3. Check or uncheck the boxes for the zones that the selected transmitter should be associated with.

System Installation and Setup

4. Click **Apply**.
5. Repeat for each additional transmitter.
6. Return to the Config Tool software and choose **File>Load Configuration from System** to update the configuration being edited in the Config Tool.

Create Resident Check In Times

If the facility uses **SF559 Two Button Pull-Cord Station** with a Reset/Check-In insert, check-in times must be added to the system. A check in time is a time period during which the system requires residents to press their rooms' check-in buttons. If the check-in button is not pressed during the scheduled time period, an **Inactivity** call appears in the Event Monitor.

Create several check-in times so that each resident can be assigned a check-in time that coincides with their normal waking schedule. Residents can also be assigned one check-in time for weekdays and another for weekends. The following table shows some sample check-in times

Start Time	End Time	Week Days
5:00	6:00	SMTWTFS
6:00	7:00	SMTWTFS
7:00	8:00	SMTWTFS
7:00	8:00	.MTWTF.
8:00	9:00	S,....S

Now, create Check-In Times:

1. Click on the **Check In** tab in the Config Tool.
2. Click on the **Add** button in the *Check In Times* area.
3. Using 24-hour Military time, enter a Start Time and an End Time in the *Details* area. Midnight is 00:00. Start and End times must be at least 10 minutes apart.
4. Use the checkboxes to select which days of the week this event is scheduled.
5. Click the **Apply** button.

Select File>Save Configuration to save your programming changes.

Create Custom Staff Types

The Tek-CARE® system comes pre-programmed with four different staff types-**None**, **L1**, **L2**, and **L3**. These staff types can be edited to reflect the staff types present in the facility, existing staff types may be deleted, and new staff types may be added. Common staff types include **Doctor**, **Nurse**, **Aide**, **Admin**, etc.

Changing or Customizing Staff Types

1. Click **Staff** in the page selection pane of the Config Tool.
2. To edit an existing staff type, select an entry from the **Staff Types** list and click **Edit** in the **Details** pane below. Type a new name for the selected staff type, and click **Apply**.
3. To delete an existing staff type, select an entry from the **Staff Types** list and

click **Delete**.

4. To add a new staff entry, click **Add** in the **Staff Types** pane and type a name in the **Details** pane below, then click **Apply** to accept the changes.

Create Shifts

Shifts are used to schedule time periods when central monitoring is enabled, when supervision of a transmitter is disabled, or when specific pagers annunciate calls.

Now, create Shifts:

1. Click on **Assignments** in the page selection pane of the Config Tool.
2. Click on the **Add** button in the **Shifts** area.
3. In the **Shift Details** area, type a name for the shift describing what the shift is to be used for.
4. Using 24-hour time, enter a **Start Time** and an **End Time** in the **Shift Details** area. (Midnight is 00:00.) Start and End times must be at least 10 minutes apart.
5. Use the checkboxes to select which days of the week this event is scheduled.
6. Click on the **Apply** button.

Note: A single time period cannot cross midnight into the next day. Divide it into two time period entries. For example, create these two entries to create a scheduled time period of 6:00 PM Friday to 10:00 AM Saturday:

Begin—18:00 End—23:59 Day—Friday
Begin—00:00 End—10:00 Day—Saturday

Select File>Save Configuration to save your programming changes.

Programming Optional System Features

Install Remote Event Monitors

Some facilities may require the use of Remote Event Monitors to display calls at locations other than the Tek-BRIDGE™ running the Event Monitor software. In these instances, **LS586 Remote Event Monitors** can be installed on any PC running Microsoft® Windows XP, Windows® Vista, or Windows® 7®.

Install the LS586 Remote Event Monitor software

1. Open a web browser such as Microsoft Internet Explorer® or Google® Chrome®.
2. Type the IP address into the address bar of the browser and press **Enter**.
3. A splash screen will appear that gives various options for the Tek-CARE® system. Click **Download remote Event Monitor (LS586) software** and allow the download to proceed. Windows® may provide security alerts or question if the download should be permitted to proceed. Be sure an answer *Yes* or *Continue* to any security prompts.
4. Once the installer finishes downloading, run the installer if it does not start automatically.
5. When the installation window opens, select **Full Install** and click the **Install** button. When the installation is finished, click **Close**.
6. Note about the error message I'm seeing on 7
7. Double-click the **LS586 Event Monitor** shortcut on the desktop.
8. When the splash screen appears, type the IP address of the Tek-BRIDGE™ into the **Server Address** field.
9. Select the instance of the remote Event Monitor software to be used from the drop-down **Monitor Index** menu. By default the Tek-CARE® system has one available remote Event Monitor. Select **1** for the first remote Event Monitor and continue down the list for subsequent remote Event Monitors.

Note: For facilities that require more than one Remote Event Monitor, contact TekTone® Sales at (800) 327-8466 to purchase additional Remote Event Monitor licenses.

10. Click **Ok** to finish setup and open the remote Event Monitor.
11. On the Tek-BRIDGE™, open the **LS450 Config Tool** and choose **File>Load Configuration from System** to update the **Monitors** page in the Config Tool.
12. Repeat for each additional remote Event Monitor.

Select File>Save Configuration to save your programming changes.

Set Up Email and SMS Output

The Tek-CARE® system supports email and text messaging reporting features through the optional **LS453 Email Output** software, accessible in the Config Tool. This feature enables email address to be added to the system as staff devices. The email output software can send calls and other events via email to assigned staff members. Events may also be sent to any device that has an email gateway, enabling SMS messaging to cellphones.

In order to use the email output software, the facility must have a standard non-authenticated SMTP server, configured to accept messages from the Tek-CARE® system. The email output software does not support SMTP authentication. The SMTP server may be on the facility's LAN or accessible through the facility's ISP. The email output software has been successfully tested using Sendmail, Postfix, and Microsoft Exchange.

There are three key pieces of information needed to set up email communication from the Tek-CARE® system that can be obtained from the facility's IT department. Ask the IT department for the **SMTP Host Address**, the **SMTP Port Number**, and ask if the facility has a preferred **From Address**. Note the information below

SMTP Host Address: _____

SMTP Port Number: _____

Facility Preferred From Address: _____@_____

Set Up Email Output in the Config Tool

1. With the Event Monitor software running, open the Config Tool and click on **Email** in the page selection pane.

2. Click on **Edit** in the **Settings** field to unlock the field for editing.

3. Check the **Enabled** box to turn on the email reporting feature, and enter the **SMTP Host Address** and **SMTP Port Number** provided by the facility's IT department.

4. In the **From Address** field, input the facility's preferred from address, e.g. **TekCARE550@hospitalname.com**.

To automatically send Tek-CARE® Reporting System reports via email, check the *Reports Enabled* checkbox. If the *Send Missed Reports* box is checked, the report emailer will send scheduled reports that were missed when it was not running.

5. Click **Apply**.

6. To add email address to receive reports, click the **Add (+)** button in the **Email Addresses** pane.

7. Type an email address in the **Email Address** field in the **Details** pane. To leave the subject line blank on all email sent to the address, check the **No Subject** box. This may be useful if the email address is being used to send text messages to a cell phone.

8. In order to send a SMS message to a cell phone, it is necessary to know both the phone number and the cell carrier's mail-to-SMS gateway. Information about cell carrier mail-to-SMS gateways can be found at www.wikipedia.org/wiki/List_of_SMS_gateways

9. Click **Apply** to add the email address.

10. Repeat for each additional email address.

11. If the facility will use email call alerts select **Pagers** from the page selection pane and click the **Edit** button in the **RF Paging Settings** pane. Check the **Enabled** box under **General Settings** to turn on email call and alarm notifications. Also verify that the **Auto Page** box is checked under **Automatic Paging Settings** and that the **Regenerate**, **Secondary**, and **Tertiary** boxes are set to the factory defaults of **300**, **450**, and **600** respectively.

These numbers represent seconds between when paging events. If the call that caused the page to be sent is not reset within 300 seconds, a second page will be sent to the first pager. If the call remains unanswered after 450 seconds, a secondary pager is contacted. If the call still remains unanswered after 600 seconds, a tertiary pager is contacted. These settings may be modified if the facility so desires.

Email addresses must be associated with staff member before email reports or calls can be sent. When staff is added, the installer or facility can choose which email address to associate with each staff member. This procedure may be found in the **Add Facility Staff** section.

Select File>Save Configuration to save your programming changes.

Set Up Paging

Skip this step if your system does not include pagers. Pagers supplied by TekTone® are programmed with unique identifying CAP codes which are used to add the pagers to the Tek-CARE® system. The system includes several standard text messages that can be sent to pagers—custom text messages can also be added.

In this section, the paging transmitter will be set up, and all pagers will be added to the system. Pagers will be associated with individual staff members when staff members are added to the system in the **Add Facility Staff** section.

The Tek-CARE® system utilizes a **NC369 Paging Transmitter** to communicate with RF pagers. This paging transmitter includes a separate setup manual to help configure the transmitter for use with a Tek-CARE® system. Complete the paging transmitter setup process before proceeding.

First, enable paging:

1. Click on **Pagers** in the page selection pane of the Config Tool.
2. Click on the **Edit** button in the **RF Paging Settings** area.
3. Check the box next to **Enabled**.
4. **Protocol Settings** must match the programming settings of the paging transmitter. For the NC369 Paging Transmitter, these settings are
 - **Base Type: Scope**
 - **CAP Base: 10000**
 - **RF Baud: Normal (512)**
 - **COMP2 Esc: Enabled**.
5. Click on the **Apply** button.

Edit Paging Settings

Several options in the paging system are customizable according to the facility's specifications. To access these customizable settings, unlock the **RF Paging Settings** field by clicking **Edit**.

The **Base Supervision** option enables the paging transmitter base to be supervised by the Tek-CARE® system. By default this option is not selected, but can be selected to monitor the status and show a **RF Paging Base Fault** in the Event Monitor software if communication between the Tek-BRIDGE™ and NC369 paging module is lost.

Under **Automatic Paging Settings**, there are several options regarding when pages are resent to the primary staff member, and when secondary and tertiary staff members are notified. By default, **Auto Page** is enabled, **Regenerate** is set to **300**, **Secondary** is set to **450**, and **Tertiary** is set to **600**. These settings govern when other staff members receive pages after the transmitter in alarm has not been reset. For example, if the default settings are maintained and a call is placed, the system will page the primary staff member immediately, and resend pages every 300 seconds until the call is reset at the station. If the call has not been reset in 450 seconds, a secondary staff member is notified, and if the call still remains unacknowledged after 600 seconds, a tertiary staff member is notified. Primary, secondary, and tertiary recipients are determined when staff assignments are added to the system during system customization.

The options under **Message Fields** determine what information is sent in each text message. Check or uncheck the desired information to be sent.

Pages and call alerts can be sent to RF pagers, email addresses, or both. Email notification requires use of the **LS453 Email Output** module. The following steps cover adding RF pagers and email addresses to the paging system. For email output setup, see **Set Up Email and SMS Output**.

Add RF Pagers:

1. Click on the **Add (+)** button in the **RF Pagers** area.
2. Type a pager's CAP code in the **Details** area and click on the **Apply** button.
3. Repeat for each pager.

Add Email Addresses

1. Select **Email** in the Config Tool page selection pane.
2. Click the **Add** button to unlock the **Details** editing pane. Type an email address into the field, and choose whether or not to send emails to this address without a subject. Sending without a subject is useful if call alerts are to be sent to cell phones.
3. In order to send a SMS message to a cell phone, it is necessary to know both the phone number and the cell carrier's mail-to-SMS gateway. Information about cell carrier mail-to-SMS gateways can be found at www.wikipedia.org/wiki/List_of_SMS_gateways
4. Click **Apply** to add the email to the email address list.

The Tek-Care® system comes with a number of frequently used preprogrammed text messages, but in some cases, facilities will require specific text messages to be added. Preprogrammed messages can be changed, and unneeded messages can also be deleted.

Add Custom Text Messages:

1. Choose **Staff** in the page selection pane of the Config Tool.
2. Click on the **Add (+)** button in the **Text Messages** pane.
3. Type a custom message in the **Details** area.
4. Check the **Has Subject** box to automatically include the calling location with the message.
5. Select **L1, L2, or L3** staff type to send this message to just one staff type; select **None** to send this message to all staff types.
6. Click on the **Apply** button.
7. Repeat for each custom text message.

Select File>Save Configuration to save your programming changes.

Change Preprogrammed Text Messages

1. Choose an existing text message in the **Text Messages** pane and click the **Edit** button in the **Details** pane.
2. Modify the message in the **Details** pane and check the **Has Subject** box to automatically include the calling location with the message.
3. Select a **Staff Type** to direct the message to a specific staff type or choose **None** to send the message to all staff types.
4. Click the **Apply** button to accept the changes.

Select File>Save Configuration to save your programming changes.

Delete Text Messages

To delete an unneeded text message, highlight the message in the **Text Messages** pane and click the **Delete** button.

Select File>Save Configuration to save your programming changes.

Once all changes have been made, choose **File>Commit Configuration to System** to write the changes to the Tek-CARE® system.

Configure Call Types and Hardware Types

These settings will not need to be altered for most installations.

The Config Tool's **Call Types** page is used to change call-type specific behaviors, such as priority and tones. You can also modify the system default call filters (All Calls, High Priority Calls, No Calls, and Only Code), or add new call filters for use with staff and pager assignments.

The **Hardware** page in the Config Tool is used to change or add station-specific behaviors. For example, an SF502 can be a Call/Alarm Device or a Check-In Device.

Select File>Save Configuration to save your programming changes.

Set Up Central Monitoring

When central monitoring is enabled, the Event Monitor software sends events (such as alarms, resets, and missing transmitters) via a serial connection to the NC502 PC Alarm Panel. The NC502 PC-Alarm panel dials the central monitoring facility's telephone number and transmits the events to the central monitoring facility.

Create Central Monitoring Shifts:

Follow the instructions in **Step 11: Create Shifts** to create the time periods when central monitoring is to be enabled. Central monitoring shift names should be prefixed with "CM" to differentiate them from the shifts you create for other purposes.

Now, enable Central Monitoring:

1. Click on ***Central Monitoring*** in the page selection pane of the Config Tool.
2. Click on the **Edit** button in the **Settings** area and check the **Enabled:** box.
3. Set the **Port:** to COM 6, and the baud to match the central monitoring facility's specifications.
4. Type the facility's 4-digit account code, as assigned by the central monitoring facility, in the **Account:** box. (Valid characters are the numbers 0-9 and the letters B-F) This 4-character code is sent with every event to the central monitoring facility, and is used to identify the event's originating Tek-CARE® facility.
5. Note the facility's Account Code here: _____
6. Configure dialing options, as needed, to disable call waiting, to use a prefix to dial an outside line, or to dial "1" for 10-digit numbers.
7. Click on the **Apply** button to save the new settings.

Select the times when Central Monitoring is active:

1. Click on the **Edit** button in the **Schedule** area.
2. The **Shifts** pane now shows all available shifts. Select the check boxes to enable the appropriate central monitoring shifts.
3. Repeat to add another shift to the list.

Create the Central Monitoring facility's phone number list:

When sending a report, the Event Monitor tries each telephone number in order and uses the first one that connects. If that telephone number stops working, the Event Monitor continues through the list until it finds another working number, retrying once per minute until it connects.

1. Click on the **Add (+)** button in the **Phone Numbers** area. Type the central monitoring facility's telephone number and click the **Apply** button. Repeat to add another phone number to the list.
2. To change the phone number sequence, click on a phone number and then click on the up and down arrows at the right to move the phone number up or down in the list.

3. Click the **Apply** button to add the phone number to the list.

Create the list of locations to be monitored:

If a location is not checked in the **Locations** list, events from that location will not be transmitted to the central monitoring facility.

1. Click on the **Edit** button in the **Locations** area.
2. Select which locations should be monitored by checking the boxes beside each location.
3. Once all locations to be monitored have been selected, click **Apply**.

Select File>Save Configuration to save your programming changes.

HL7 Admission, Discharge, & Transfer Settings

The Tek-CARE® system is capable of integration with **Admission, Discharge, & Transfer (ADT)** software using the **HL7 Standard**. If the facility uses ADT software, it can be used to automatically input pertinent resident information into the Tek-CARE® system.

1. To enable HL7 information transfer, open the **LS450 Config Tool** with the **LS576 Event Monitor** running in the background. In the Config Tool, click on **Residents** in the page selection pane, and find the **HL7 Settings** field. Click the **Edit** button to unlock the field, and check the **Enabled** box. Ask the ADT system administrator for the **HL7 Port Number**, and type the port number into the **Port:** box. Note the HL7 port number below.
2. **HL7 Port Number:** _____
3. Bed Override?
4. Click **Apply** to accept the changes.

Select File>Save Configuration to save your programming changes.

Versus® Badge System Integration

Waiting on info from Kevin

Set Up Password Protection

When password protection is enabled, staff access to various functions of the Tek-CARE® system can be controlled. Password protection is useful to prevent unauthorized hospital staff from making changes to the system such as adding or removing transmitters, changing staff assignments, or altering reporting settings. Several different passwords may be used, each protecting different system settings.

Set Up Password Protection

1. Click on **Passwords** in the page selection pane of the Config Tool.
2. On the passwords page, click the **Add (+)** button to add a password to the system.
3. In the **Settings** field, type the new password in the **Password:** box.
4. Below the **Password:** box is a list of Event Monitor features that can be password protected. Check the boxes for each feature that the facility would like to be password protected.
5. Click the **Apply** button in the **Settings** field.
6. Repeat for each additional password.

Select File>Save Configuration to save your programming changes.

Save and Commit the Custom Configuration

At this point, system configuration is complete. The following section will discuss customizing the system for the facility's needs by adding residents, staff, and other information.

The system configuration that has been created must be saved, backed up, and committed to the system.

Saving, Committing, and Backup Procedure

1. In the Config Tool, select **File>Load Configuration from System** to ensure that the most recent system configuration is loaded into the Config Tool.
2. Select **File>Save Configuration** to update the configuration saved on the Tek-BRIDGE™ hard drive.
3. Insert the included TekTone® USB flash drive into any available USB port.
4. In the Config Tool, select **File>Save Configuration As...** and browse to the USB flash drive. Type in a file name and click **Save**.
5. Safely eject the flash drive and remove it from the Tek-BRIDGE™.
6. In the Config Tool, select **File>Commit Configuration to System**.

System Customization

Once the Tek-CARE® system is set up and has been successfully tested, the system should be customized to suit the needs of the facility it is installed in. Some of the steps in system customization include adding facility staff and residents, finalizing email reporting, creating shifts and staff groups, and assigning transmitters to zones.

This portion of the installation may be performed either by the installation technician or by hospital staff since setup may include sensitive medical records and other personal resident information. Many of the functions in this section can be performed using either the **LS576 Event Monitor** or the **LS450 Config Tool**. Installers may prefer to use the Config Tool because of previous experience, and hospital staff may prefer using the Event Monitor. If applicable, each process is explained in each program.

Add Residents and Assign Them to Locations

Residents may be added to the Tek-CARE® system in one of two ways-either through the Config Tool, or in the Event Monitor. Generally, the Event Monitor method is preferred since changes in the Event Monitor are automatically written to the system, but either method is acceptable. When facility staff members add or remove residents or edit resident information, it should be done through the Event Monitor.

Add Residents in the Event Monitor

1. With the Event Monitor software running, click the **Registers** button in the lower right corner of the window. Click **Residents** in the page selection pane if it is not already selected.
2. Click the **Add (+)** button in the **Residents** pane and fill out the information fields in the **Details** pane beginning with the **Name:** field and any custom fields under the **Residents** tab.
3. To add a resident photo, click **Add (+)** in the **Image:** pane and browse to the location of the photo. Click **Open** to use the photo as the resident image.
4. Click the **Locations** tab in the **Details** pane and select a default location for the resident from the **Default Location:** drop-down menu. If the resident's default location is a two-bed room, select the **Default Side:** that for that resident.
5. Click **Apply** to write the changes to the system.
6. Repeat for each additional resident to be added.

Add Residents in the Config Tool

1. With the Event Monitor software running, open the Config Tool and select **Residents** from the page selection pane.
2. Under **Residents**, click **Add (+)** and type in the **Name:** as well as any custom information fields that have been added.
3. Select the locations of the resident by checking the boxes in the **Locations** field.
4. To add a resident photo, click **Add (+)** in the **Image:** pane and browse to the location of the photo. Click **Open** to use the photo as the resident image.
5. Click **Apply** to add the new entry to the resident list.
6. Repeat for each additional resident to be added.
7. Select **File>Save Configuration** to save the updated configuration and then **File>Commit Configuration to System** to send the configuration.

Assign Transmitters to Locations and Residents

In this step, stationary transmitters that were added to the system during system setup will be added to locations within the facility. This step also covers adding mobile pendant transmitters to residents added to the system in the previous step. During this step, refer to the programming worksheet that was created during system setup. The programming sheet should contain all the device numbers as well as the locations where the devices were installed in the facility. These device locations should correspond to locations that were added to the facility map.

Assign Pendant Transmitters to Residents in the Event Monitor

1. Click on the **Registers** button in the lower right hand corner of the Event Monitor.
2. Choose **Transmitters** from the page selection pane, and select the pendant transmitter to be assigned to a resident from the list of transmitters.
3. Click **Edit** to unlock the transmitter settings for editing and choose the resident to associate with the transmitter from the drop-down **Resident** menu.
4. Click **Apply** to assign the transmitter to the selected resident.
5. Once the settings have been applied, place a call from the transmitter that was just programmed and verify that it is associated with the correct resident.
6. Label the transmitter so that it can be given to the assigned resident, ensuring that it does not get confused with other pendant transmitters.

Assign Pendant Transmitters to Residents in the Config Tool

1. With the Event Monitor software running, open the Config Tool software. When prompted, choose **Load Configuration from System** on the splash screen.
If the Config Tool is already running, choose **File>Load Configuration from System** to ensure that the most current system configuration is open for editing.
2. In the page selection pane, choose **Transmitters** and select a pendant transmitter from the transmitters list.
3. In the **Details** pane, click **Edit**.
4. In **Details>Assignment**, choose a resident name from the **Resident** drop-down list that corresponds to the completed programming worksheet.
5. Click **Accept**.
6. Repeat for each additional pendant transmitter.
7. When all updates have been made, select **File>Commit Configuration to System**.

Assign Transmitters to Stationary Locations in the Event Monitor

For all devices besides pendant transmitters, follow the steps below to add location information to the transmitter.

1. Click on the **Registers** button in the lower right hand corner of the Event Monitor.
2. Choose **Transmitters** from the page selection pane, and select the transmitter to be assigned to a location from the list of all transmitters. Refer to the completed programming worksheet for the correct **Dev#** of the transmitter to be edited.
3. Click **Edit** to unlock the transmitter settings for editing.
4. If a **SF559 Two Button Pull-Cord** station is being edited, choose the **Used As** setting from the drop-down menu that corresponds to the insert placed in the

face of the device.

5. Refer to the completed programming worksheet to choose a location from the **Location** drop-down menu.

*Besides pendant transmitters, **SF552 Universal Transmitters** are the only system devices that can be mobile and locatable. If a universal transmitter is mounted on a piece of mobile equipment to monitor the status of that equipment, choose **Mobile** from the **Locations** drop-down menu to enable the locating feature for the selected universal transmitter. If the universal transmitter is stationary, do not select the **Mobile** setting. Instead, choose the appropriate **Used As:** and **Location** settings from their respective drop-down menus.*

6. Click **Apply** to assign the transmitter to the selected location.
7. Once the settings have been applied, place a call from the transmitter that was just programmed and verify that it is associated with the correct location.
8. Repeat for each additional transmitter to be assigned to a stationary location.

Assign Transmitters to Stationary Locations in the Config Tool

1. With the Event Monitor software running, open the Config Tool software. When prompted, choose **Load Configuration from System** on the splash screen.

If the Config Tool is already running, choose **File>Load Configuration from System** to ensure that the most current system configuration is open for editing.

2. Choose **Transmitters** from the page selection pane, and select the transmitter to be assigned to a location from the list of all transmitters. Refer to the completed programming worksheet for the correct **Dev#** of the transmitter to be edited.
3. Click **Edit** to unlock the **Details** pane for editing.
4. If a **SF559 Two Button Pull-Cord** station is being edited, choose the **Used As** setting from the drop-down menu that corresponds to the insert placed in the face of the device.
5. Refer to the completed programming worksheet to choose a location from the **Location** drop-down menu.

*Besides pendant transmitters, **SF552 Universal Transmitters** are the only system devices that can be mobile and locatable. If a universal transmitter is mounted on a piece of mobile equipment to monitor the status of that equipment, choose **Mobile** from the **Locations** drop-down menu to enable the locating feature for the selected universal transmitter. If the universal transmitter is stationary, do not select the **Mobile** setting. Instead, choose the appropriate **Used As:** and **Location** settings from their respective drop-down menus.*

6. Click **Apply** to assign the transmitter to the selected location.
7. Once the settings have been applied, place a call from the transmitter that was just programmed and verify that it is associated with the correct location.
8. Repeat for each additional transmitter to be assigned to a stationary location.

9. When all updates have been made, select **File>Commit Configuration to System**.

Assign Check-In Times to Check-In Transmitters

In this step, check-in times created during system setup will be assigned to their corresponding check-in transmitters.

Check-In times must be assigned in the Event Monitor software.

Assign Check-In Times to Transmitters

1. In the Event Monitor software, click the **Registers** button, and then chose **Transmitters** from the page selection pane.
2. Click on the **Dev#** of a check-in transmitter in the list at the left. Refer to your completed programming worksheet to determine which resident's room the transmitter is located in. (**SF559 Two Button Pull-Cord Stations** programmed with a **Check-In** button membrane insert are used as check-in devices.)
3. Click on the **Check In** tab in the **Transmitters-Details** area. This tab is only available for transmitters that have been configured as check-in devices.
4. Click on the **Edit** button in the **Transmitters-Details** area, select one or more **Check-In Times**, and click the **Apply** button. Assign just one check-in time per day to a transmitter, although one check-in time may be assigned for weekdays and another for weekends. The available check-in times are dependent on shifts

set up earlier in the Config Tool.

Add Facility Staff

Skip this step if the facility does not require the use of paging or email communication. In this step, staff members will be added to the system and assigned to pagers or email addresses. Pagers and email address were added to the system in **Step 11 of System Installation and Setup**.

Add Facility Staff in the Event Monitor

1. In the Event Monitor software, click the **Registers** button and then select **Staff** from the page selection list.
2. To add a new staff member, click the **Add (+)** button to unlock the **Details** editing pane. Type the staff member's name in the **Name:** field, select the correct type (if any) from the **Staff Type:** drop-down menu, and check the **Active:** box to enable the staff member.
3. Check the boxes in the **Paging** and **Email Address** lists for which pager(s) and email address(es) to associate with the new staff member. If the staff member is to be assigned to one or more home zones, check the appropriate boxes in the **Home Zones** list as well. If the staff member is to be assigned to all zones, leave all zones checked.
4. Click **Apply** to add the new staff member.

Add Facility Staff in the Config Tool

1. With the Event Monitor software running, open the Config Tool software. When prompted, choose **Load Configuration from System** on the splash screen.
If the Config Tool is already running, choose **File>Load Configuration from System** to ensure that the most current system configuration is open for editing.
2. Choose **Staff** from the page selection pane.
3. To add a new staff member, click the **Add (+)** button to unlock the **Details** editing pane. Type the staff member's name in the **Name:** field, select the correct type (if any) from the **Staff Type:** drop-down menu, and check the **Active:** box to enable the staff member.
4. Check the boxes in the **Paging** and **Email Address** lists for which pager(s) and email address(es) to associate with the new staff member. If the staff member is to be assigned to one or more home zones, check the appropriate boxes in the **Home Zones** list as well. If the staff member is to be assigned to all zones, leave all zones checked.
5. Click **Apply** to add the new staff member to the system.

6. Repeat for each additional staff member.
7. When all updates have been made, select **File>Commit Configuration to System**.

Create Staff Groups

Skip this step if the Tek-CARE® system does not include the use of paging or email communication. A staff group is a group of facility staff members that have similar characteristics-for example, the staff members work the same shift, cover the same zone, are all nurses, or are all aides. A staff member can be added to multiple staff groups.

Staff groups are used to send custom text messages to the pagers of a specific group of staff members. They may also be used to create staff assignments for automatic text messages

Creating Staff Groups in the Event Monitor

1. In the Event Monitor software, click the **Registers** button and then select **Staff Groups**.
2. Click the **Add (+)** button in the **Staff Groups** pane to unlock the **Details** editing pane.
3. In the **Name:** field, type the name of the new staff group, then check the boxes beside the staff members that should be added to the group.
4. Click **Apply** to add the staff group to the system.
5. Repeat for each additional staff group to be created.

Creating Staff Groups in the Config Tool

1. With the Event Monitor software running, open the Config Tool software. When prompted, choose **Load Configuration from System** on the splash screen.
If the Config Tool is already running, choose **File>Load Configuration from System** to ensure that the most current system configuration is open for editing.
2. Select **Staff** from the page selection pane and click **Add (+)** in the **Staff Groups** pane.
3. Type a name in the **Name:** field of the **Staff Groups>Details** pane.
4. Check the boxes of the staff members to be added to the new staff group. When all staff members have been selected, click **Apply** to create the new staff group.

5. Repeat for each additional staff group.
6. When all updates have been made, select **File>Commit Configuration to System**.

Create Staff Assignments

The Tek-CARE® system can send automatic text messages to pagers or email address in response to calls from system transmitters. In order to send these notifications, the Tek-CARE® system must associate transmitters, shifts, and/or zones with staff members or staff groups.

Staff Assignments are used to assign shifts to staff and staff groups to determine when text messages are sent to pagers and email addresses. Staff Assignments are also used to allocate individual transmitters or zones to staff member or staff groups. Mapping individual transmitters or zones to facility staff determines which devices will send call alerts to staff members.

If additional shifts are needed, add them in the Config Tool before proceeding.

1. With the Event Monitor software running, open the Config Tool software. When prompted, choose **Load Configuration from System** on the splash screen.
If the Config Tool is already running, choose **File>Load Configuration from System** to ensure that the most current system configuration is open for editing.
2. To add a new shift, refer to **Create Shifts in System Setup and Installation**.
3. Save the configuration (**File>Save Configuration**) and commit the updated configuration with new shifts to the system. (**File>Commit Configuration to System**).

Create Staff Assignments in the Event Monitor

1. In the Event Monitor software, click the **Registers** button and choose **Assignments** from the page selection pane.
2. Click on the **Add (+)** button to unlock the **Details** pane for editing.
3. In the **Details-Staff** pane, choose the **Staff Type (Staff, Group, or All Staff)** and the **Staff Name** (the name of a staff member or a staff group) from their respective drop-down menus.
4. From the **Details-Settings** pane, choose the **Level (Primary, Secondary, or Tertiary)** and the **Shift** from the drop-down menus.
5. In the **Details-Device** pane, select the appropriate **Type (Station, Transmitter, Zone, Foreign, or All Devices)**, **Name** (determined by the **Type** selection), **Call Filter (All Calls, No Calls, Only Code, High Priority Calls, or All But Presence)**, and **Fault Filter (All Faults, No Faults, Missing, or Maintenance)** settings. If a page should be sent when the call is reset, check the **Page Resets** box.
6. Click **Apply** to add the assignment
7. Repeat for all additional staff assignments.

Create Staff Assignments in the Config Tool

1. With the Event Monitor software running, open the Config Tool software. When prompted, choose **Load Configuration from System** on the splash screen.
If the Config Tool is already running, choose **File>Load Configuration from System** to ensure that the most current system configuration is open for editing.

2. Choose **Assignments** from the page selection pane
3. In the **Details-Staff** pane, choose the **Staff Type (Staff, Group, or All Staff)** and the **Staff Name** (the name of a staff member or a staff group) from their respective drop-down menus.
4. In the **Details-Device** pane, select the appropriate **Type (Station, Transmitter, Zone, Foreign, or All Devices)**, **Name** (determined by the **Type** selection), **Call Filter (All Calls, No Calls, Only Code, High Priority Calls, or All But Presence)**, and **Fault Filter (All Faults, No Faults, Missing, or Maintenance)** settings. If a page should be sent when the call is reset, check the **Page Resets** box.
5. From the **Details-Settings** pane, choose the **Level (Primary, Secondary, or Tertiary)** and the **Shift** from the drop-down menus.
6. Click **Apply** to add the assignment
7. Repeat for all additional staff assignments.
8. When all updates have been made, select **File>Commit Configuration to System**.

Update the Saved Configuration and Print the Central Monitoring Device List

System configuration should now be complete, and the system should be completely functioning. It is now time to perform save and back up the final system configuration. Once complete, the flash drive containing the backup should be turned over to the facility for safekeeping.

Create the Final Backup

1. With the Event Monitor software running, open the Config Tool software. When prompted, choose **Load Configuration from System** on the splash screen.
If the Config Tool is already running, choose **File>Load Configuration from System** to ensure that the most current system configuration is open for editing.
2. Select **File>Save Configuration** to update the configuration saved on the Tek-BRIDGE™ hard drive.
3. Insert the included TekTone® USB flash drive into any available USB port.
4. In the Config Tool, select **File>Save Configuration As...** and browse to the USB flash drive. Type in a file name and click **Save**. If a configuration already exists on the flash drive, duplicate the file name of the existing configuration to overwrite the old configuration.
5. Safely eject the flash drive and remove it from the Tek-BRIDGE™. In the Config Tool, select **File>Commit Configuration to System**.

Print the Central Monitoring Device List

The Central Monitoring Device List is used by your central monitoring facility to match the ID that is transmitted with an event to a resident's name and location. To create the device list, click on the **Tools** menu at the top of the Config Tool window and then select **Central Monitoring Device List**. The device list will appear in a browser window. Print the list and provide it to your central monitoring facility.

Exit the Config Tool software and turn the flash drive over to the facility.

Using the Tek-CARE® Reporting System

The Tek-CARE® Reporting System is part of the Tek-CARE™ software suite. The reporting system records nurse call system events and faults. It is also used to create custom summary and detail reports on nurse call system activity.

Accessing the Tek-CARE® Reporting System

The reporting system is accessible by any computer on the facility's local area network (LAN). The reporting system can be password protected using the Config Tool—remove Reporting from default access, and then add one or more passwords with access to Reporting. See the IL855 Config Tool Manual for more information.

There are two ways to start the Tek-CARE® Reporting System:

Using the Event Monitor or Remote Event Monitor:

1. Click on the (menu) button and then select *Launch Reporting*.
2. If password protection is enabled, the Tek-CARE® Reporting System password window will appear. Enter an access password and click **Login**.
3. The Tek-CARE® Reporting System window will appear.

Using any computer on the facility's local area network (LAN):

1. Run a web browser, such as Internet Explorer®, on the networked PC.
2. Type the Tek-BRIDGE™'s auxiliary static IP address into the web browser's address bar (see **LAN connection procedure** in the installation manual for the IP address).
3. **If password protection is enabled, the Tek-CARE® Reporting System password window will appear. Enter an access password and click Login.**

Creating Reports

About Datasets

In order to keep report creation times short while the system collects more and more data, calls are stored in datasets that span one month. A second set of datasets is also maintained that includes calls from the middle of one month to the middle of the next. Reports cannot span datasets.

Create a History Report

History reports contain information about calls, alarms, and system faults. To create a history report, click the **History Report** button on the reporting home screen.

A screen will appear that gives many options for report filtering. By default, the reporting system is configured to provide a report that contains all information about all calls and events.

Select a date range for the report by choosing one of the options from the **Filter** drop-down menu or entering a customized date and time range manually. The drop-down list includes such options as **Last Hour**, **Last 24 Hours**, **Last 7 Days**, **This Month**, and many more.

In the following filter boxes, select which information should be included in the report. For example, reports can be created that concentrate on a particular patient, transmitter, type of event, or any other filter criteria.

Once all the appropriate filters have been selected, click the **Create Report** button to

Using the Tek-CARE® Reporting System

view the report containing the desired information.

History Report Quick Links

To speed up report creation, the Tek-CARE® Reporting Software provides several options for quick and easy creation of commonly requested reports. By clicking the **History Report Quick Links** button on the reporting home screen, reports including all events from the **Last Hour**, **Last 24 Hours**, **Last 7 Days**, **Last Week**, **This Week**, and several more options are available.

Create a Maintenance Report

A Maintenance Report shows information about battery status of system transmitters and information about power loss to devices powered by plug-in transformers.

There are two ways to create a maintenance report.

From the Event Monitor:

Click the **Menu** button in the event monitor and choose **Maintenance Report** from the menu. The report will open in a new window.

From the Reporting Home Page

Click the **Maintenance Report** button on the reporting home page.

Viewing and Interpreting Report Data

Tek-CARE® reports are presented with all requested data visible in table format. The information contained in the tables may also be viewed in graph format for easier interpretation.

To view graphs of information in a particular section, click the **Show Graph** button below the table. To hide a graph, click the **Hide Graph** button below the graph. To quickly view all available graphs, click the **Show All Graphs** button at the top of the report page. To hide all graphs, click the **Hide All Graphs** button at the top of the report page.

Each section of the report may also be hidden by clicking the **Hide Section** button under the section title. The section then collapses, hiding the data from view. To reveal the hidden data, click the **Show Section** button under the section title.

To hide all sections, click the **Hide All Sections** button at the top of the report page. To view all sections, click the **Show All Sections** button at the top of the report page.