Wireless RF Remote Control System

Hand Held Transmitter and Plug-in Receiver

Imagine turning on your house lights from inside your car. Or turning off your stereo from across the room. This wireless Radio Frequency (RF) control now makes it possible. RF Controls are an easy, convenient way to remotely control lights, and appliances in and around your home or office. The invisible RF signal passes through walls, doors, ceilings, floors and even around corners. Simply plug the desired appliance into the receiver and the receiver into any outlet. A press of the button on the hand held transmitter, turns whatever you, we plugged into the receiver on or off.

Channel Code Information

Three operating channels are available so you can control three separate systems at different locations in your home. Be sure to match common frequency channels, for those devices you want operated by the same switch.

INSTRUCTIONS

Notes: The total load of appliances connected to the Plug-in Receiver should not exceed 960 Watts or 8 Amps.

Do not use Plug-in Receiver to control appliance loads that may be dangerous to turn on remotely (i.e. power tools).

The Plug-in Receiver must be located within 100 feet of the Wall

- Remove back cover of Hand Held Transmitter by pushing cover down.
- Remove plastic battery tab by gently pulling it from the battery compartment (this tab isolates the battery until it's ready for use and insures that you'll have a fresh battery).
- ▶ Reassemble Hand Held Transmitter.
- ▶ Plug your light/appliance into the outlet on the Receiver being careful to match the wide blade of the light/appliance (if equipped) with the wide slot on the outlet.
- ▶ Plug the Receiver into any standard grounded 110/120 Volt outlet being careful to match the wide blade of the Receiver with the wide slot on the outlet. Fully insert.
- ▶ Hold your Hand Held Transmitter at the location where you wish to use it.
- ▶ Press Switch to determine if your light/appliance turns on and off. If your light/appliance does not respond try relocating the transmitter or receiver. Large metal objects such as metal doors should not be in the way of the Transmitter and Plug-in Receiver since this could decrease the range of the RF signal.
- ▶ Attach transmitter to any keyring or place in a convenient location around the house.

OPERATION

Simply press the button on the Hand Held Transmitter to turn the light/appliance you've plugged into the Receiver on or off.


Note: Wait at least 3 seconds after you press the transmitter on or off before you press it again. This allows for the RF signal transmission to be completed.

BATTERY REPLACEMENT

Your RFK106 battery should last 2-3 years under normal use.

To replace battery:

- Remove back cover of Hand Held Transmitter by pushing cover down.
- ▶ Remove battery from Battery Compartment and replace with another 12Volt battery (Radio Shack™ 23, 23M, VR22, EL22 or equivalent).

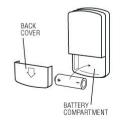

Troubleshooting Guide SYMPTOM PROBABLE CAUSE Light does not 1. Circut breaker or fuse is turned turn on. 2. Switch on lamp is turned off. 3. Bulb is defective. 4. Weak battery. 5. Lamp module or lamp is loose. Light does not 1. Transmitter signals are being turn off. blocked. Check for metal objects that could block the signal, or reposition the transmitter. 2. Switching too fast. Wait 3 seconds between toggles. 3. Weak battery. Light comes 1. Short term power line failure. 2. Transmitter out of range. on randomly. Lamp module or lamp is loose.

SPECIFICATIONS

240 Watts Tungsten Load, 120 Volts~, 50-60 Hz
Appliances up to 960 Watts
Appliances up to 960 Watts
8 Amps General Use Load, 120 Volts~, 50-60 Hz
Range 100 feet
Battery 12 Volt, Radio Shack™ 23, 23M, VR22, EL22
or equivalent
FCC Approved.
Plug-in receiver for indoor use only

5 Year Warranty

AmerTac™ warrants this product to be free from defects in material and workmanship for a period of 5 years from the date of purchase. AmerTac's obligations are limited to repairing or replacing any defective units and are effective only if such units are returned within 5 years of the purchase date, to AmerTac, Saddle River Executive Centre, One Route 17 South, Saddle River, NJ 07458. Warranty void if damage is due to accident, negligence, misuse, alteration or improper installation. In no circumstance will AmerTac be liable for consequential or incidental damages relating in any way to this product.

FCC Information

This device complies with Part 15 of the FCC Results. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interface, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



Questions, ¿Preguntas?, La question? 1-800-777-0802