



Manual

REMOTE CONTROL LIGHT

PH-TL001

POONG HAN ENGINEERING CO., LTD.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment

WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INFORMATION TO USER:

This equipment has been tested and found to comply with the limit of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient / Relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit difference from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help


REMOTE CONTROL LIGHT

1. Remote control unit – to change the battery, slide off the back cover [Fig. A] and replace with a new battery [6V camera]

The on/off button is underneath the front cover. Slide open the front cover to press the on/off button.

To turn on the remote light press the remote button and hold for one second.

FIG. A

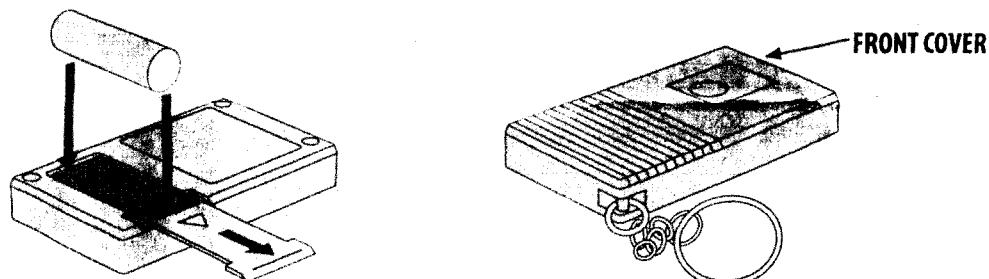


2. Remote light – to change the battery, slide off the cover and insert two AA batteries. [Fig. B]

Match the negative/positive markings shown in the battery compartment to the batteries.

To turn off the light, slide the switch to the "off" position or press the button on the remote control unit.

FIG. B

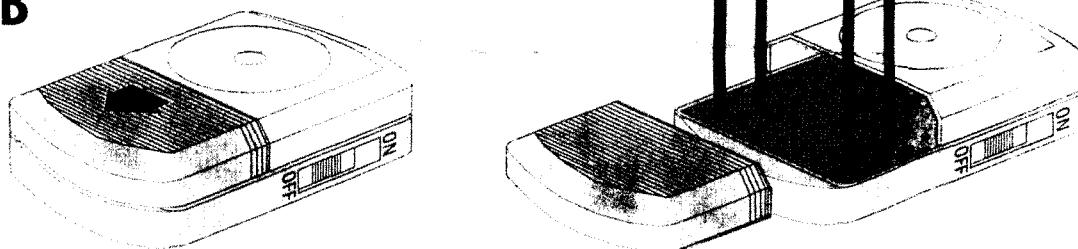


3. Installing the light — the unit can be mounted on any Velcro® surface.

Step 1 - Find the Velcro® strips sewn inside on the tent ceiling and outside next to the front door.

Step 2 - Mount the light to the Velcro® by pressing the back of the light firmly against the strips.

Note:

- Always remove the lights from tent before folding it up.
- Always remove the batteries after each camping season.
- Batteries for the remote lights are not included.

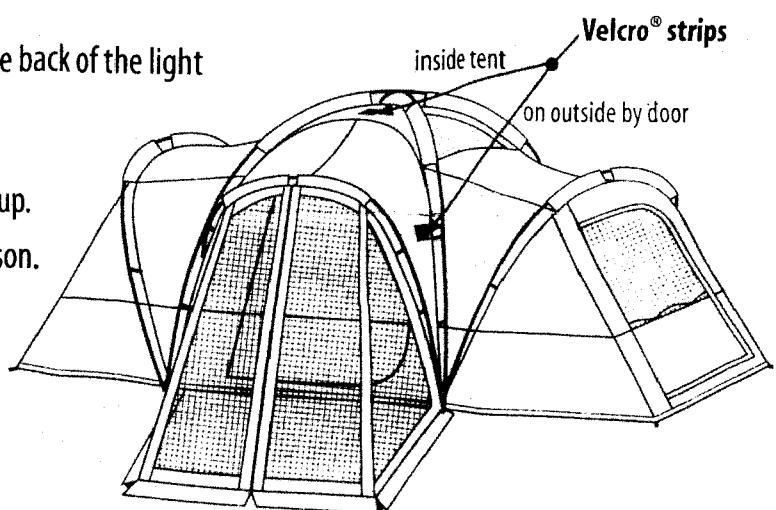

See instruction manual for customer service information.