


# **Instruction of Remote Control Light**

## **Contents.**

1. How to change the battery of controller.
2. How to change the battery of lamp.
3. How to installing the light on the surface.
4. How to operating the lamp.


## **1. How to change the battery of controller.**

To change the battery, slide off the back cover and replace with new battery (6V camera). The “On/Off button is underneath the front cover. Slides open the front cover to press the On/Off button. To turn on the remote light press the remote button and hold for one second.

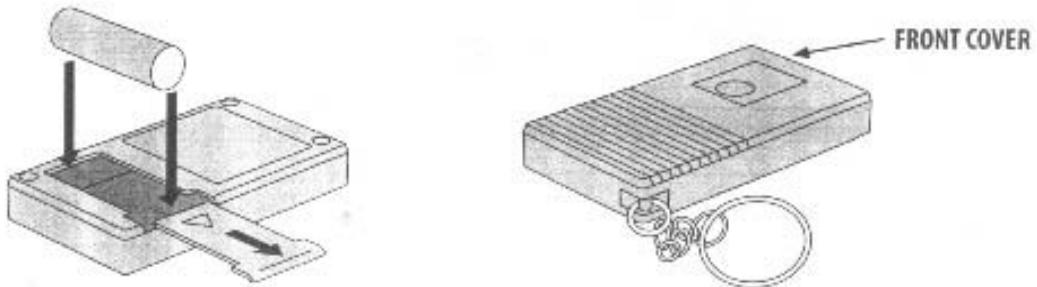

## **2. How to change the battery of Lamp.**

To change the battery, slide off the front side bottom cover and insert two AA batteries. Match the negative/ positive marking shown in the battery compartment to the batteries.

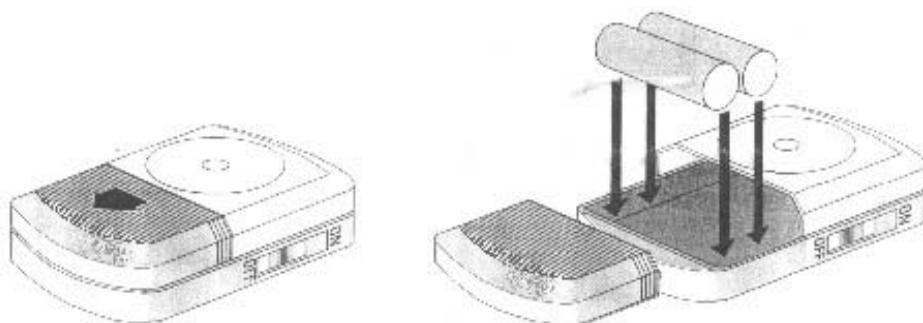

### 3. How to installing light on the surface of tent.

**First step** - Find Velcro strips sewn inside on the tent ceiling and out side next to the front door.


**Second step** – Mount the light to the Velcro by pressing the back of the light firmly against the strips.



### 4. How to operating the lamp.

**First step** - Press the lights switch to the on position.

**Second step** -If slide out of front cover on the controller, it may can see red button. And press the red button for one second to turn it on the light. When you press again, that the light is back to off position. If you not turn the light switch to on position, the remote controller is not operating.

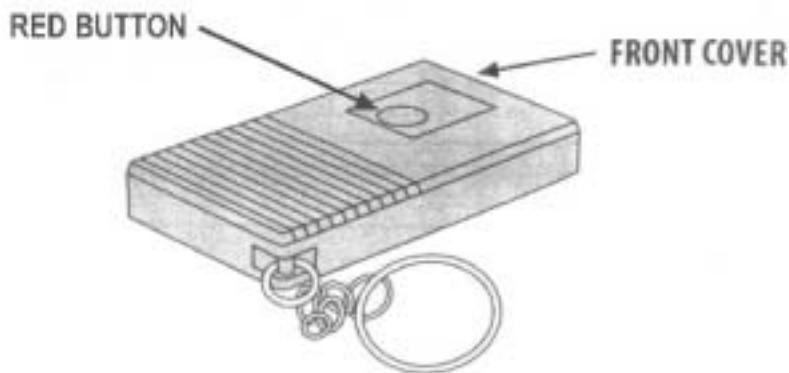

#### Note:

- \*Always remove the lights from tent before folding it up.
- \*Always remove the batteries after each camping season.
- \*Batteries for the remote lights are not included.