


User Manual
Bluetooth Headset
Model Name: hi-Edo
FCC ID: R2MHI-EDO

Legend

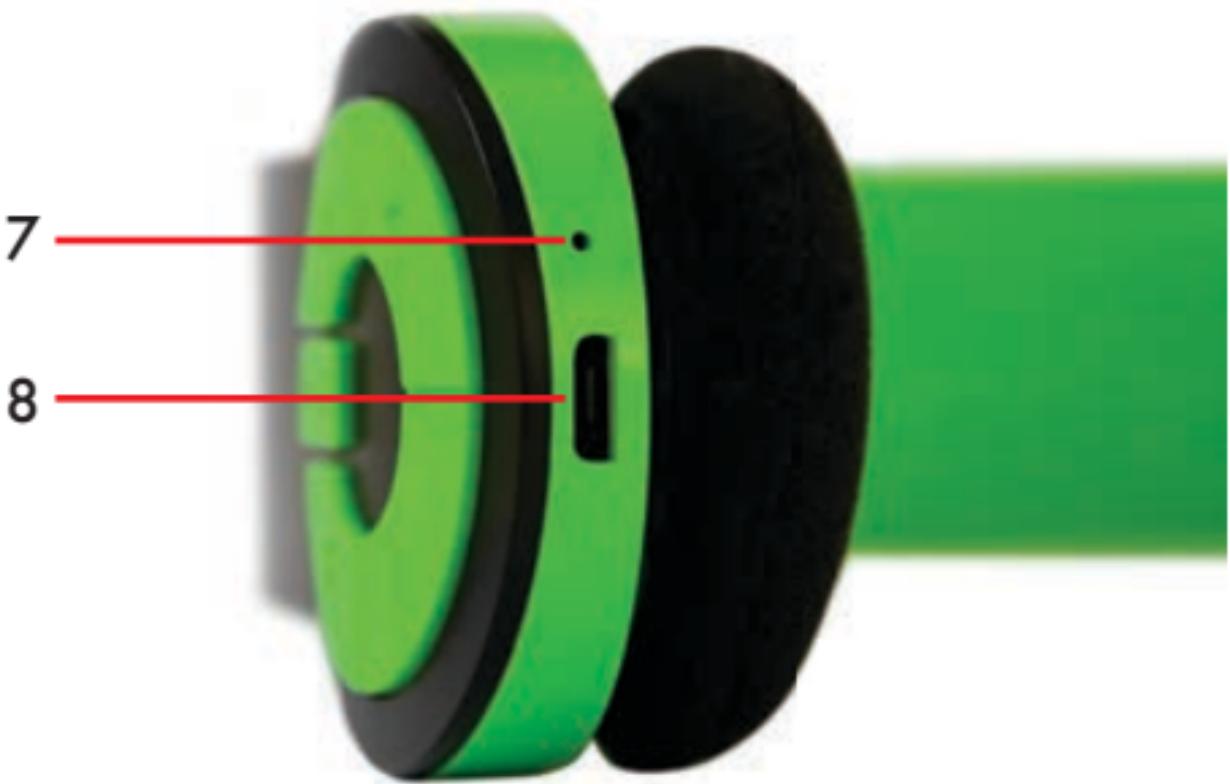

Main functions

1) Switch on hi-Edo.

To switch on hi-Edo hold the button (1) until warning LED (2) turns on. Afterwards hi-Edo automatically connects itself to the last paired device, if available, and the warning LED (2) flash slowly in blue to confirm the connection. If there is no available paired device or if it is out of range of hi-Edo, it turns off in about 2 minutes in order to avoid battery discharging.

2) Pair hi-Edo with a compatible device.

To pair hi-Edo with a compatible device, it must be set in pairing mode, signaled by the warning LED (2) which flashes alternately and quickly in red and blue. To activate the pairing mode you need to switch off hi-Edo and switch it on holding the starting button (1) until the warning LED (2) will flash alternately red and blue.

Now you can select hi-Edo from the list of found devices on your device. As soon as the device is paired, the warning LED (2) flashes slowly in blue.

Now is possible to listen to music and to make calls* through hi-Edo (*thanks to the integrated microphone (7)).

3) Switch off hi-Edo.

To switch off hi-Edo hold the central button (1) for 4 seconds until the warning LED (2) flashes in red.

*Only if paired to a mobile phone.

Playing music

Thanks to the buttons on the right side of hi-Edo is possible to play, stop and control the music selection on your device. Moreover is possible to adjust the volume.

- 1) To play press shortly the button (1).
- 2) To adjust the volume press the volume button "+" (3) to increase it or the volume button "-" (4) to decrease it.
- 3) To switch to the next song in your playlist press the button "▶▶" (5). To switch to the previous song in your playlist press the button "◀◀" (6)
- 4) To stop the music press shortly the button (1).
- 5) It is even possible to use the control all the functions previously explained through the paired device, if supported.

While you are listening to the music the warning LED (2) flashes in blue.

WARNING: Before using hi-Edo play the music without wearing it to be sure that the volume is not too loud, in order to avoid ear damage.

Make and receive a call

If hi-Edo is paired to a mobile phone is possible to make and receive calls, as using a Bluetooth headset, thanks to the internal microphone (7) and to the buttons on the side.

1) Answer a call.

To answer a call press briefly the button (1).

2) End a call.

To end a call press briefly the button (1) during the call.

3) Reject an incoming call.

To reject an incoming call hold the button (1) for 2 second until you hear a long tone, then release the button. The incoming call is rejected.

4) Activate voice dialing / voiceover / Siri.

If your phone supports voice dialing / voiceover / Siri you can activate it when no call is in progress.

To activate voice dialing / voiceover / Siri hold the button (1) for 2 seconds until you ear a tone from the hi-Edo; when you hear the second tone you can say the command.

5) Call the last selected number.

Press twice (double click) the button (1).

If the paired device supports it, you can perform all the functions described in this chapter while you are listening to the music.

Charge hi-Edo

When hi-Edo battery is discharged warning LED (2) starts flashing red. It indicates that in few minutes hi-Edo is turning off in order to preserve the battery. To charge the battery connect the hi-Edo charger cable to a charger equipped with USB port, or alternatively, to a USB port on your laptop/computer.

It is possible to charge hi-Edo while in use.

As soon as the charger cable is connected to the plug (8), the warning LED (2) turns on red and it turns off once the charging is completed. When the hi-Edo is fully charged it's possible to unplug it from the charger.

Instead of the cable included, is possible to use every cable equipped with a micro USB connector.

Technical specifications

Battery life: between 15 and 20 hours

Battery duration on standby: until 15 days

Charge time: about 30 minutes

Operating range: 10 metres (30 metres outdoor)

Weight: 150g

Dimension (LxHxD): 14,4cm x 16,5cm x 4,5cm

Warnings

- Avoid listening to the music at loud volume for a long time: risk of ear damage.
- Follow the local rules about mobile phones usage and their accessories while driving.
- Keep hi-Edo out of the reach of small children to avoid chocking hazard.
- Switch off hi-Edo before a flight. Do not use it on a plane if not permitted by the airline.
- Keep hi-Edo dry and avoid humidity.
- Disconnect hi-Edo from charging cable before polishing it.
- Do not use hi-Edo if it does get wet.
- Do not try to open, disassemble or overcharging the lithium-ion battery of hi-Edo: danger of explosion.
- At the end of battery lifecycle do not dispose it as household waste. Dispose of batteries according to local regulations. Please recycle when possible.

IMPORTANT REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.