


Setup Photographs

View Radiated Disturbance Configuration – Horizontal

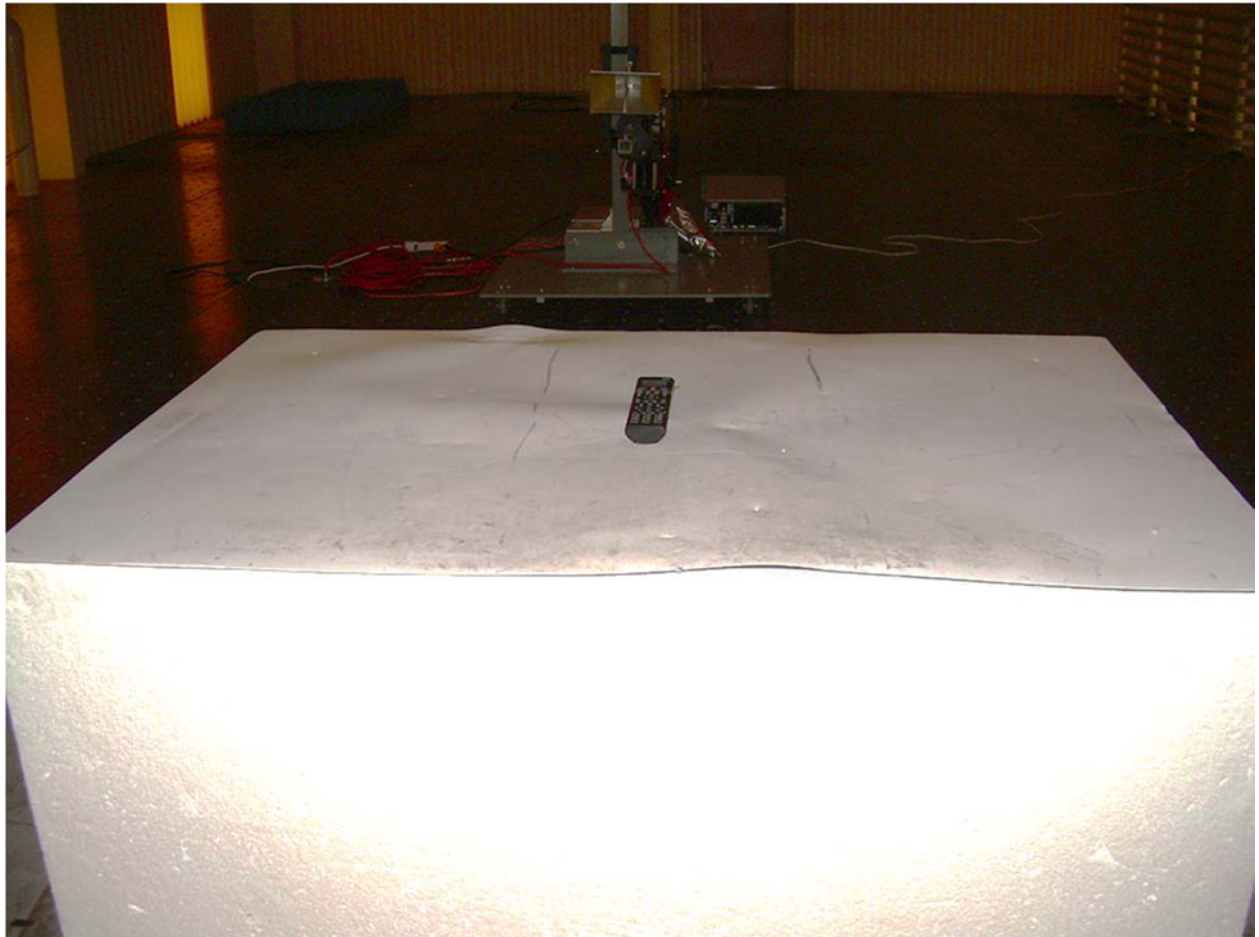

View Radiated Disturbance Configuration – On Edge



View Radiated Disturbance Configuration



Front View AC Mains Conductance



Back View AC Mains Conductance

