

Model 28076T Instructions

Insert the Remote Base's 3-Prong Plug into a grounded outlet. Plug appliance into 3 outlets located on bottom of Remote Base. Using the Wireless Remote Control, press ON/OFF/ALL buttons to activate/deactivate devices of all 3 outlets. Using the Wireless Remote Control, press ON/OFF/1 or 2 or 3 buttons to activate/deactivate devices of outlet marked 1 or 2 or 3.

Battery Replacement

Use 23A 12 volt battery(L1023), to replace. Screw off back cover of Wireless Remote Control. Do not dispose of batteries in fire. Batteries may explode or leak.

Caution:

DO NOT splice, repair or modify. Unplug when not in use. Fully insert plug. Do not use damaged remote sets. Inspect periodically. Use within the electrical rating marked on the remote set. DO NOT plug more than a total of 1,875 watts in this remote set. If watts are not marked on appliance, multiply ampere rating (on nameplate) by 125 to determine equivalent watts. Add determined watts for each plugged-in appliance or lamp(sum of watts on bulbs). To find total watts being used. Operating temperature range -30°C(-22°F) to 45°C(113°F). Let the switch hang downward so moisture doesn't accumulate in the outlet. Install cord and unit above ground level at least 1.5m(5FT) with receptacle in the downward position. Suitable for damp locations. Not for water immersion or for use where directly exposed to water. Store indoors when not in use.

Warning:

Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.