


AW100 Serial Number Label Details

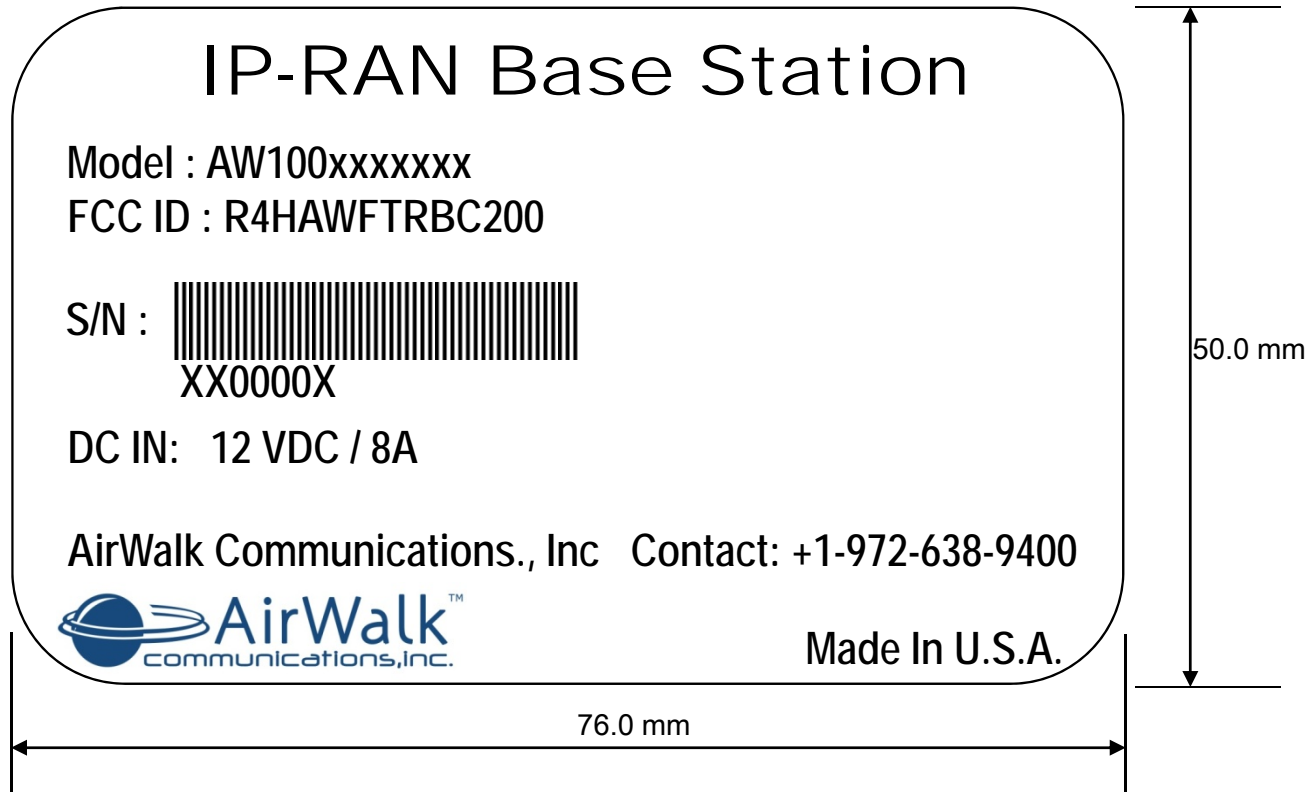

Applies to chassis and external packaging box

External Label Location

Label placed on bottom of unit in the corner closest to the power switch

