


# AW100 Serial Number Label Details

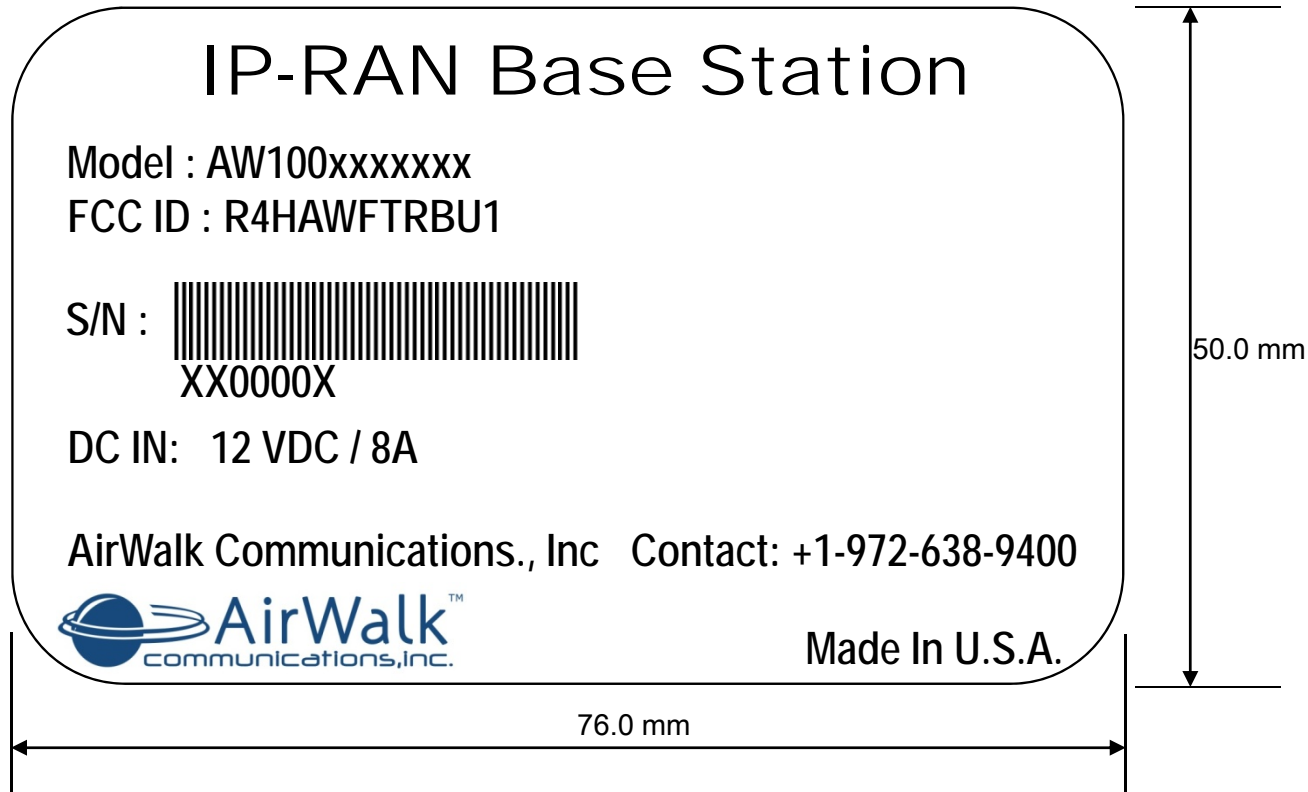

*Applies to chassis and external packaging box*

# External Label Location

Label placed on bottom of unit in the corner closest to the power switch

