

# Contents

Safety Precautions.....	2	iStorybooks.....	43
Location of Controls.....	6	Music .....	44
Charging the Unit.....	8	Box Folder .....	44
Using the Bumpers .....	9	Other Category Folders.....	44
Basic Operation .....	11	Using TechTab Assistant	
Using a TF/Micro SD Card .....	12	Software.....	45
Using a Micro USB Drive .....	12	FAQs.....	48
Operation.....	13	Specifications .....	50
Account Management.....	13		
Menu Options.....	16		
About Me.....	20		
Adding Applications.....	20		
Sharing Applications.....	24		
Children’s Management.....	25		
Child Protection Mode .....	26		
Utilities.....	29		
Artist .....	34		
Games.....	40		
Kids Android Browser .....	42		

# Safety Precautions



CAUTION

**RISK OF ELECTRIC SHOCK**

**DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**FCC WARNING:** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**



**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference that may cause undesired operation.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
17. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.





This manual contains important safety precautions and information for correct usage. Please be sure to read this manual carefully before use to avoid any damage to the device.

### User Safety


- Never touch the power adapter when hands are wet.
- Device should only be plugged into properly grounded outlets.
- Make sure the plug fits tightly into the outlet.
- If the device or its accessories become damaged in any way, please do not use.
- If there is lightning, remove plug from the outlet immediately.
- If device is fully charged, remove plug from the outlet.

### Device Safety

- Do not leave device in direct sunlight or in a car for prolonged periods.
- Do not use the device in dusty places.
- Do not use the device in wet places, such as the restroom.
- Keep away from all magnets and magnetic devices, such as credit cards.
- Never use any third-party accessories.
- Never use any sharp objects to touch the LCD screen.
- Press the LCD screen gently. Never hit the screen.
- Keep the device away from water.
- Be careful to never drop the device.
- Do not attempt to repair, disassemble or in any way modify the device.

## Location of Controls


### Front

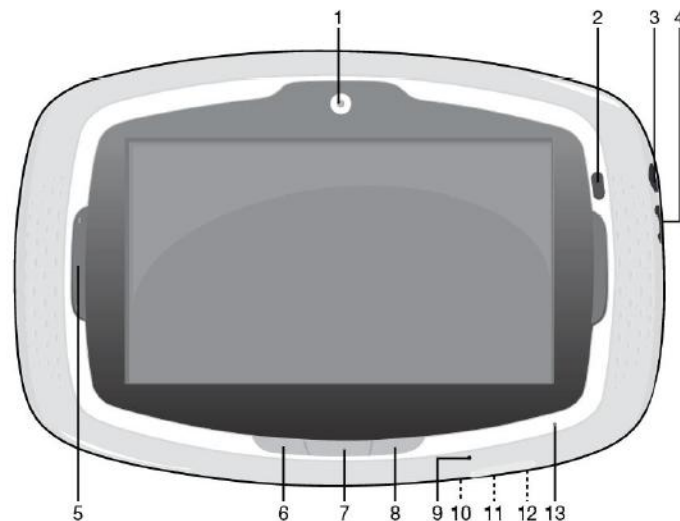

- |                       |                           |
|-----------------------|---------------------------|
| 1. Camera             | 8. Menu Button            |
| 2. Shutter Button     | 9. Charge Indicator       |
| 3. Power Button       | 10. TF/Micro SD Card Slot |
| 4. Volume +/- Buttons | 11. Micro USB Port        |
| 5. Speaker            | 12. Headphone Jack        |
| 6. Return Button      | 13. Microphone            |
| 7. Home Button        |                           |



## Rear

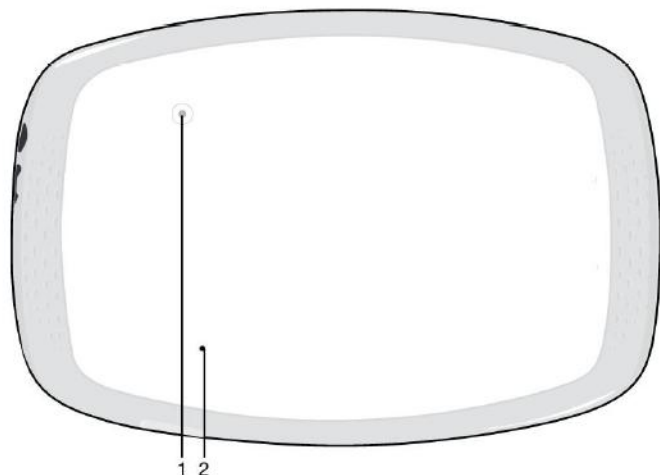 

1. Camera
2. Reset Button

## Charging the Unit

To charge the unit using the AC/DC Adapter, plug the small end of the USB cable to the Micro USB jack and the other end to the AC/DC Adapter. Then plug the AC/DC Adapter to an AC outlet having 120V/60Hz.

To charge the unit using a computer's USB port, plug the small end of the USB cable to the Micro USB jack and the other end to the powered USB port on the computer.

Charging with the AC/DC adapter is the fastest method.

When charging, the Charge indicator will light red. When fully charged, it will light blue.



# Using the Bumpers

The “Grow with Me” bumpers will supply the look and feel no matter what the child’s age. Please select the bumper according the child’s age.

## Ages 3-4 (Available in Green or Pink)



## Ages 5-6



## Ages 7-9





## Basic Operation

**To Turn ON:** While in the Off mode, press and hold the Power button for three seconds. If in the Sleep mode, simply press the Power button and the unit will turn on.

**To Turn OFF:** While in the On mode, press and hold the Power button for three seconds, then tap **OK** from the pop up box.


**To Force Shutdown:** While in the On mode, press and hold the Power button for seven seconds; the unit will turn off. This is NOT recommended unless the device is unresponsive.

**To Sleep:** While in the On mode, press the Power button once or if the unit is idle for one minute, it will enter the Sleep mode. This will save battery life, but not completely turn the unit off.

**To Wake Up:** While in the Sleep mode, press and the Power button once to wake the unit.

**Headphone Jack:** For private listening, plug standard headphones or earphones into this jack.

**Volume:** Press the + button to raise or – button to lower the volume.


 : Press to return to the previous screen. Press at the Home screen to Log off and return to the Home screen.

 : Press to return to the Home screen.

 : Press to enter the Menu screen.

## Using a TF/Micro SD Card


Insert a TF or micro SD card (up to 32GB) with the contacts facing towards the front of the unit into the TF/Micro SD Card slot.

After inserted, tap the Parent's icon, log in using the security code (see next page for details) and then tap the Box  icon on the Home screen.

Tap the Explorer icon and then **SD Card** to view the contents of the SD card, where you can view and modify the contents, as well as movie items from the SD card to this device.

## Using a Micro USB Drive

 Insert a micro USB Drive (up to 64GB) with the contacts facing towards the front of the unit into the Micro USB slot.

After inserted, tap the Parent's icon, log in using the security code (see next page for details) and then tap the Box  icon.

Tap the Explorer icon and then **USB** to view the contents of the SD card where you can view and modify the contents, as well as movie items from the SD card to this device.








# Operation

## Account Management

The Account Management screen will appear when you first turn the unit on or when you log a user off. This screen shows the main user (the Parent) and up to four additional users as well as other controls as explained in the next column.


The system defaults to the parental account (highest authority). The initial password is "1111." Each tablet permits up to four child accounts which can have a password. Parents can use their own account to manage the child accounts.

At the Account Management screen, tap on the icons to perform the following:

-  : Tap to enter the Clock screen (see page 32).
-  : Tap to enter the Calculator (see page 32).
-  : Tap to change the Background.
-  : Tap (or press the **Menu** button) to bring up the Menu (see page 16).
-  : Tap to add a new user (see page 15).



## Home screen

After starting up and logging into your individual account, you will see the main home screen. There are nine folders on the home screen used to store the many different application programs for each child. The home screen is shown but may vary by model. Press the **Home**  button to return to the Home screen.

Below are the parent's home screen and the child's home screen.

Parent's Home Screen



Child's Home Screen









At this screen you can change the Wi-Fi settings, Date and Time, and much more as follows.

**Note:** Use finger to slide screen up or down to view entire screen contents.

**Wi-Fi:** Tap to turn Wi-Fi on; a list of available Wi-Fi networks will appear. Select your network, and enter password (if one is set). “Connected” will appear if successful.

**Data Usage:** Tap to view the data usage for open apps.

**More:** Tap to set the VPN, Portable hotspot, Ethernet or Mobile networks.

**Sound:** Tap to change the Default Notification Sound or to turn the Touch Sounds and Screen Lock Sound On or Off.

**Display:** Tap to change the Brightness, Wallpaper, Sleep Time or Font Size.

**HDMI:** Not used with this unit.

**Screen Shot Setting:** Tap to set the Delay time to capture the screen, Set the location of the screenshot storage or to Show the screenshot button in the status bar. This is used when taking a screen shot of the current screen.

**Storage:** Tap to view the used and available storage.

**Battery:** Tap to view the battery remaining charge.

**Apps:** Tap to view the installed apps. Tap on an App to move to the SD Card, Uninstall, Force Stop, see more info, etc.


## How to Manage the Apps

In the system settings, you can find the apps management.

There are 4 categories: Downloaded, On SD Card, Running and All.



If you want to shut down the apps, look under “Running” and tap the Apps icon to shut them down one by one.

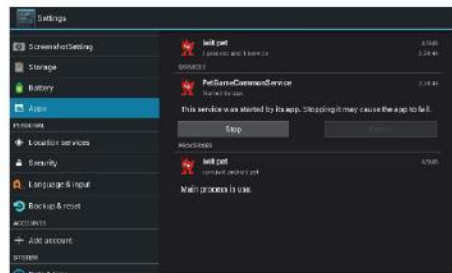

**Location Services:** Check to allow Localization services, which will allow certain apps to determine your approximate location.

**Security:** Tap to change the security settings.



**Language & Input:** Tap to select your desired language and input settings.

**Backup & Reset:** Tap to reset the unit to its factory default settings.

**Email:** Tap to access your email accounts and Account Settings.

**Add Account:** Tap to add a new email account.

**Date & Time:** Select to set the current date and time, as well as time format.

**Accessibility:** Tap to change the settings for Accessibility for the seeing and hearing impaired.

**Developer Options:** Tap to Debug and make Developer changes. It is not recommended to change these unless instructed to do so by technical support.

**About Tablet:** Tap to view the tablet information.

### Deleting a User

Tap to delete a user. After tapping the icon, tap on a child's account to delete.

Then tap the check mark to delete. (The Parent's account cannot be deleted).




## About Me

At the Home page, tap the icon at the top left. On this page you can enter your nickname, age, password, change background, turn background music on or off, turn sound effects on or off, desired Wi-Fi setting and set your picture or a default picture. Tap the check mark icon when finished.



## Adding Applications

When signed in as a Parent, you can add applications and distribute them as follows:

1. At the Parent's Home screen press the **Menu**  button to bring up the menu. Tap the **Download Applications** icon.





2. Select the desired store.  
If you select App Center,  
see the following to install  
games:



- a. Upon selecting App Center,  
you will see nine categories listed: Hot,  
Recommended, Writing, Creativity, Math,  
Science, Book, Game, and  
Box. Each category has an  
abundance of child-friendly  
apps to choose from.



Tap on the icons at the top of the screen to perform the following:

- : Tap to select age.
- : Tap to select language.
- : Tap to see company information.
- : Tap to enter the download manager page.
- : Tap to control the W-Fi settings.

2. Select the desired store.  
If you select App Center,  
see the following to install  
games:



- a. Upon selecting App Center, you will see nine categories listed: Hot,  
Recommended, Writing, Creativity, Math, Science, Book, Game,  
and Box. Each category has an abundance of child-friendly apps to  
choose from.

Tap on the icons at the top of  
the screen to perform the  
following:

- : Tap to select age.
- : Tap to select language.
- : Tap to see company information.
- : Tap to enter the download manager page.
- : Tap to control the W-Fi settings.









- Purchase a desired app and then after downloading and installing, the Category screen will appear.
- Select the desired category where you want the new app installed and tap the check mark to confirm.
- Select the desired users you want to have access to the new app and tap the check mark to confirm.




**Note:** If a category and/or user is not selected, the application will be automatically installed in the parental account where parents can share later.

## Sharing Applications

- At the Parent's Home page, tap the  icon at the lower left; the Sharing screen will appear.
  - At the Sharing screen, tap the desired user, then tap a category in the left column and tap the check mark next to the items you want installed on the selected user's page. Tap the bottom left check mark when done.
- OR**
- When in a folder (i.e. Games), the icons perform the following functions:

- :Manages applications and can authorize other accounts to use them.
- :Moves application icon to other categories.
- :Uninstalls App.

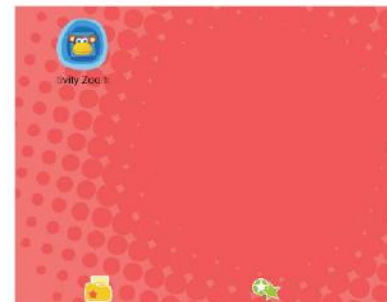




## Children's Management

1. At the Child's Home page, tap a folder icon to open (i.e. Games).
2. When in this folder, the child will only have access to the  icon, which can delete an app. They cannot manage applications or move applications.



## Child Protection Mode

1. At the Parent's Home screen press the **Menu**  button to bring up the menu. Select **Children Protection Mode** and at this screen, tap on the following:



**Overuse settings:** Tap the Overuse icon to prevent children from overusing some applications; you can set their usage time and break time. When the usage time is up, the tablet will lock automatically. Only parents can use their password to unlock the tablet. When break time is up, the tablet will automatically unlock.





### Magicbox:

Tap the Magicbox icon; the screen to the right will appear. Select a child's name from the top tabs, then tap the box (a green check mark will appear) next to the categories you want the child to see. Tap again (the green check mark will disappear) to now allow.




### Protection Settings:

Tap the Protection Settings icon. Tap Suggested Brightness to set the brightness to the default value. Tap Flash Lamp to turn the Flash on.



### Userlog Settings:

Tap the Userlog icon to check information about each child's access, including login and logout time for each category.

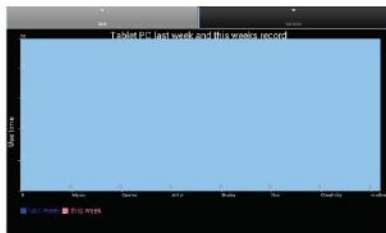

### Kid Browser Setting:

Tap the Kid Browser Settings icon to control the following:



**Parents Recommend** : Tap to select websites that can be accessed.

**Browser Records** : Tap to check search history.

**Address Management** : Tap to view recent browser history.




**Add** : Tap to add websites to the search engine and share.

**Delete** : Tap to delete a web address by checking the web addresses.

**Select All** : Tap to select all web addresses to delete quickly.



## Utilities


1. At the Home screen, tap the  icon to bring up the Utilities screen.
2. At the Utilities screen you can enter the various options. See the following steps for instructions for each item.  
**Note:** On all Utilities screens, tap the  icon to change the background.
3. Tap the  icon to bring up the Calendar screen. At the Calendar screen you can touch a day to type in a note or add to the audio diary (see the next page).



To mark a date, touch the day for three seconds and then chose the desired sticker.  
To delete a sticker on a day, touch the day for three seconds and then drag the sticker to the trash bin icon.




To add a note, picture, etc., tap on a day; the screen below will appear.

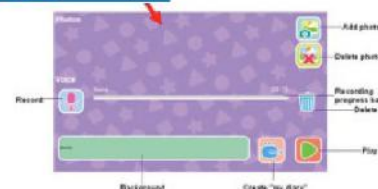



If an entry has been made, tap the green Play icon at the bottom center of the screen to play it.




Tap the  icon to delete an entry.

Tap the  to add an entry.

On the Add Entry screen, you can do the following:

Tap the  icon to start recording an audio entry. Tap the  icon again to stop recording.


Tap the  icon to delete the recording.

Tap the + Icon to add picture(s) or the – button to delete picture(s).


Tap the  icon to play.


Tap the  icon to select an MP3.


You can insert up to three entries on each day.


When done, tap the  icon to finish. Then on the screen, the new selection will be shown as a green Play icon at the bottom center of the screen. Simply tap the green Play icon to play.

You can also tap on the empty space above the arrows to type a message or diary entry for that day. After tapping, the keyboard will appear.


Press the  icon when done to return to the calendar screen and again to return to the Utilities screen.


4. Tap the  icon to bring up the Clock screen. At the Clock screen:

Tap  to set the current time. Tap check mark when set.


Tap  to set the alarm wake sound, alarm time and to turn it on or off.


Tap  to return to the clock.


Tap  to use the stopwatch. Press the yellow arrow to start, then the Pause icon to pause. To reset, press Reset icon.

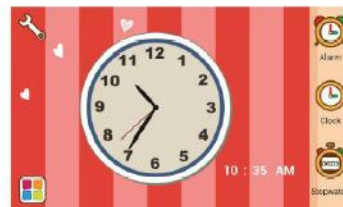




5. Tap the  icon to bring up the Notes screen. At the Notes screen:

Tap  to add a note. Tap the screen to bring up the keyboard.

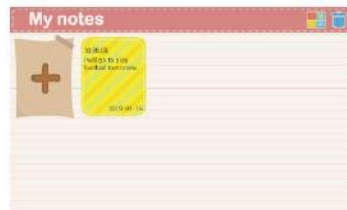
Tap  to delete a note.



6. Tap the  icon to bring up the Calculator screen. At the Calculator screen:
- Tap the  icon to turn the button sound on or off.

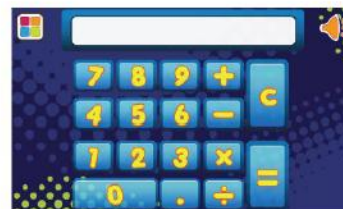





- Tap the  icon to bring up the Friends screen. At the Friends screen:

The App Center uses cloud technology to frequently supply kid-friendly apps for you to upload for free.

 Tap the  icon to delete the friend.


Tap  to add friends. After tapping, enter their info and then tap **Add**.



- Tap the  icon to bring up the My Status screen. This screen will show you the Battery Usage, Time Elapsed, Time Remaining, WiFi, Available Space, and info on the media.




## Artist

- At the Home screen, tap the  icon to bring up the Artist screen.




- At the Artist screen, tap on the options as described in the following steps.



**My Camera:** Tap to bring up the Camera screen. Press the Shutter button or tap the camera icon to take a picture. Press  icon to change from one camera to the next.



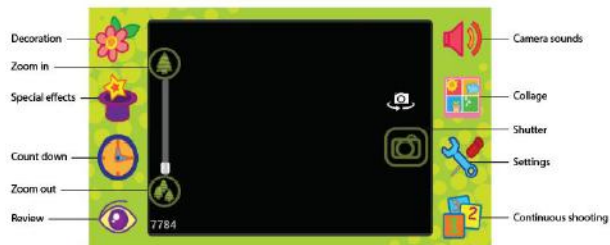

**Decoration:** Select a picture frame to add to your photos.

**Special Effects:** Choose one of six special effects: Normal, Sepia, Bluish, Greenish, Black and White, and Negative.

**Count Down:** After five seconds the camera will take a photo.

**Review:** View the previously taken photos.

**Camera Sounds:** Select a sound effect that will sound when taking photos.

**Collage:** Take four photos to automatically combine into one collage. You will take four pictures and after the fourth, one collage will appear in your photos.

**Settings:** Set the desired resolution: High, Medium or Low resolution. The higher the resolution, the more space it will take up.

**Continuous Shooting:** Select to activate continuous shootings where you can take 1, 3, 5 or 9 pictures at a time.

3. **My Photos:** Tap to bring up the My Photos screen.



Slide up and down to preview pictures. Tap on the photos to enlarge.

To Delete: Tap on the waste bin, choose any pictures you want to delete, and tap on the waste bin again.



4. **Photo Editor:** Tap to bring up the Photo Editor screen.

At the Photo Editor screen, you can perform the following:



**Browse:** Choose a photo to edit.

**Undo:** Return to the last step.

**Pencil:** Choose the color, size, and style of the pencil to use when drawing on the photo.

**Pictures brush:** Choose a pattern for your paint brush.

**Background color:** Choose a photo background color.

**Photo frames:** Choose a photo frame to add to your photos.

**Decoration:** Choose a decoration to add to your photos.

**Words:** Choose words to add to your photos.

**Mirror:** Mirror photos.

**Eraser:** Erase a part of the picture.

5. **Video:** Tap to bring up the Video screen.

At the Video screen, you can perform the following:

**Start/Stop:** Start or stop recording the video.

**Preview My Videos:** Tap to play recorded videos.


**Delete:** Tap on the waste bin to delete the latest video.



6. **My Videos:** Tap to bring up the My Videos screen (see Artist screen at top of page).

Slide up and down to preview videos. Tap on the video to play.


To Delete: Tap on the waste bin, choose any video you want to delete, and tap on the waste bin again.

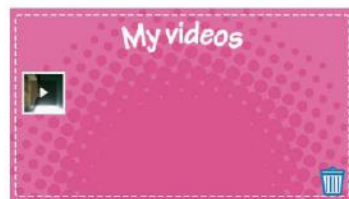







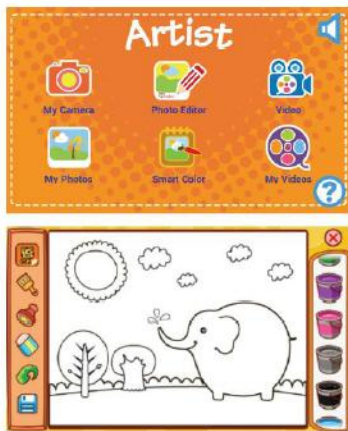

7. **Smart Color:** Tap to bring up the Smart Color screen.

At the Smart Color screen, first select a page you would like to color by scrolling through them. Tap the **More** icon to see even more pictures.



When on the page to color, you can perform the following:

-  : **Color:** Tap to automatically color in the picture.
-  : **Paint Brush:** Tap and then tap on the picture to color in the selected area.
-  : **Stamp:** Tap and then select a stamp then tap anywhere on the coloring page to put the selected stamp.
-  : **Eraser:** Tap and then tap on a colored area of the picture to remove the selected coloring.
-  : **Undo:** Tap to undo the last action.
-  : **Save:** Tap to save the picture.

Tap a paint can to change the color. Slide your finger to scroll down to see all the paint cans.

## Games

1. At the Home screen, tap the  icon to bring up the Games screen.
2. At the Games screen, tap on the desired game (if any are installed).



To install games, see the Adding Applications section on page 20. See the following pages for the built-in games instructions.



### My Pet Game:





To access the Pet game, from the Child's Home screen, tap on the pet at the bottom left of the page.

After selecting this game, tap on the picture of the pet at the top left. User can look through the pet's information: name, gender, portrait, total playing time, and levels (hunger, clean, health, and mood).

### Keys to the Game:


- When health level is 0, the pet will not learn or play games.
- When the hunger level and stored value are 0, every two minutes one piece of food will be sent.
- When you touch the pet, its body will move.


### How to Play:


-  : Tap to select foods to feed the pet
-  : Tap to enter the bathroom to bathe the pet
-  : Tap to play game
-  : Tap for study time
-  : Tap to customize pet
-  : Tap the camera icon to snap a pet picture
-  : Tap to provide help



### Kids Android Browser:







At the Home page, tap the  icon to bring up the Android Browser screen.

 : Tap to open a new tab and enter a website.

 : Tap to add a favorite web page.

See page 28 for setting up the Kid's Browser.


### Icon Descriptions:

-  : Tap to recommend children's shows.
-  : Tap to recommend kid-friendly games.
-  : Tap to recommend helpful learning resources.
-  : Tap to recommend kid-friendly websites.
-  : Tap to save your favorite websites
-  : Tap to view Parents' recommended learning games and websites.





## iStorybooks:

At the Home page, tap the  icon to bring up the Books screen.


Tap the iStorybooks icon to bring up iStorybooks. If connected to the internet, iStoryBooks may download a new library of books.

Select a book to view by tapping on it. The book will download and open for you to read or to read out loud to you.

Simply tap the Menu button to change the settings, such as Read to me mode.



## Music:

At the Home page, tap the  icon to bring up the Music screen. Tap a file to play.

See page 45 on how to install music using the TechTab Assistant.



## Box Folder

Tap on the Box icon to bring up the Music, Email and Explorer options:

**Music:** Tap to listen to music previously installed. See page 45 on how to install music using the TechTab Assistant.

**Email:** Tap to view and send email. Set up the email first; see System Settings on pages 16-19.

**Explorer:** Browse, Copy or Delete files to and from the Internal Memory, SD Card or Flash drive.

## Other Category Folders:

The folders not mentioned in this manual are category folders for the Parent to store applications in.



# Using TechTab Assistant Software


Included with this unit is a CD Rom that contains the TechTab Assistant software that will enable you to get files from or send files to this device.

## Installing the Software

1. Insert the CD and install the software, then restart the computer.
2. Plug the small end of the USB cable to the Micro USB jack and the other end to the powered USB port on the computer.
3. Follow the prompts to install the driver.

## Using the Software

1. Start the TechTab Assistant Program; the screen will appear.
2. Log in either with the default password of "1111" or the password you changed it to during setup if you have used to program before.

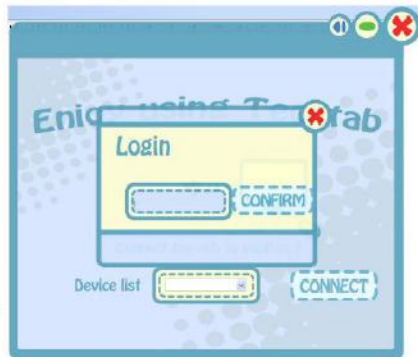


3. The software will scan the device and display its ID in the Device List window.



4. Tap CONNECT to connect to the device.

 5. A window will appear with nine icons, which are the nine category folders.

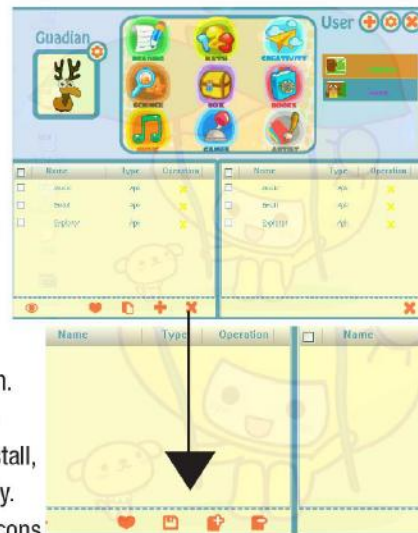

6. You will notice four icons in the bottom right of the left inner-window; a Heart icon, a Page icon, a Plus icon, and an X icon. For apk files, these icons perform Share, Move, Install, and Uninstall, respectively. For Non-apk files these icons perform Share, Back Up, Add, and Delete, respectively.



7. The Eye icon at the bottom left of the left inner-window is the Task View function which is used to check the current progress, such as Install, Uninstall, and Add.



8. In the upper right corner are three icons; a Plus icon, a Gear icon, and an X icon. The corresponding operations are Add Account, Edit Account, and Delete Account, respectively.



9. You will also notice a Gear icon in the upper left of the window. Select this icon to edit information in the Parental Account.



## FAQs

Q: What is APK?

A: APK stands for Android Application Package.

Q: What can I do if the unit does not respond?

A: Press the Reset button using a small pin (in the hole between the headphone jack and USB port) to restart the tablet.

Q: How can I access General Help?

A: Tap on the “?” icon on the screen for help.

Q: Can the unit be operated while installing an application?

A: We recommend not operating the unit while installing/uninstalling an application or opening an application. If you do, a system error will occur. (This is a common issue with the Android system and not a problem caused by the system.)

Q: How can I recover my password?

A: If you forget your password, use the supervisor password “1111” to login and renew your password.

Q: What video formats are supported?

A: 1080P, MP4, 3GP, AVI, RMVB, WMV, FLV, MKV



- Q: How to manage pictures and videos?
- A: Photo storage path: Micro sdcard/pictures/...  
Video storage path: Micro sdcard/movies/...  
In order to ensure information security, the USB cable is only used for charging, not for data transfer.
- Q: Why does the display/resolution not look right?
- A: Because there are many different resolutions for Android tablets, some applications do not match our tablet. (This is a common issue with the Android system, not a problem caused by the system.)
- Q: How can I replace an APK?
- A: If you want to replace an APK, we recommend you uninstall it first.
- Q: What if the unit is operating too quickly and voices overlap?
- A: You can solve this problem by turning the sound off and back on, or using a small pin to press the Reset button.

## Specifications

System OS.....	I-WIT3.0 (Based on Android 4.1)
CPU .....	RK2926 1.2GHz
Storage.....	4Gb micro SD card expansion (up to 32Gb)
Network.....	Wi-Fi (IEEE 802.11 b/g/n)
Ports.....	Mini USB, Micro SD and 3.5mm Headphone
Screen .....	7 inch touchscreen
Camera – front .....	GT0308 0.3M Pixels
Camera – rear .....	SP2518 2.0M Pixels
Accessories .....	USB Cable, CD and Warranty Card





## instruction manual



©2013 Discovery Communications, LLC. Discovery Kids and the Discovery Kids logo are trademarks of Discovery Communications, LLC, used under license. All rights reserved. [discoverykids.com](http://discoverykids.com)

©2013 Distributed By Kids Station Toys Incorporated. MADE IN CHINA.

PRODUCT AND COLORS MAY VARY.

DO NOT MIX DIFFERENT TYPES OF BATTERIES TOGETHER (E.G. ALKALINE AND CARBON-ZINC) OR OLD BATTERIES WITH FRESH ONES. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

DESIGNED AND LICENSED BY KIDS STATION TOYS INCORPORATED.  
P.O. BOX 694660 MIAMI, FLORIDA 33269-4660

KIDS STATION TOYS INCORPORATED. ALL RIGHTS RESERVED.  
1-888-321-7191

MADE IN CHINA / PRINTED IN CHINA



KSD5071-IB-E0GE1-AOUS

"Grow with Me"

7" TECHTAB

PLEASE READ BEFORE OPERATING THIS EQUIPMENT