

Limited Warranty

Kids Station warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$15.00 (to cover shipping and handling costs) payable to Kids Station Toys Incorporated. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Kids Station Toys Incorporated
P.O. Box 694660 Miami, Florida 33269-4660

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Kids Station service center. d) Damaged because it is improperly connected to any other equipment.

 
Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Kids Station be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

TO OBTAIN SERVICE ON YOUR PRODUCT,
PLEASE CALL: 1-888-321-7191
OR
e-mail: service@kidsstationtoys.com

Manufactured for and distributed by
Kids Station Toys Incorporated
P.O. BOX 694660 MIAMI, FLORIDA 33269-4660

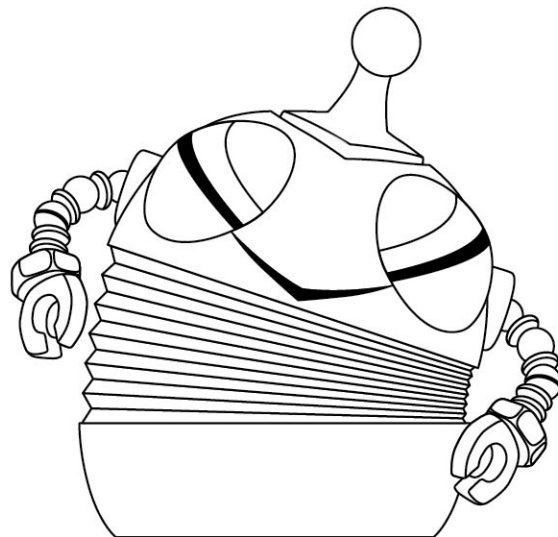

Owner's Manual

Please Read Before Playing with STone8

KS888

CAN ICES-3(B)/NMB-3(B)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Location of Production:
Dongguan, Guangdong, China

Printed in China



 
FOR AGES 6+



FRIENDSHIP MODE

STone8 loves to play with other STone8. When another STone8 is around, use Friendship mode to let them play together.

1. Drag the button to the right to turn ON the connection between 2 STone8. The dots show the connection status. It will stop flashing once the connection is successful.
2. There are 3 communication modes to select, each mode has a different reaction and interaction with other STone8. They may chat, dance or sing together.

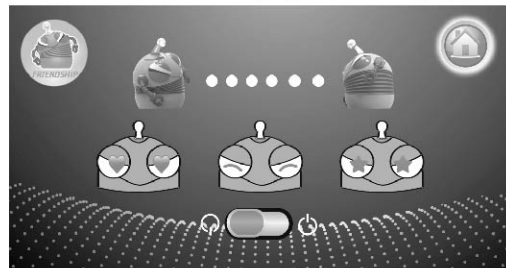

- ★ To leave the play mode, press the Home button anytime to go back to the main screen.

 
- ★ APP/APK free download from App Store and Google play



TROUBLESHOOTING

If operation malfunction occurs, please follow these steps:

1. Press the ON/OFF button once to turn off STone8 (Refer to P1)
2. Remove all the batteries in the battery compartment.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn on the STone8 and it will run the start up sequence.
5. If STone8 is not working properly, replace all the batteries with fresh ones.

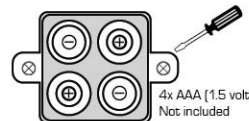

CAUTION:

Batteries are not included

Please retain the packaging for future reference since it contains important information. Do NOT mix old and new batteries. Do NOT mix alkaline, standard batteries and rechargeable batteries; Non-rechargeable batteries are not to be recharged, rechargeable batteries are only to be charged under adult supervision if removable. Rechargeable batteries are to be removed from the toy before being charged. Exhausted Batteries are to be removed from the toy. The supply terminals are NOT to be short circuited; Only batteries of same or equivalent type as recommended are to be used.

TO REPLACE BATTERIES:

 
To change the batteries, remove the safety screws from the battery compartment cover and make sure the positive + and the negative - poles are in the correct position. To ensure proper safety and operation, battery replacement must always be done by an adult. Never let a child use this product unless battery door is secure. Batteries are small objects and could be ingested. Keep all batteries away from small children.

When the unit is disable by electrostatic discharge, please press "RESET" key to reset the unit.



BODY INDEX MODE

You can check the index of STone8: mood, appetite, health and intelligence. You can take care of STone8 by making sure STone8 has all the necessities. To make STone8 Happy, simply play with STone8. STone8 loves to play and it makes STone8 happy. (Refer to P.2)

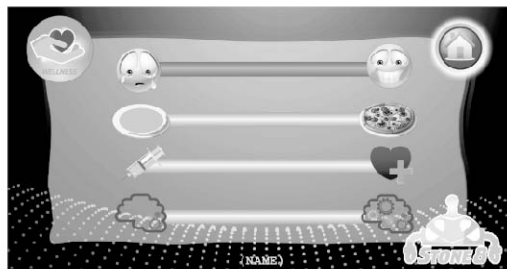


PATROL MODE

You can have STone8 go on patrol. To do this choose the length of the patrol at the top of the screen. Then STone8 will explore for that duration. Once the patrol is complete STone8 it will give you a report of how many obstacles and stops happened during the patrol.



Getting Started

 1. Insert 4xAAA(1.5Volt) batteries as shown:

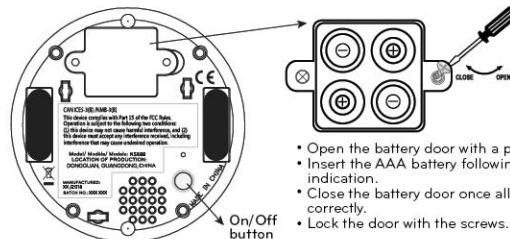

- Open the battery door with a philips head screw driver.
- Insert the AAA battery following the "+" and "-" position indication.
- Close the battery door once all 4 batteries are replaced correctly.
- Lock the door with the screws.

 
2. To turn STone8 on, press the on/off button.

3. Carefully place the STone8 on a flat and smooth surface, away from edges and obstacles.

4. When STone8 is first turned on it will go through a systems check to make sure everything is OK! When you hear STone8 whistle is time to play!

General Description


- * STone8 is your interactive friend. STone8 is ready and eager to play and has a full array of sensors to explore your world and allow you to interact with STone8. STone8 also needs your care.
- * STone8 arm's can be disassembled and assembled to different lengths.

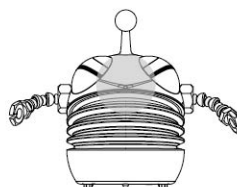

Front sensor :
To avoid obstacles



 
Ear sensor :
Response to
voice and sound

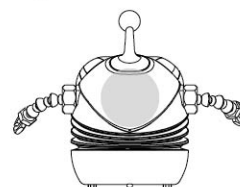

Back head sensor:
Response to
petting and stroking

Motion sensor (inside): Response to shaking and hitting

 
Interaction with STone8

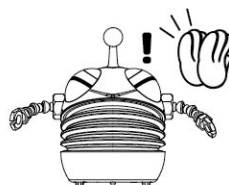

1. Sound reaction

- STone8 will react to sounds. Clap or snap your fingers and STone8 will turn toward the sound.

 Interaction with STone8

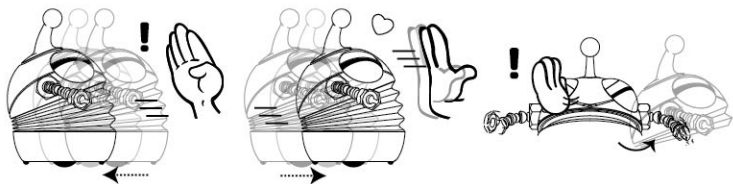

2. Hand gesture control

- Place your hand in front of STone8 eyes, it will back away.
- Place your hand in front of STone8 eyes and move your hand slowly then STone8 will follow you and go forward.
- Place your hand near the left eye of STone8, it will stop, turn right then move away.
- Place your hand near the right eye of STone8, it will stop, turn left then move away.



 
3. Petting and Stroking

- Give STone8 a gentle petting on the back side of its head to make STone8 happy.



4. Feeding

- To feed STone8, hold STone8 up and then tap its mouth a few times gently.

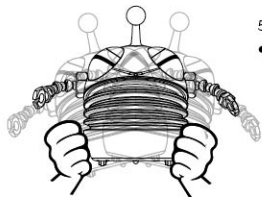

5. Rough action

- Any rough action such as shaking, dropping, throwing can damage STone8's health, and may get scared or upset.



- The result of "WIN / LOSE/ TIE" will appear after judgment time is up.



DANCE MODE

In Dance Mode you can create a "dance" for STone8. STone8 can "dance" to any song you have on your device.

At the top of the screen is the tool bar, on the bar is:

- 1) a pencil to draw the dance path
- 2) An eraser to clear or change the dance
- 3) The PLAY/PAUSE button to start the dance
- 4) The REPEAT button to have STone8 repeat the dance

At the bottom of the screen are extra "moves" you may add to the dance.

- These are: Right spin, Left spin, head left turn, head right turn and 3 steps.



Also there are 3 musical notes to choose the song on your device to play during the "dance"



To create a "dance" choose the pencil and then with your finger draw any pattern on the screen.

- To make it more interesting, there are 5 preset movements you can add along the path.
- 3 Music icons for you to choose, each music icon will allow you to choose a song from the music on your device.
- To add the "moves" simply drag them to anywhere on the dance pattern line.

Once you have created the "dance" press the PLAY button and STone8 will dance to the pattern you created.

 




FREE CONTROL MODE

Under this mode, player has full control of Stone8.

- Left button controls the movement direction, move the ball toward the direction you want Stone8 to move.
- The Right button controls the rotation of the upper body
- At the top, there are 5 preset motion buttons that access built in fun movements.

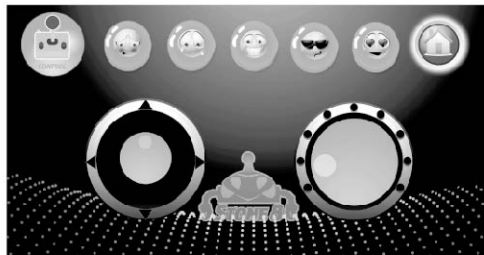

SUMO MODE

In this mode, you can control Stone8 to battle with another Stone8 or any other opponent.

- Press the bell to start after 3,2,1 count down.
- Left button to control move direction, move the ball toward to the direction you want Stone8 to move.
- Right button to control the upper body movement.



- Once the fighting time is up, then will go to judgment.



A. APP/APK MOBILE DEVICE PLAYING MODE

Stone8 can connect to an iOS or Android device by Bluetooth. Once Stone8 connects with the device, the time clock of Stone8 will synchronize with device's setting. The antenna will change to blue color to indicate the connection is successful.

Go to the App Store or Android Store and download the free Stone8 app. After downloaded and installed, you can use the app start to access extra features built into Stone8.

The Stone8 APP/APK includes a parental control system. The PASSWORD needs to be re-set before accessing to any play mode. To change the Password and access the Parental controls, press the Setting button on the app. The 1st time use password is 0000.

Note: APK support Android 5.0 or above; iOS 8.0 or above.

B. HOW TO USE:

PASSWORD

Start the App/Apk, it will request a password before starting to play. For 1st time usage, enter the preset password "0000", afterward press the RESET PASSWORD button to input a custom 4 digit new password. When done, press the "✓" to confirm the new password. Then login with the new password every time before play.



** If you forget the password, need to re-install the app/apk and set up the password again.

MAIN MENU

Below is home screen.

There are 6 categories: Free Control, Body Index, Patrol, Friendship, Dance and Sumo. At the right top corner is Setting button.





SETTINGS

Under Settings, player can check or change 5 different categories:
Language, Name setting, Parental Control, Bluetooth connection and volume.

LANGUAGE: To check the default language



NAME : You can give STone8 a name.



PARENTAL CONTROL: Turn the switch On to enable this function.
You can pull the time bar to set the playing time, rest time and daily use time.



BLUETOOTH : To pair up with your STone8, choose from the devices list.



VOLUME : To set the volume of the app/apk.



TIME UP AND SCREEN LOCKED

Once parental control is set, the time clock will be running.

The screen will be locked to indicate the app will shut down when time expires.

If you wish to not restrict play time, press the reset button on the lock screen and the screen will go back to password stage, unlock it input a valid password. Then reset the parental control timing under Setting Mode.

* The screen background will turn to RED as a time up warning when there is 1min left before lock time.

