

OPERATION

1. Rotate the VOLUME/ON/OFF control on each walkie talkie counter-clockwise until a click is heard to turn the unit on.
2. Rotate the VOLUME/ON/OFF control on each walkie talkie counter-clockwise to raise volume as desired.
3. To transmit, press the PUSH-TO-TALK button and speak into the Speaker/Microphone grill.

NOTE: The range is approximately 40 feet. If messages are not transmitted/received properly, move closer.

4. To turn the units off, rotate the VOLUME/ON/OFF control clockwise until a click is heard.

NOTES:

- Take care when using these walkie talkies. Do not play around automobiles or near street while using walkie talkies.
- If you place any of the units too close to each other, you will hear feedback. If this occurs, move the units away from each other.
- After use, make sure all units are in the Off position.

Carrier frequency: 49.860 MHz

Field strength: 54.7 dBuV/m at 3 m

Sesame Workshop®, Sesame Street® and associated characters, trademarks and design elements are owned and licensed by Sesame Workshop.

© 2011 Sesame Workshop. All Rights Reserved. Printed in China KSE120-IB-E0DC4-A0US

Sesame Street Walkie Talkies



Please read before operating this equipment.

Model : KSE120

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation."
"This category II radiocommunication device complies with Industry Canada Standard RSS-310."

Ce dispositif de radiocommunication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

The field strength is 54.7 dBuV/m at 3 m,
The carrier freq. is 49.860MHz.

LOCATION OF CONTROLS

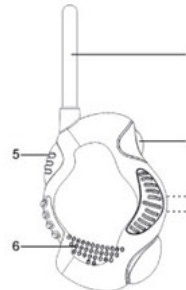


1. Antenna
2. VOLUME/ON/OFF Control
3. Belt Clip (Rear of Unit)
4. Battery Compartment (rear of unit)
5. PUSH-TO-TALK Button
6. Speaker/Microphone

INSTALLING THE BATTERIES

BATTERY OPERATION

 1. Open the battery compartment by removing the screw.
2. Insert a 9V battery (not included) into the compartment following the diagram in the compartment.
3. Replace the battery compartment cover and the screw and make sure it snaps shut securely.



BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Do not dispose of batteries in fire; batteries may explode or leak.

Kids Station Toys Incorporated

Date: 22-Jun-2011

ARTWORK RELEASE INFORMATION

描述: KSE120 IB-English	语言: <input checked="" type="checkbox"/> 美 <input type="checkbox"/> 法 <input type="checkbox"/> 西 <input type="checkbox"/> 其他
Part Number: KSE120-IB-E0DC4-A0US	客户: Marshalls-USA
尺寸: 216 x 148 (WxH) mm	品牌: Garven
物料: 100 gsm <input checked="" type="checkbox"/> 雪纸 <input type="checkbox"/> 单粉纸 <input type="checkbox"/> 复粉纸 <input type="checkbox"/> 植皮 <input type="checkbox"/> 贴纸 <input type="checkbox"/> 其他	
颜色: <input checked="" type="checkbox"/> 4 色 <input type="checkbox"/> 黑白 <input type="checkbox"/> 专色 PMS <input type="checkbox"/> 其他	
Finishing: <input type="checkbox"/> 单面印刷 <input checked="" type="checkbox"/> 双面印刷 <input type="checkbox"/> 烫UV油 <input type="checkbox"/> 磨光面 <input type="checkbox"/> 其他	
<input type="checkbox"/> 说明图 共 页 <input type="checkbox"/> 风琴册 <input type="checkbox"/> 骑马钉 <input type="checkbox"/> 其他	
Remarks: Remove morse code	
Update the field strength from 56.4dBuV/m to 54.7dBuV/m	

GB = GB Box, IB = Manual, IB = Insert, LB = Label, SB = Silk Screen, CS = Clean Sheet, BC = Binder Card, WC = Warranty Card