




快速入门指南 Quick Start Guide



Model:FX3321

English Portable high resolution music player
Note: X3 Mark III is hereinafter referred to as X3

Buttons and Ports labeled/Operation explained

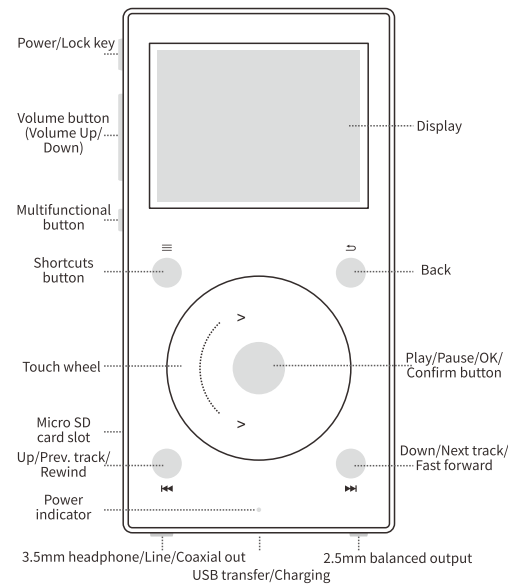

English Portable high resolution music player
Note: X3 Mark III is hereinafter referred to as X3

Operating the X3

Power on/off: Hold the "Power/Lock" button for 2s, screen lights up and shows boot animation; Hold the "Power/Lock" button while the X3 is on to turn it off.

Data transfer: Insert the micro SD card into X3 and use the included Micro USB cable to connect the X3 to the computer (no need to install driver), then you could transfer data onto X3.

Music playback: While in the main menu, touch the "Touch wheel" or press the "Prev" & "Next" to locate the "Browse Files" menu, then press the "OK" to enter. After that select a music file and press the "OK" to play it.

Or you may go to System settings, choose "Update Media lib", and press "OK" to update the library. After that, go to the "Category" menu to play music.

Firmware update

Improper operations during firmware update may cause the X3 to malfunction! Please read the following firmware update guide carefully before proceeding.

Update procedures:

1. Copy the X3_Mark_III.fw to the root directory of an FAT32-formatted SD card.
2. Turn off the X3 and insert the card into the slot on X3 (if not already inserted).
3. Hold the "Shortcuts" button and then also hold the "Power/Lock" button to turn on the X3 in firmware update mode. The following firmware update dialogs will appear:

Firmware updating Firmware update succeeded

English Portable high resolution music player
Note: X3 Mark III is hereinafter referred to as X3



Before proceeding:

1. Choose a micro SD card with FAT32 file system. If update fails, try loading the X3_Mark_III.fw file in a blank SD card, of 32GB capacity or under, formatted on X3 and performing the update again.
2. Firmware update will not affect files stored on the card.
3. Ensure X3 is sufficiently charged (Preferably fully charged) before the update to prevent power failure during the update.
4. Do not operate the X3 while the update is in progress.
5. Please update the media library after the firmware update. Please go to our website to download firmware.
Download link: <http://www.fiiio.net/en/supports>

Notes and precautions

- ★ Do not repair or disassemble the product by yourself or put it in water.
- ★ If the X3 is to be left unused for a long time, please recharge the unit periodically to preserve its battery life.
- ★ X3 will skip any songs it has trouble in decoding to prevent hang-ups.
- ★ You might not be able to hear the sound of the surroundings when using headphones. For your safety, please avoid using headphones in dangerous situations.
- ★ If the voltage from the charging adapter is too high, the X3 may be damaged. Please choose an appropriate charger; a

English Portable high resolution music player
Note: X3 Mark III is hereinafter referred to as X3

DC 5V/2A USB charging adapter is recommended.

- ★ In the likely event that the X3 hangs up, you may hold the power button for 10 seconds to force a shutdown.

Accessories (please confirm if the following items are included)

1. USB cable*1
2. Coaxial adaptor cable*1
3. Clear case*1
4. Leatherette case*1
5. Warranty card*1
6. Quick start guide*1
7. Screen protector*3 (one applied on body in factory)
8. Hi-Res mark sticker*1 (applied on body in factory)
9. Sticker for the body*2

To learn more about FiiO products, please go to <http://www.fiiio.net/en/fiiio>. To learn more about operating your FiiO product, please go to <http://www.fiiio.net/en/supports> and download the detailed User Guide corresponding to your model.

WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Internal/Supplied Batteries

This symbol on the battery indicates that the battery is to be collected separately. This battery is designed for separate collection at an appropriate collection point.

English Portable high resolution music player
Note: X3 Mark III is hereinafter referred to as X3

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.