

monster tumbler

Design and color may vary

Forward:
Press both control sticks forward



 
Reverse:
Press both control sticks backward.



Spinning Action:
Press and hold the control sticks in opposite directions to make the car spin.








Action Button:
Press and hold the action button to have the car stand up on its back and move forward.

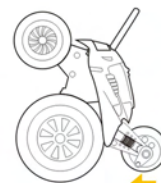

Spin on back wheel:

(Using Action Button)

     
- 1) Have the car spinning by pressing and holding the control sticks in opposite directions.
- 2) Press and hold the action button and the car will then spin on one back wheel.

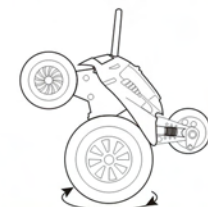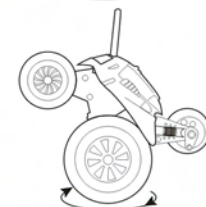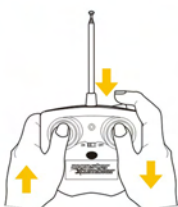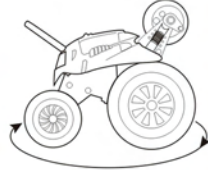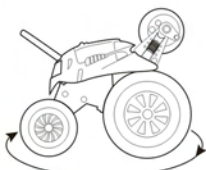


(Using Control Sticks Only)

- 1) Have the car spinning by pressing and holding the control sticks in opposite directions.
- 2) Quickly press and hold both control switches in forward direction.

 REMOTE CONTROL ASSEMBLY

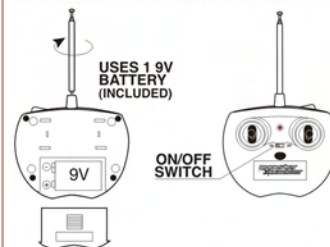

BATTERY DIAGRAM

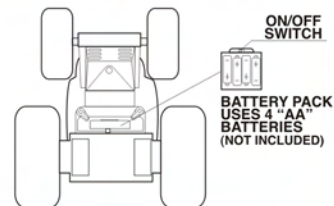 

(RECOMMEND USING ALKALINE BATTERIES FOR BEST PERFORMANCE)

BATTERY WARNING

- Do not mix alkaline, standard (carbon-zinc), rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the appliance before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.

KEEP THIS PACKAGE FOR REFERENCE SINCE IT CONTAINS IMPORTANT INFORMATION.

OPERATING INSTRUCTIONS

Operation requires 4 "AA" 1.5V alkaline batteries (not included) for car and 1 9V alkaline battery (included) for remote control.

1. Carefully remove items from package.
2. Locate the battery compartment on the back of each item (see diagram above).
3. Swivel latches on bottom of car to release battery pack and replace batteries.
4. Switch both car and remote buttons to "ON" position.
5. Not recommended to operate on carpet as functions cannot be performed.
6. Available in two frequencies to race against each other.

©2005 Innovage, Inc.

All Rights Reserved

Imported by:

Innovage, Inc., 19511 Pauling,

Foothill Ranch, CA 92610

The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.

Item # 1602301(4972) • Made in China



