

\*\*\* USER'S MANUAL \*\*\*

---

**FCC ID : R6Y-VM4RW**

## The Federal Communication Commission Statement

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures: -

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced Radio/TV technician for help.**

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that change or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1 This device may not cause harmful interference and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

**The antenna used for this transmitter must not be collocated or operation in conjunction with any other antenna or transmitter.**

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

# Evluent VerticalMouse Instructions

Warning: 1) Wet hand sanitizer may damage the finish on the mouse. Wait for the sanitizer to dry before touching the mouse. 2) Clean the mouse only with water. Do not use any chemical cleaner.

## Windows Install

- Before connecting Evluent VerticalMouse, go to Control Panel, Add or Remove Programs and remove any previous Evluent Mouse Manager and any other mouse software, except touchpad driver. If there is no mouse software listed, skip this step.
- Before connecting Evluent VerticalMouse, go to Control Panel, Mouse, and:
  1. Uncheck the box for Swap Primary and Secondary Buttons.
  2. Check the box for Enhance Pointer Precision. **This is very important.**
  3. In Pointer Options, set the pointer speed slider to the middle position.
- The VerticalMouse may not work with some external USB hubs, docking stations, and KVM switches. It is not PS2 compatible.
- If the Add Hardware Wizard appears, do not select Search for Best Driver, but choose Display All Drivers, and select Human Interface Device (HID) compliant Mouse.
- Turn on the On/Off switch if your mouse is wireless.
- Press + or - on the Pointer Speed button on the side of the mouse to set the speed to the MD (medium) position on the indicator lights. The mouse is now ready for use.
- Evluent Mouse Manager (driver) may optionally be installed to program the buttons. Download the most current driver or install from the CD.
- If the install stops, go to Control Panel, System, Hardware, Driver Signing, select Warn, click OK, and restart the install. If you cannot get into Control Panel, ask your computer administrator for help.
- When a message appears about the driver not passing Windows Testing, click Continue Anyway. **\*\*\*Important: This message may appear several times. click Continue Anyway each time.\*\*\***
- After install is finished, button functions can be changed by double clicking the E icon on the taskbar to open Evluent Mouse Manager. For available button functions, see [www.evluent.com/manual.htm](http://www.evluent.com/manual.htm)

## Other Operating System Install

- Connect the Evluent VerticalMouse basic functionality without a driver.

## Troubleshooting

Go to [evluent.com](http://evluent.com) for answers to common questions or email tech support.

Copyright Evluent