



i-spy tank



THE APP-CONTROLLED WIRELESS SPY TANK
(Instruction manual)



Available on the App Store
Downloaded by controller
NO.777-287
The packaging must be retained since it contains important information

i-spy tank

● Parts

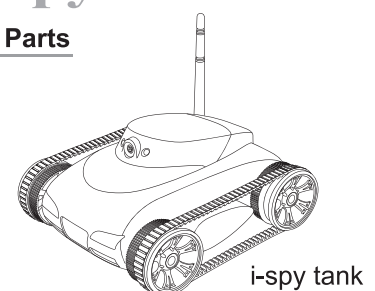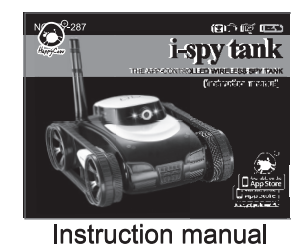



● Operation step

- Go App Store
- Select the SSID address of your tank
- Search "i-spy toys" download & install it -- Free!
- Go to the control interface
- Turn on the product
- Start game!
- Go to setting and turn on wi-fi

i-spy tank

● Location of parts

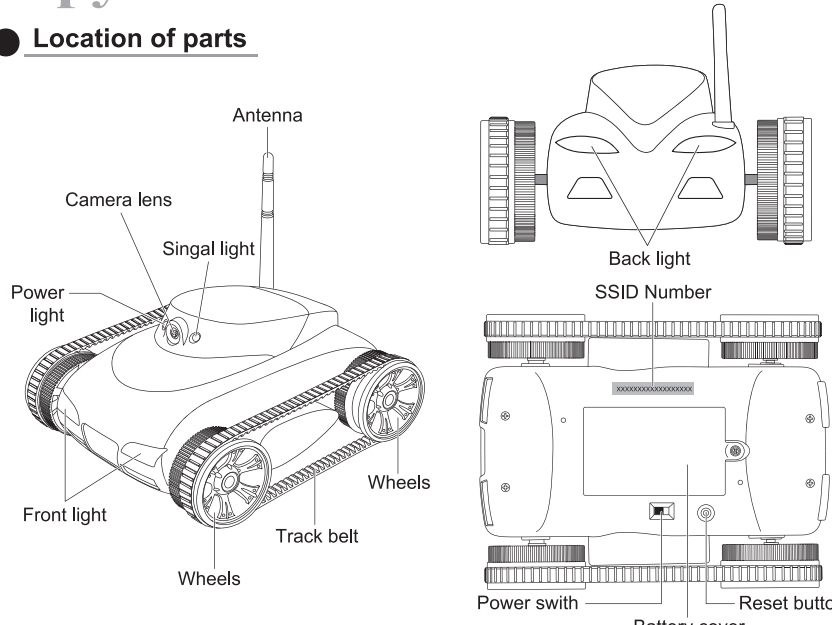

Antenna, Camera lens, Singal light, Power light, Front light, Wheels, Track belt, Back light, SSID Number, Battery cover, Reset button, Power swith

i-spy tank


● Enter to the selecting interface



Copyright © 2012 happy cow toys. All rights reserved

i-spy tank


● Enter to the selecting interface

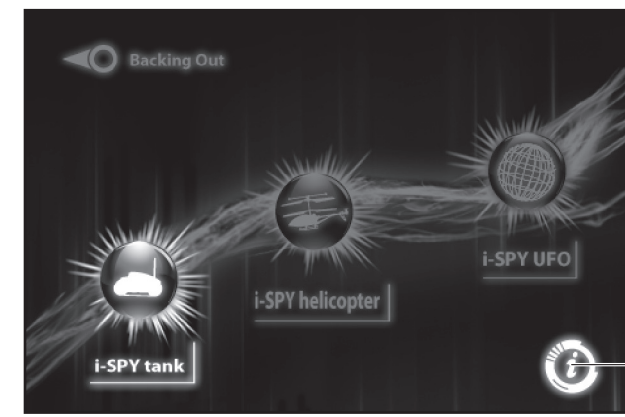

Enter to instruction manual

i-spy tank

● Name of the funtion key

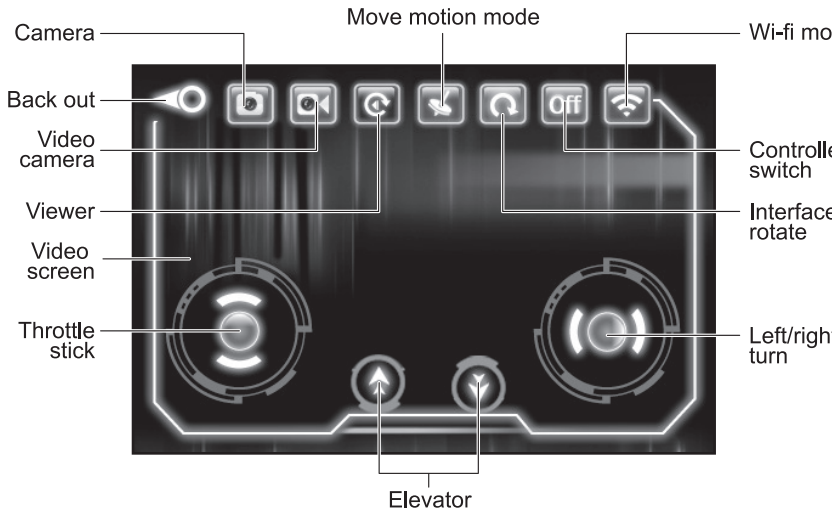

Camera, Move motion mode, Wi-fi mode, Back out, Video camera, Controller switch, Viewer, Video screen, Interface rotate, Throttle stick, Left/right turn, Elevator


i-spy tank

● Function details

- Camera:** Take snapshots
- Video camera:** Video camera "OFF", Video camera "ON"
- Viewer:** View your files
- Move motion mode:** Move motion mode "OFF", Move motion mode "ON"

i-spy tank


5. Elevator:



Manually move the camera lens up and down to capture angles of video.

● Reset


To reset the tank, press the RESET button for five seconds.

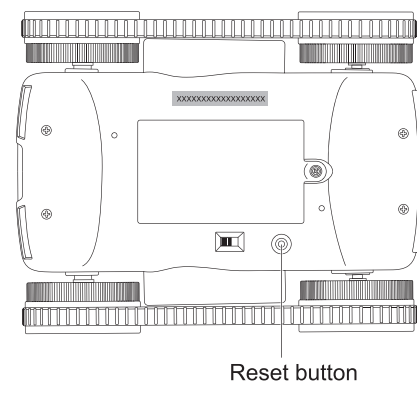

i-spy tank

● Install battery

- Use crossing screwdriver to wrench the screws on the chassis of the i-spy tank in anti-clockwise direction, open the battery cover.
- Please load 6 x 1.5V "AA" battery as per the correct polarity shown.
- Close the battery cover and screw it in clockwise direction.

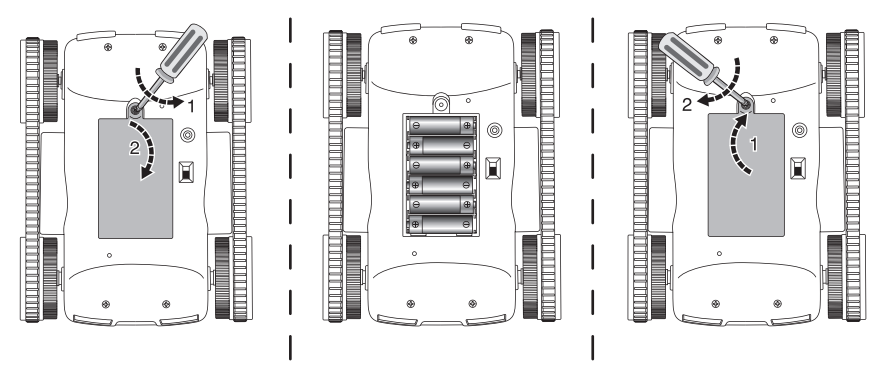


i-spy tank

● Control methods


Control range: The control range of the i-spy tank is about 20 meters. Please avoid to overstep this control range, otherwise the i-spy tank will be out of control.
Play time: On a full charge conditions, the i-spy tank could be used for about 80 minutes.

- 1. Forward**
When you push up the throttle stick, the tank is moving to forward.
- 2. Backward**
When you push down the throttle stick, the tank is moving to backward.

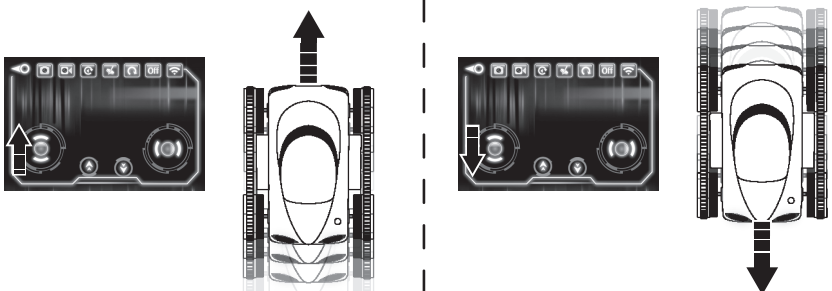

i-spy tank

- 3. Forward and turn left**
When push up the throttle stick and press left button, the tank will moves forward and turn left.
- 4. Forward and turn right**
When push up the throttle stick and press right button, the tank will moves forward and turn right.
- 5. Backward and turn left**
When push down the throttle stick and press left button, the tank will moves backward and turn left.
- 6. Backward and turn right**
When push down the throttle stick and press right button, the tank will moves forward and turn right.

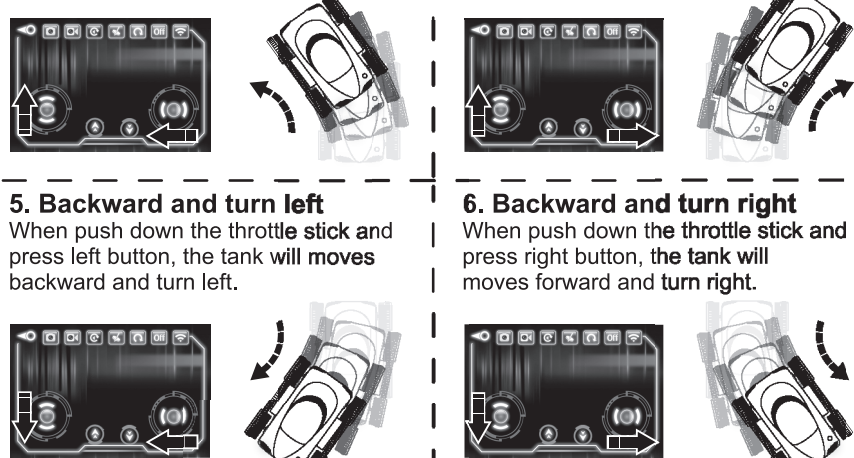


i-spy tank

● Move motion mode

Switch to "move motion" mode, push up the throttle stick, swing your hands as the following indicating direction.

- 1. Left turn**
- 2. Right turn**
- 3. Forward**
- 4. Backward**

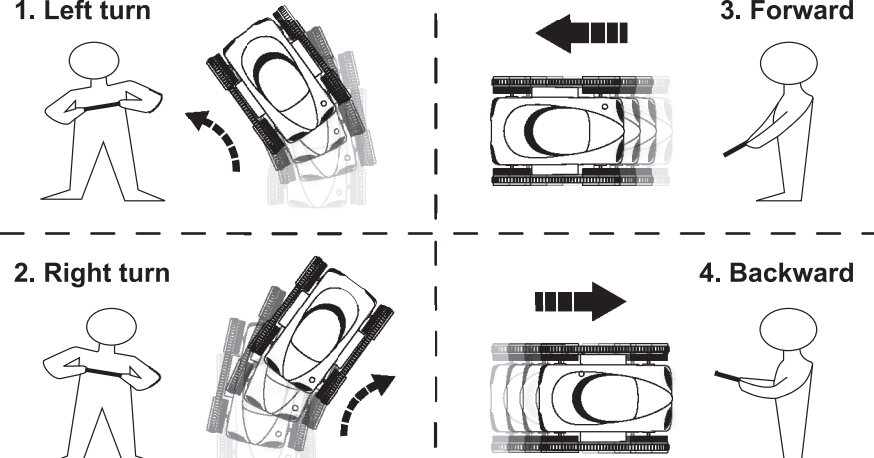

i-spy tank

● How to connect

- Please check up the SSID number on the bottom of the tank. Slide the power switch on the tank to "on". The power will illuminate. Wait approximately 60 seconds and the signal light will start to blink slowly.
- On your iPod touch, iPhone or iPad device, go to Settings and turn on the Wi-Fi. The SSID address of your tank will appear as an available connection.

Note: Each i-spy tank has a unique SSID address (stick on the underside of the unit). If there are multiple tank's being used, the individual SSID addresses will appear as Wi-Fi connection on your device. Select your tank's SSID address.


- Select the tank to confirm the connection. Ensure there is a check mark to the left of the SSID address and the Wi-Fi connection logo appears at the top of your device's screen.
- Exit out of Setting and open the "i-spy tank".
- The signal light will blink faster now.
- When your device screen shows the view from the tank's live-stream video camera-you are ready to start exploring.

i-spy tank

● Video

The tank can record the video of your driving route and save it as a file, then you can replay it on your device screen.

- Press the "Video Camera" button and drive the tank on the route you want to record.
- After you complete your route, press the "Video Camera" button again to save the record.
- Press the "viewer" button to view the file. Select the file, it will be played on your device interface.



i-spy tank

● Camera

The tank can take snapshots. Press the "Camera" button to take a snapshot, the photo will be saved in the Photos Folder on your device.

● Cautions

- When the battery is low in the i-spy tank, the control distance will be reduced.
- The biggest control radius of the i-spy tank is 20 meters., please uses within this area, otherwise the i-spy tank will be out of control.
- If the i-spy tank was damaged, distortion, please repaired in time.
- Do not make the i-spy tank crashing, this may damage the i-spy tank.
- Turn the tank off before cleaning. Wipe the tank with a soft, dry cloth. Ensure there is no hair or lint caught between the rear or front wheels and the drive shafts. Clean carefully with your fingers or a pair of tweezers.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.

i-spy tank

- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be remove from the toy.
- The supply terminals are not to be short-circuited.
- The battery chargers are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

● Problem - Solving

Symptom	Cause	Correction
Wheel can't move.	• ON/OFF switch is OFF. • Weak battery.	• Set switch to "ON". • Put new battery.
Suddenly stop.	• Weak power.	• Change the battery.

i-spy tank

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.



