



# Hurricane




Mini Remote Control Sport Series

Before starting to use mini boat, please read through the operating manual and all the cautions.


NO.777-588

There is important information in the manual, please do not throw it away

 
## Parts

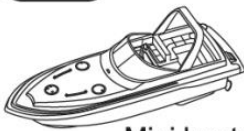

Mini boat

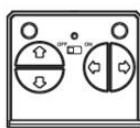 

Controller

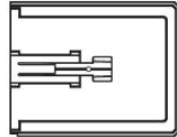 

Spare part box



Propeller




USB Charging line



Instruction Manual

## Parts Identification

 
### Mini boat

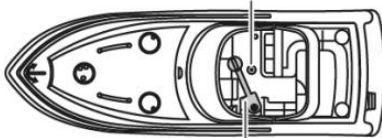


Waterproof plug

Charging socket

 
Right propeller

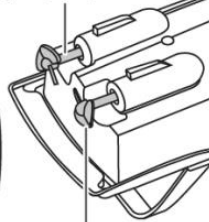


Left propeller

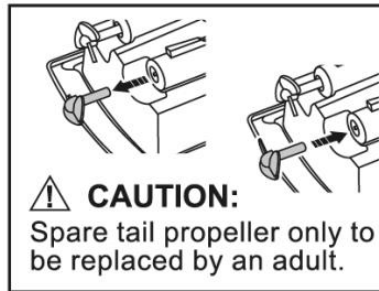 

## Controller

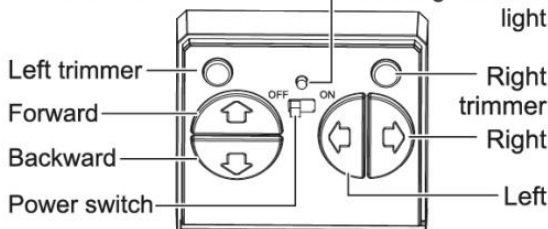 

## Spare part box

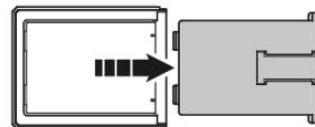 


Open the spare part box take the USB charging cable and manu away.

## Preparation

 
1. Take the product out from the capsule case.




2. Figure out the remote control

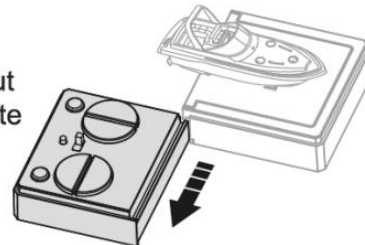

 
3. Take the product out.

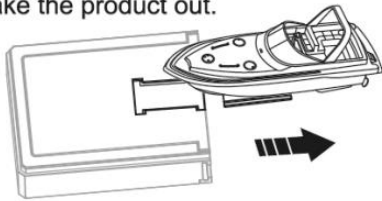

 
4. Use crossing screwdriver to wrench the screws under the fixed seat as per anticlockwise direction.

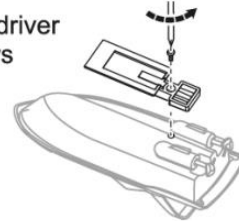

 5. Use a screwdriver to loosen the screws on the battery cover by the counter-clockwise, insert 2x"AAA" batteries with the correct polarity, replace the battery cover and tighten the screws.



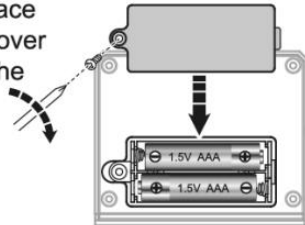


 6. First allocation of controller power switch to "ON" position. Press down the key of the controller and the working indicator of the controller is ON. It shows that it has signal output this time.

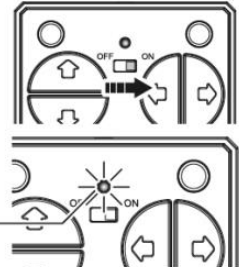

### 7. USB Charging

   - (1). Insert the USB charging cable to power source, red light on.(Pic.1)
- (2). Insert the other end of the charging cable into the charging port of the product, and the USB cabl.(Pic.2)
- (3). When charge about 15 minutes, the charging indicator will be "OFF"and charging is finished , The mini boat works about 5 minutes when fully charged .
- (4). Refer the picture 3, after charging pls cover the cover of product.

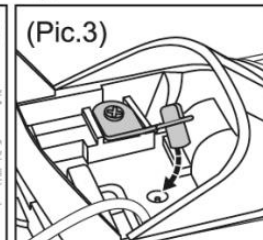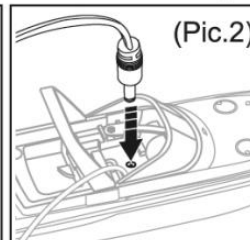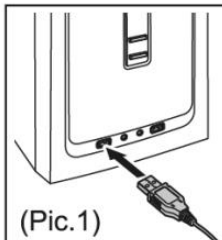



### ⚠ Attention

1. Do not pull the charging cable and plug during charging.
2. For battery life pls run out the power before charging.



### Operation

Before use, Cover the product with waterproof plug. Make sure it is not immersed in water before putting it into the water. The power will be turned on automatically.

 
 
1. Press forward key, the mini boat will be forward.

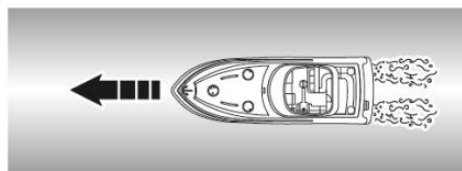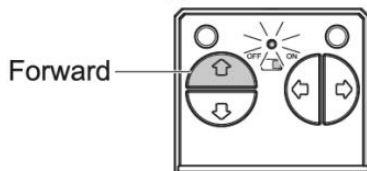

 
 
2. Press backward key, the mini boat will be backward.

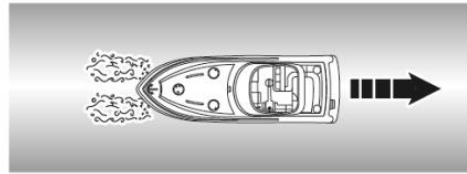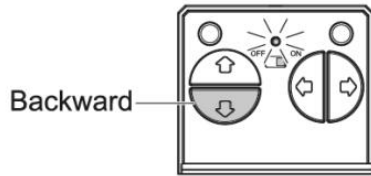

 
 
3. Press forward key and press leftward key in the same time, the mini boat will move forward and turn left;

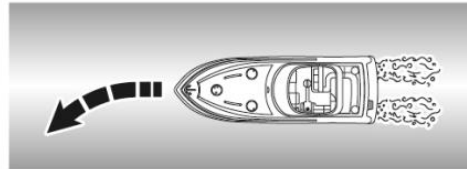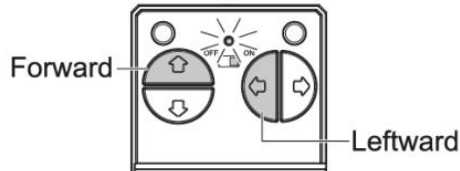

 
 
4. Press forward key and press rightward key in the same time, the mini boat will move forward and turn right;

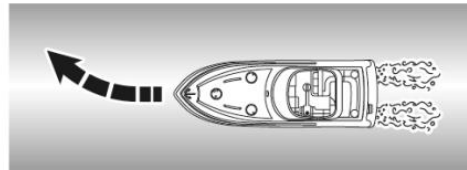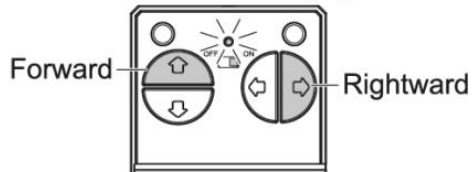

 
 
5. Press backward key and press leftward key in the same time, the mini boat will move backward and turn left.

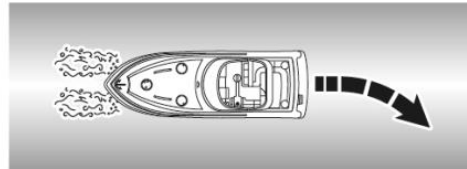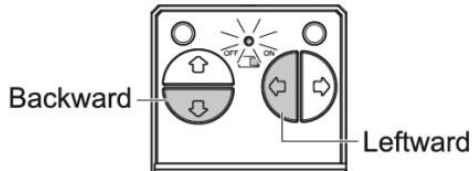

  
6. Press backward key and rightward key in the same time, the mini boat will move backward and turn right.

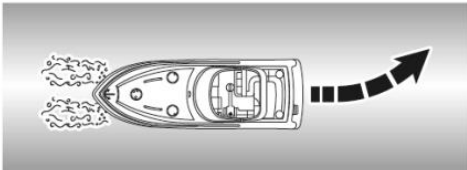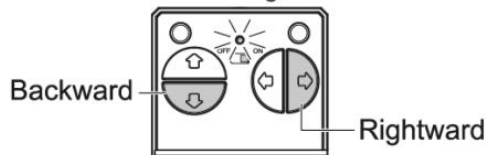

  
7. Press leftward key, mini boat left 360 degrees revolve.

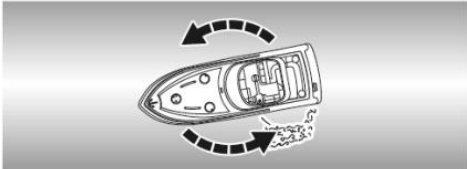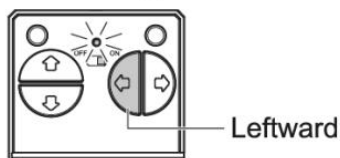

 8. Press Rightward key, mini boat right 360 degrees revolve.

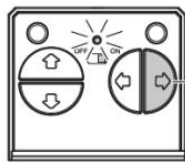


Rightward

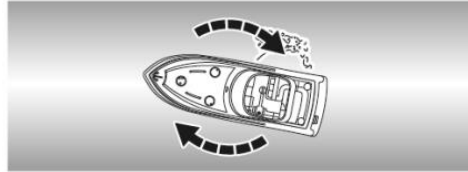 

### Trimming

When the product does not walk straight, you may adjust with trimming

 1. When the product moves to the left, please press trimming button on the right.
2. When the product moves to the right, please press trimming button on the left.

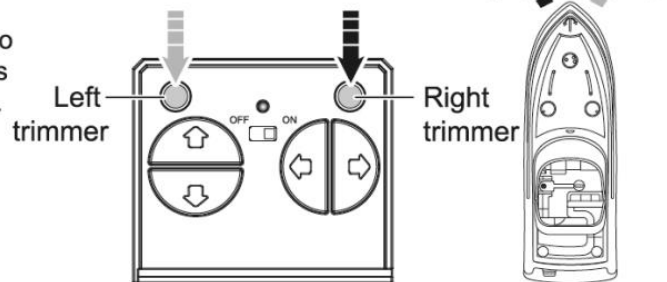

### Store mini boat

1. After use, wipe the mini boat dry with a cloth and wait for it to dry up. Then pack it in the transport case or set it on the display stand.
2. To prolong useful life of batteries in the controller, always turn off the controller after use.
3. Before the next use, check to make sure the mini boat battery has been fully charged and the controller still has sufficient power.

### ATTENTION

1. Please use the product in strict accordance with the instructions in the manual.
2. This product must be assembled and used under the supervision of adults.
3. This product contains small components. Please do not swallow the components to avoid suffocation hazards.
4. This product is not suitable for kids under three years old.
5. If there is radio interference nearby, it will affect the reception of the product signal, please change the place to try again.
6. On backout after the removal, please do not place discarded to avoid contamination sanitation.
7. Do not place near fire and high temperature, moist storage.
8. When the battery is water wet, add water to fully clean.

## **FCC ID: R6Z20224777588**

### **FCC compliance statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.