

# GUITAMMER COMPANY, INC.

## WIRELESS LINK SYSTEM

### Transmitter setup (R7H-BKLINK-S)

1. Plug the sub-woofer (.1) audio output to the RCA jack in the back of the transmitter.
2. Plug the ac adapter into the wall outlet. Plug the jack end into the back of the transmitter. This powers the unit.
3. With normal volumes set, adjust the potentiometer to where the red light just starts to blink. This sets the radio link gain below clipping. Should another source cause the red light to stay on the potentiometer must readjusted.

### Receiver setup (R7H-BKLINK-R)

1. Plug one end of the RCA audio cord to the amplifier input. Plug the other end into the back of the receiver.
2. Plug the ac adapter into the wall outlet. Plug the jack end into the receiver. This powers the unit.
3. Note: For most installations the placement of the receiver and transmitter are not critical. For distances of more than 30 feet the units must not be block by metal objects. Also the units should face each other (the power lights have line of sight).

### FCC Notice applies to both the transmitter and receiver

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID USER'S AUTHORITY TO OPERATE THE EQUIPMENT.