

End call	Incoming Call	After your phone conversation, short press the Phone button
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

Play Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired successfully with the Bluetooth Earpod to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Pause	Playing music	Short press the MF button will pause the music
Play	Pausing	Short press the MF button will resume the music
Next track	Playing music	Press and hold the MF button for 2 seconds (and release)

Note: Other functions including volume increase/decrease, previous track, you may need to control through your source device.

B. Pairing both Bluetooth Earpods with Bluetooth devices (smart phone or tablet etc)

- The right Earpod is set as the host Earpod by default. Ensure the Bluetooth Earpods are turned off. Press and hold the **MF** button on both Earpods for 3-5 seconds simultaneously, you would hear voice message "Power ON" from each Earpod.
- After few seconds, you would hear voice message "Connected". The LED light indicator on the right Earpod (host Earpod) will flash red and blue, and the left Earpod (subordinate Earpod) will flash blue slowly.
- At this point, activate the Bluetooth function on your mobile device, and search for Bluetooth devices near you.
- Once you have activated Bluetooth on your mobile device, select the **"TWS HARMONIX"** from the list of available Bluetooth devices.
- Once paired successfully, a voice message "Connected" will be heard from the right Earpod (host Earpod) and the LED on both units will flash blue slowly.

REMARK: If you would like to change the left Earpod as the host Earpod, follow below steps to get it done:

- Ensure the Bluetooth Earpods are turned off. Press and hold the **MF** button on the left Earpod for 3-5 seconds to turn on, you would hear voice message "Power ON"
- Press and hold the **MF** button on the left Earpod for 2 seconds, you would hear a beep tone.
- Then, press and hold the **MF** button on the right Earpod for 3-5 seconds to turn

5

- on, you would hear voice message "Power ON".
- After few seconds, you would hear voice message "Connected"
- The left Earpod will now become the host Earpod (and the right Earpod will become the subordinate Earpod). The LED light indicator on the left Earpod will flash red and blue, and the right Earpod will flash blue slowly.
- At this point, activate the Bluetooth function on your mobile device, and search for Bluetooth devices near you.
- Once you have activated Bluetooth on your mobile device, select the **"TWS HARMONIX"** from the list of available Bluetooth devices.
- Once paired successfully, a voice message "Connected" will be heard from the host Earpod and the LED on both units will flash blue slowly.

Making a call with the Bluetooth Earpods in Stereo pairing mode

Basic operation		
Function	Operation	Button
Answer incoming call	Incoming Call	Short press the Phone button of any Earpod to answer an incoming call.
Reject Incoming Call	Incoming Call	Press the Phone button of any Earpod for 2 seconds and release
End call	Incoming Call	After your phone conversation, short press the Phone button of any Earpod
Redial last number	Standby mode and connected to a device	Short press the Phone button of any Earpod twice

Note: Only host Earpod supports phone conversations.

Play Wireless Music in Stereo pairing mode

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earpods to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Pause	Playing music	Short press the MF button of one Earpod will pause the music
Play	Pausing	Short press the MF button of one Earpod will resume the music
Next track	Playing music	Press and hold the MF button for 2 seconds (and release)

Note: Other functions including volume increase/decrease, previous track, you may need to control through your source device.

Care and Maintenance

Read the following recommendations before using the Bluetooth Earpods. Following these you will be able to enjoy the product for many years.

6

- Do not expose the Bluetooth Earpods to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

Specifications

Bluetooth specification	Bluetooth 4.2
Operating distance	33 feet
Working time	Music: up to 1.5 hour Talk: up to 1.5 hours
Charging input voltage	DC 5V
Charging time	Charge Case: 3 hours Bluetooth Earpod: 1-2 hours
Built-in Battery	Charging Case: 400mAh Bluetooth Earpod: 45mAh (each)
Size	Charging Case: 2.17" (L) x 1.10" (D) x 2.80" (H) Bluetooth Earpod: 0.85" (L) x 0.85" (D) x 1.83" (H) (each)
Weight	Charging Case: 1.4 oz Bluetooth Earpod: 0.2 oz (each)

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

7

- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midwesttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

8