
size:100X145mm



SYLVANIA BLUETOOTH ORNAMENT SPEAKER Model: SP054

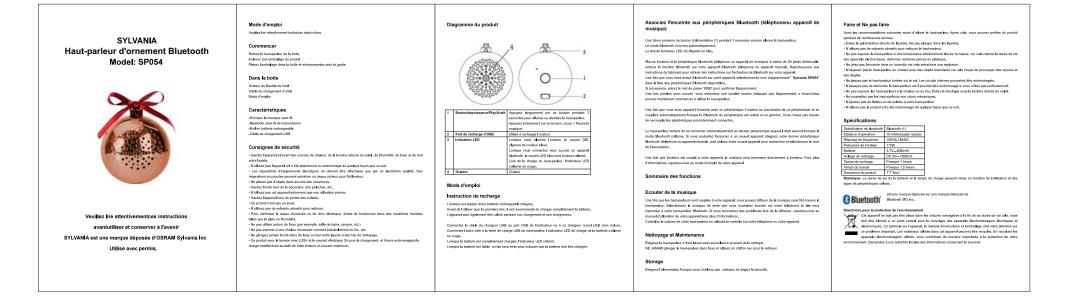

Please read these instructions thoroughly before use and retain for future reference SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

Please read all instructions carefully Getting started Remove the speaker from the box Remove any peckaging from the product Place the packaging inside the box and store for safekeeping

In the box

Christman Bauble speak USB charging cable

Instructions for use

Features Enjoy music wirelessly. Bluetooth wireless streamin Built-in rechargeable battery USB charging cable

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids
- Do not use the unit if it has been dropped or damaged in any way.
 Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may
- place the user at serious risk. Do not put objects into any of the openings Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use
- Keep the unit out of reach of children. This product is not a toy.
- Do not use abrasive cleaning solvents to clean. To minimize the risk of fire or electrical shock, avoid operating in wet conditions such as rain or humidity.
- Do not operate around water (e.g. bathroom, swimming pool etc.)
- Do not expose to excessive heat such as sunshine, fire etc. Never immerse the unit in water or any other louid for cleaning purpose

This product with Max voltage 5.25V, and electric current 2A for charging, and it will be damaged if charging i

- s done beyond this max voltage and current.

Product Diagram 0

er Switch/ Play/ Pause A long press on this button for 3 seconds will switch the speaker ON or OFF A short press on this button will Play / Pause the music; USB charging por lead to charge the speake ou turn on the speaker, the LED indicator light will fash Blue co charging the speaker, the LED indicator will light will illuminate red.

INSTRUCTION FOR LISE

Charging instructions: The seaker comes with a bulk in rechargeable battery. Before using if the first time is is recommended you charge the battery fully. The device can also be used whitst powered and is charging.

ect the USB charger cable to computer USB port or a USB wall charger (not included) USB charging slot of the Sp es. When the battery is fully charged, the LED indicator will switch off. When the battery is running law, a beep will be emitted to indicate the battery needs charging. Future in springers and the springers and the

available Elustooth devices. If required, enter the password '0000' to confirm to pairing. Once paried successfully, you will have a Beep tone indicating pairing successful and the blue LED fash slowly. You can now start to use the speaker

Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected device

The speaker will attempt to automatically connect to the last device it was paired when Bluetooth mode turns on. If you want to pair it with a new device, please turn OFF your last Bluetooth device (phone or music device) then use your new device to search and select the pairing name

Once the speaker is paired with your device the music will transmit directly to the speaker. Please refer to your device's user manual for further information.

Function Summarv

Listening to Music

Once the speakers are paired with your device you can stream music wirelessly through the speaker. Select the Once the speakers are parter was you care you can area in mass wears of introduct the speaker, area track music what you wish to listen on your phone and it will be streamed to your Buelooth speaker. Should you accounter any problems while streaming please refer you device's user manual for further information. Control the volume of your speaker using the control on your phone or device.

Cleaning & Maintenance Turn OFF the speaker if it is left unattended and before dearing. NEVER immerse the speaker into water and please use a dry doth for cleaning.

Storage Turn off the power when you not in use, clean and store safety.

Do's and Don'ts

Read the following recommendations before using the sneaker. Following these way will be able to enjoy the roduct for many years

- product for many years. Avoid direct syngl of kajds. Do not immerse in any lajids. Don't use abrankive cleaning solvenths to clean the speaker. Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, distort certain pastic parts.

- devices, device derive plete, peuk, Den 1 degeser der für speaker in film ein all matte man explexion, Den 1 engeser der speaker in form kan bis nicht auf de utgeste auf de utgeste deriver, Den 1 ein film speaker der ein to film kan bis niemend anzuhny magnet ger derangest, Den 1 ein geste beste deriver hand auf der deriver auf der derangest, Den derageste bespeakers hand auf fahr, Andel storgen direct untight. Den derageste bespeakers hand auf derak often, Den derageste bespeakers hand einster alt konkt. Den derageste bespeakers hand einster alt konkt. Den derak auf gefrächt mellekter bespracht gefrächten einster alt konkt. Den derak auf gefrächt mellekter bespracht gefrächten einster alt konkt.

Specifications B O FI SI B C

uetooth specification	Bluetooth 4.1
perating distance	10 meters (open space)
equency response	100Hz-18KHz
eaker power	1 x 3W
uilt-in battery	3.7V / 400mAh
narging input voltage	DC 5V - 1000mA
narging time	About 1 hours
orking time	About 1.5 hours
oduct size	7x7x8CM
Battery life & charging time may vary based on usage & types of devices used	

Bluetooth Buetooth SIG Inc.

protocol of the environment To an oppring the observation of the environment of the environment point for respective double to perform the environment of the environment point for respecting of electrics and electrics domestic applications. This synthesis applications, instructions moved and point for respecting of electrics and electrics domestic applications. The synthesis application procession of the point for any electric application of the environment of the electric application of the environment. All your local addression is utilized on the electric application of the electric application of our environment. All your local addression is utilized on the point of modelines. X **—** '

Pairing the speaker with Bluetooth devices (phone or music device d rush of the Power button (1) for about 3 seconds will turn the sneaker ON The blue LED will flash quickly, it means in Bluetooth pairing mode

saker and Bluetooth device (phone or music device) no further than 20 feet apart;

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.