

BLUETOOTH SPEAKER



INSTRUCTION MANUAL

Please read all instructions carefully and

retain for future reference

Getting Started

- Remove the unit from the box.
- Remove any packaging from the product

- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

In the Box

- Bluetooth speaker
- AC/DC power adapter
- Remote control
- User manual

Features

 
- Stream wireless music
- Built-in FM radio
- Multi-colored lights & water fountain dances to the beat of your music, creating stunning visual effect
- Connects to your Bluetooth enabled device
- Built-in line in jack
- DC adapter included to operate device
- Remote control included

Safety instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given appropriate supervision and instructions to use the equipment by a person responsible for their safety.
- Do not leave the equipment unattended while connected to the power supply.
- Never leave the equipment within reach of children.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user and/or equipment at serious risk.

- This equipment is intend for household use only and should not be used for industrial or commercial purposes.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Do not use this equipment for anything other than its intended use.
- This equipment must be placed on a stable, heat resistant surface.
- Do not push objects into any openings as damage to the equipment and/or electric shock may occur.


**Description of Parts
(Main unit)**

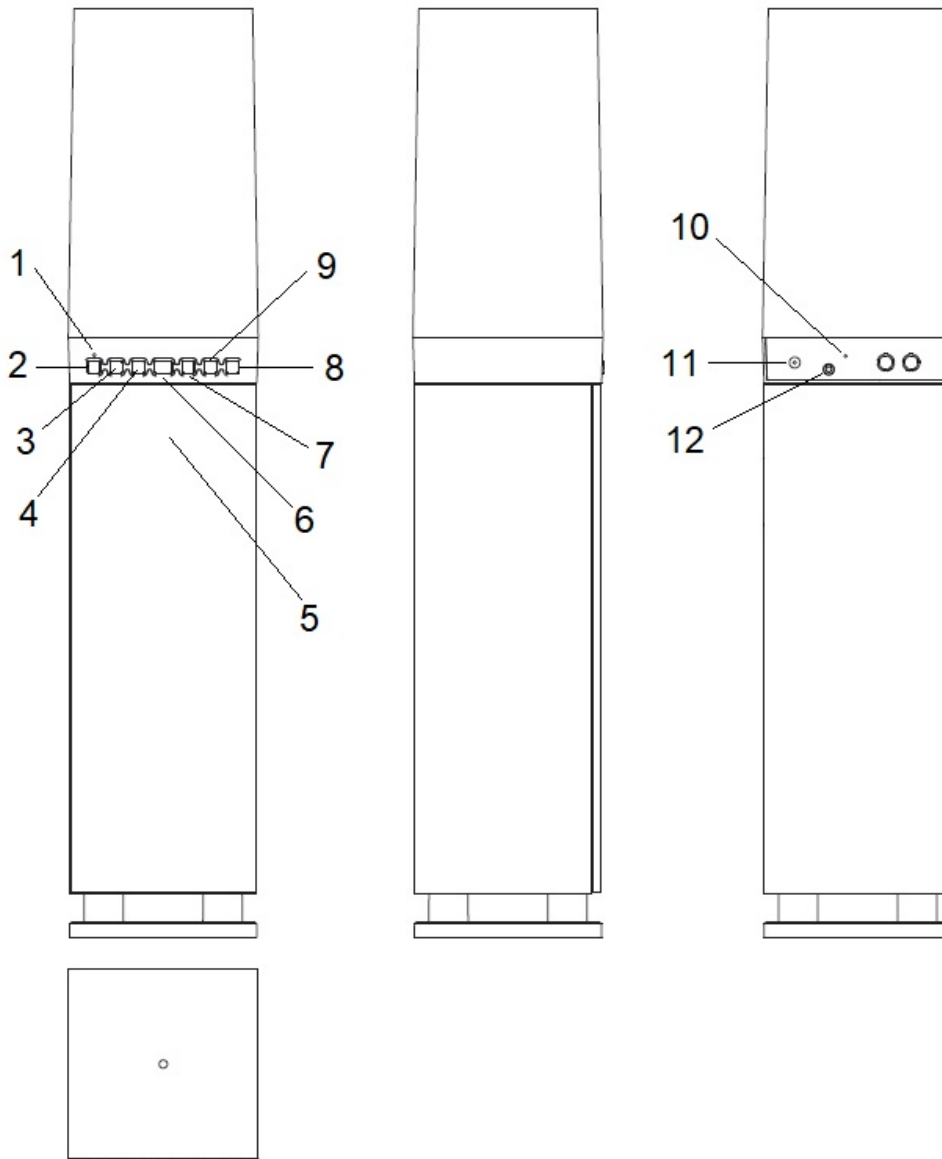

1. Power On Indicator	7. VOL – Button
2. Power On/Off Button	8. Source/Water Dancing (with multi-colored

	lights) Button
3. Previous FM Station/Track	9. VOL + Button
4. Next FM Station/Track	10. Antenna
5. Remote Sensor	11. DC Adapter Input Port
6. Play/Pause/FM Scan Button	12. Aux In Port

 (Remote Control)

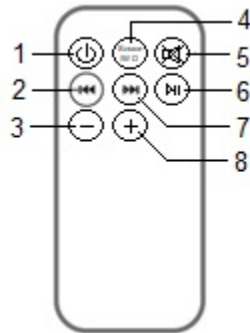


No	Function	Operation
1	Power On/Off Button	To Turn On/Off the speaker
2	Previous FM Station/Track	Short press the button to the FM station / track
3	VOL -	Press and hold the button will decrease the volume
4	Source/Water Dancing (with multi-colored lights) Button	Short press the button to change the playing source, or press and hold the button to turn on/off the Water Dancing (with multi-colored lights)
5	Mute	Short press will off the sound and the next press will resume the sound
6	Play/Pause/FM Scan Button	Short press will stop the music and the next press will resume the music, or will search and store all FM radio stations automatically
7	Next FM Station/Track	Short press the button to the next FM station / track
8	VOL +	Press and hold the button will increase the volume

Note: The buttons 2 and 7 are not workable when the product is operated by "AUX IN".


Battery Installation

 In first time use, remove the insulation tab from the battery compartment of the Remote Control.

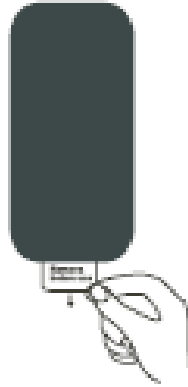

Remote Control includes the battery (1 CR2025 Lithium battery); when battery is drained, replace battery as below:

 1. Pull the battery tray out of the battery compartment of Remote Control.
2. Place new CR2025 button cell battery in the tray slot, as per the indicated polarity.
3. Close the battery tray.

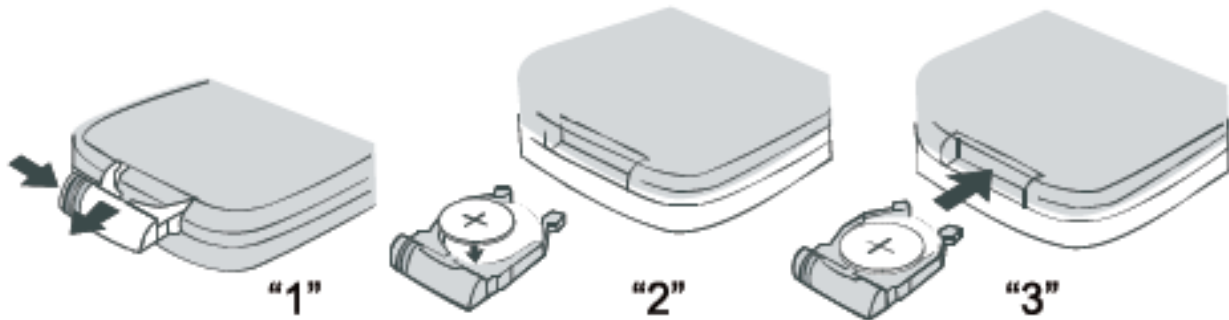

Instructions for Use

Installation

Insert the pin from the supplied AC/DC adapter to DC Adapter Input Port on the rear of the unit. Plug the AC/DC adapter to a wall power outlet (AC 100-240V 50/60Hz).

General Operation

1. Press and hold the **Power On/Off Button** of the unit for 2-3 seconds to turn on the unit with blue LED light on. P
2. Press the **Source** button repeatedly to select the playback source. P
3. Press the **VOL +/- buttons** to adjust volume level. P
4. Press the **Mute** button on the remote control to turn off the sound. Press it again to turn it off. P
5. If the unit is not used for a long period of time, turn off the unit and pull out the plug. I

Using Bluetooth

1. Keep your Tower Speaker and Bluetooth enabled device within 3 feet of each other during the pairing process.
2. Press and hold the **Power On/Off Button** of the unit for 2-3 seconds to turn on the unit with blue LED light on.
3. You would hear an indication tone.
4. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
5. It will search for available Bluetooth devices.
6. Bluetooth Tower Speaker would appear as "**DANCING TOWER**", in the list of searched devices. Select it from the available list of devices.
7. If required, enter the password '0000' to confirm pairing.
8. Once paired successfully, you would hear another indication tone.
9. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat the steps outlined above.
10. Select your favorite song at the Bluetooth source device and music would now stream through the speaker.

Play Music from Bluetooth devices.

Make sure the Bluetooth connection between the unit and the device is active.

1. Press **Play/Pause** button to suspend momentarily the playing track. Press **Play/Pause** button again to resume playing.
2. Press Next Track button to skip forward to the next track or Previous Track button to skip backward to the previous track.

Note: The Bluetooth Tower Speaker will connect automatically with the last paired device when its Bluetooth function is on.

Listen to the radio by auto search channel function

1. Turn on the unit. T
2. Short press **Source** button on the panel or remote control repeatedly until you hear FM radio signal/station. S
3. Short press the **FM Scan button** on the panel or remote control, then the unit will start to search all available stations and store into the memory automatically. S

To enhance radio reception ability:

FM: Fully unwind the antenna wire and extend it.

Using Aux-in source

1. Turn on the unit. T
2. Plug one end of 3.5mm Aux cable (not included) to the Aux in port of the speaker, and the other end of the cable to your device (e.g. iPod / iPad / MP3 player). P
3. Use your device's controls for music playback. U

Note: Once Aux cable is connected to the speaker in Bluetooth mode, music through the Bluetooth will be stopped. Media can be controlled only through source devices, while playing music in Auxiliary mode (except VOL+/- and/or Mute).

Water Dancing (with LED Lights) of speaker

While the unit is playing with water dancing (with multi-colored lights), press and hold the Source/ Water Dancing (with multi-colored lights) Button on the unit or remote control can turn on/off the flashing LED lights.

Specification

Bluetooth version : 4.2
 Speaker output power: 2x3W
 FM frequency range : 87.5 – 108MHz
 Size : 21-1/2”(H) x 4-3/8”(W) x 4-3/8”(D)
 Weight : 3 lb 2 oz
 Power supply : AC/DC adapter (Input: AC 100-240V 50/60Hz 0.3A, Output: DC 5V
 1.5A centre positive)
 Bluetooth Range : 27 - 33 Feet

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
No sound at all.	Source (Tablet, Mobile Phone, and Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.
Cannot Pair	Bluetooth Disconnected	Turn OFF the Speaker; and then Turn ON the speaker after about 30 seconds. Keep your Bluetooth Speaker and Bluetooth enabled device within 3 feet of each other during the pairing process. After a successful pairing, you would hear another indication tone.

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

FCC Instructions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.