

Bluetooth speaker

YM-S1



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**



Getting started

- Remove the Bluetooth speaker & accessories from the box.
- Remove all packaging from the Bluetooth speaker.
- Place the packaging inside the box to either store or dispose of safely.

In the Box

- Bluetooth Speaker
- USB Charging Cable
- Instruction Manual
- Hanger wire
- AUX cable

Features


- With Hanger wire
- With Selfie function
- Enjoy music by micro sd card or Bluetooth or Aux
- Built-in mic for hands free phone calls
- Volume Control
- Media Control (pause/play, previous track/next track)

Safety Instructions

- Read this manual carefully before putting the appliance into operation and keep this manual for future reference.
- Keep the device away from heat, direct sunlight and sharp edges.
- Keep the device away from naked flames.
- Do not insert any metal object into the device. Risk of short circuit!
- To avoid a static charge, do not use the device in an extremely dry climate.
- Do not repair the unit yourself but contact an authorized specialist.
- Do not submerge in water.

Description of buttons



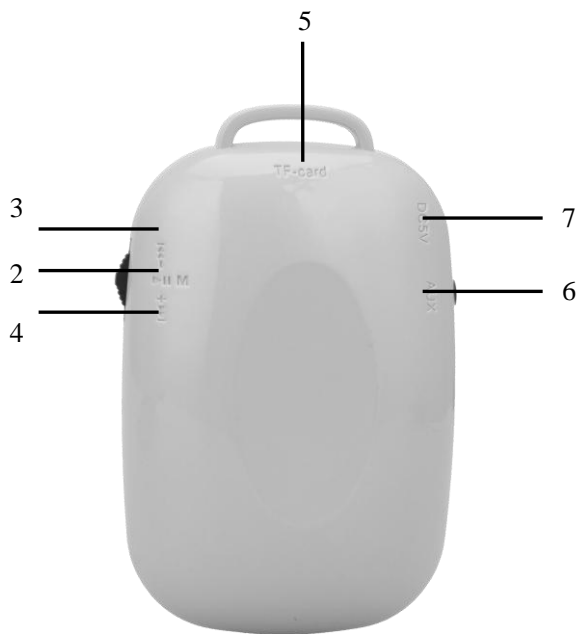

- 1: Power on/off button, Selfie button
- 2: Play/pause, phone pick up/hang up button---short press, Long press for "M" function, Transfer micro sd card model & Bluetooth mod or AUX mode
- 3: Short rotate-PREV, Long Rotate- Volume down
- 4: Short rotate- NEXT, Long rotate- Volume up
5. Micro sd card
6. Aux jack
7. USB charging jack

Charging Instructions

This Bluetooth speaker comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully.

1. Connect the USB cable to the micro USB port on the unit.
2. Connect the other end of the USB cable to a USB port on a PC or an AC/DC adapter. The red LED turns on indicating the battery is being charged. When the battery is fully charged, the LED will turn off.

Bluetooth pairing

1. Turn on the Bluetooth speaker.
2. Turn on your Bluetooth enabled device and activate the Bluetooth function.
3. Search for the Bluetooth device, “YM-S1” will show up.
4. Pair your Bluetooth enabled device with “YM-S1”. If a password is needed, type in “0000”. After the “YM-S1” is paired with your device, connect it to your device.

Tips:

Once the speaker is paired and connected to your Bluetooth device, it automatically connects the next time as long as the Bluetooth on your device is on.

Selfie function

Once the speaker is connect with your mobile phone, you can use it take photos. It is very convenient and popular.

Just enjoy it for music and Selfie.

Specifications

Bluetooth version	3.0+EDR
Bluetooth profiles	HSP, HFP, A2DP and AVRCP
Bluetooth range	10 meters (equal to 33 feet)
Frequency range	2.402-2.48GHz
Audio Output power	3 watts
Frequency response	100Hz-20kHz
Distortion	≤1%
Microphone sensitivity	-40db
Playback time	4 hours
Charging input power	DC 5V
Charging time	Approx 3 hours
Unit size	52*30*82 mm
Unit weight	Approx. 75g
Battery Capacity	300mAH

Note: Battery life & charging time may vary, based on usage & types of devices used.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) this device may not cause harmful interference, and (2) this device must accept any

interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential

installation. This equipment generates, uses

instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause

harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit

different from that to which the receiver is
connected.

-- Consult the dealer or an experienced radio/TV
technician for help.

IC Warnings:

This device complies with Industry Canada's
licence-exempt RSSs

Operation is subject to the following two conditions:

(1) This device may not cause interference and (2) this
device must accept any interference, including
interference that may cause undesired operation of the
device.

Le présent appareil est conforme aux CNR d'Industrie
Canada applicables aux appareils radio exempts de
licence. L'exploitation est autorisée aux deux conditions
suivantes :

(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage

radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.