




User's Manual

Product Name : Remote control for ceiling fan 7RC04-CF100002

FCC ID: R8Y7RC04-CF100002

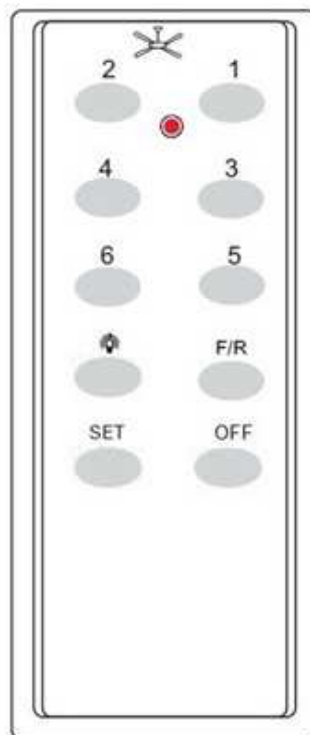

The Remote control buttons are defined below :

- Six-speed buttons-No.1 is the highest speed,No.6 is the lowest speed
- Light button-Light turn on/turn off
- F/R button-forward/reverse from rotation
- OFF button-Power turn off
- Set button-learning setting

Operating remote control :

Install two 1.5 volt batteries into the hand-held remote control. Press any speed button to start fan operation.

Note : If not using for long period of time, remove batteries to prevent damage of remote control. Store the remote control away from human body.

Operating Frequency : 2410 MHz 、 2420 MHz 、 2425 MHz

Warning !

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

“This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”