 
 



802.11n-20 MHz CHANNEL 10, SPURIOUS
30 MHz ~ 3 GHz

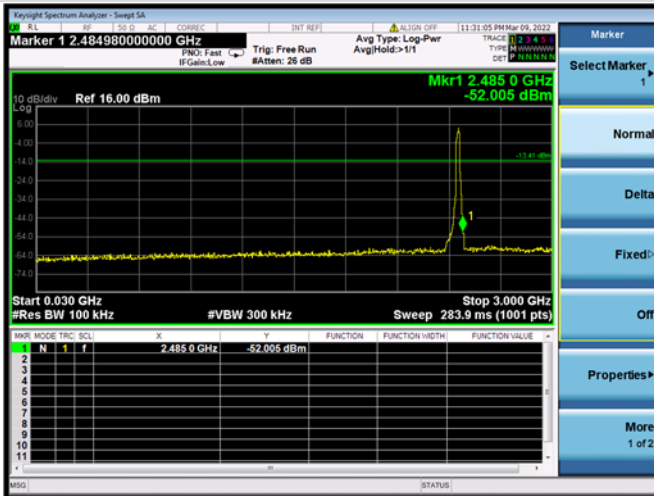


802.11n-20 MHz CHANNEL 10, SPURIOUS
2 GHz ~ 25 GHz

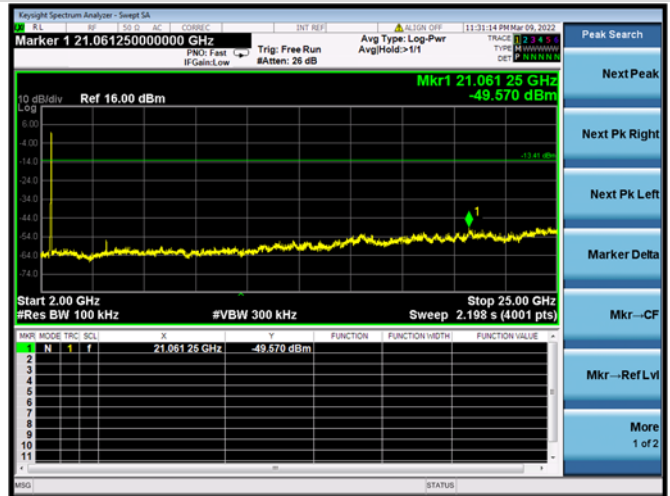

 
802.11n-20 MHz CHANNEL 11 CARRIER LEVEL

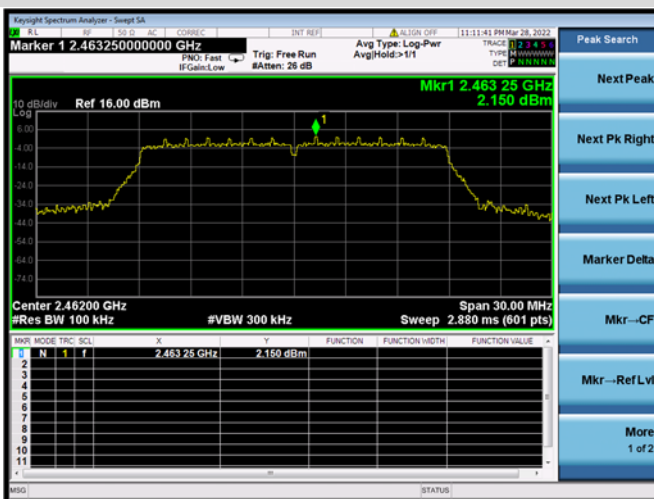

 
802.11n-20 MHz CHANNEL 11, SPURIOUS
30 MHz ~ 3 GHz

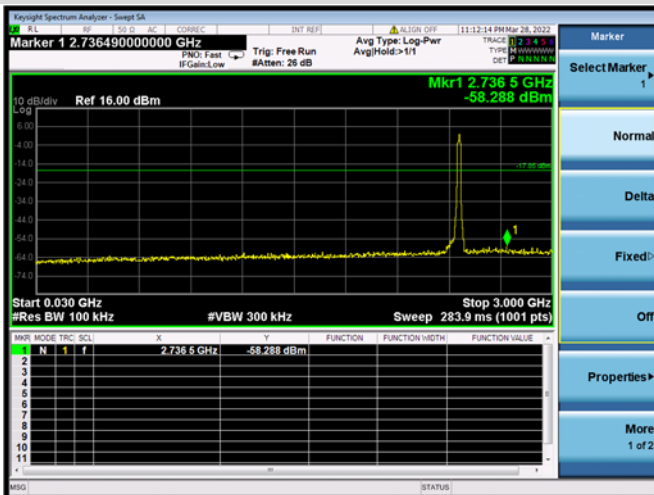

 
802.11n-20 MHz CHANNEL 11, SPURIOUS
2 GHz ~ 25 GHz

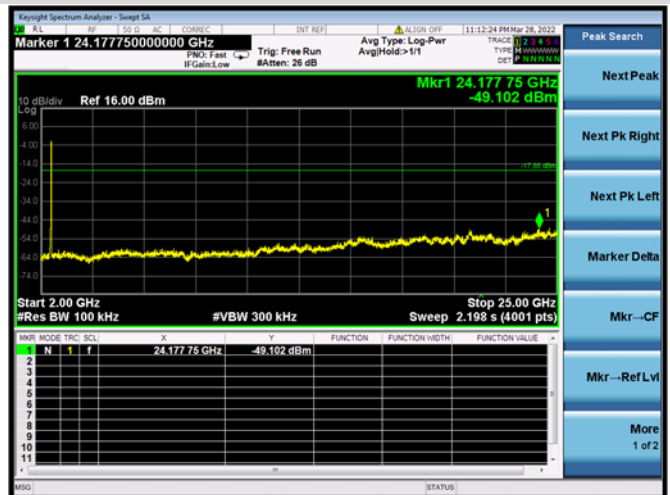

 
802.11n-40 MHz CHANNEL 3 CARRIER LEVEL

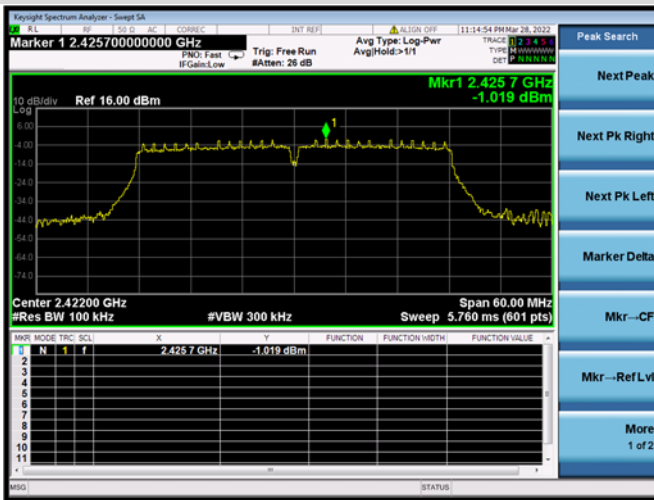

 
802.11n-40 MHz CHANNEL 3, SPURIOUS
30 MHz ~ 3 GHz

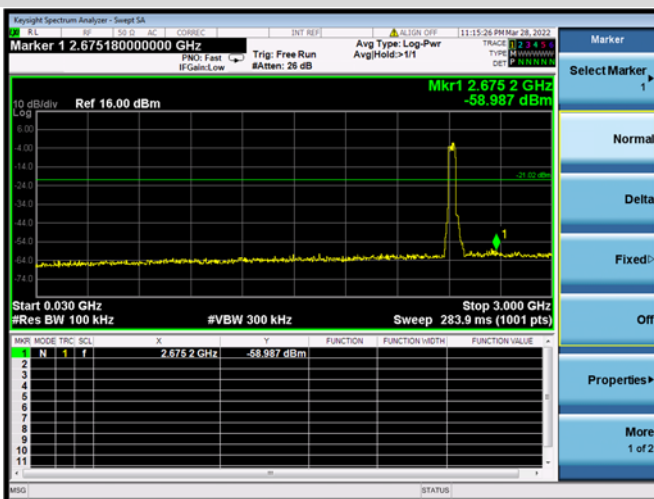

 
802.11n-40 MHz CHANNEL 3, SPURIOUS
2 GHz ~ 25 GHz

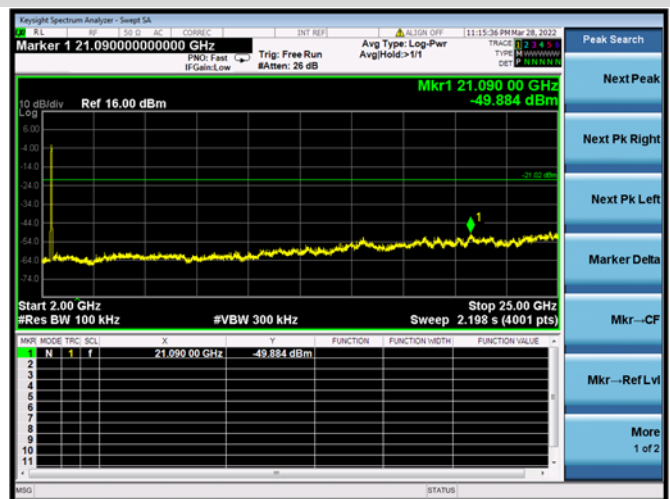

 
802.11n-40 MHz CHANNEL 4 CARRIER LEVEL

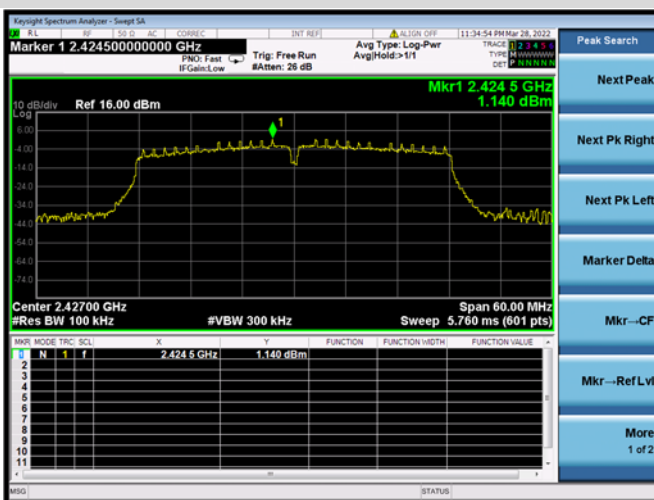

 
802.11n-40 MHz CHANNEL 4, SPURIOUS
30 MHz ~ 3 GHz

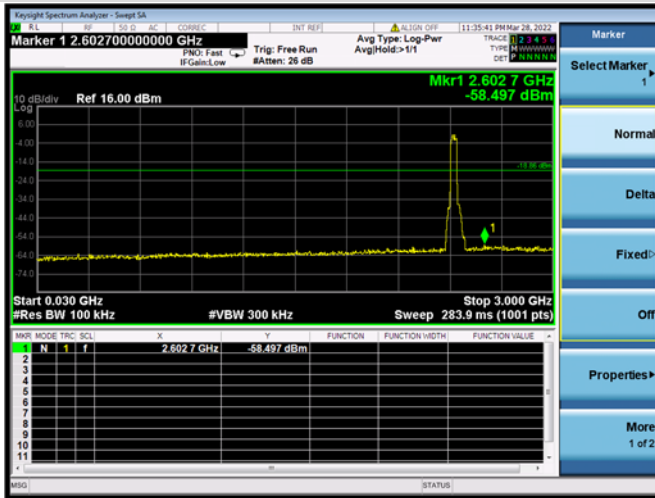

 
802.11n-40 MHz CHANNEL 4, SPURIOUS
2 GHz ~ 25 GHz

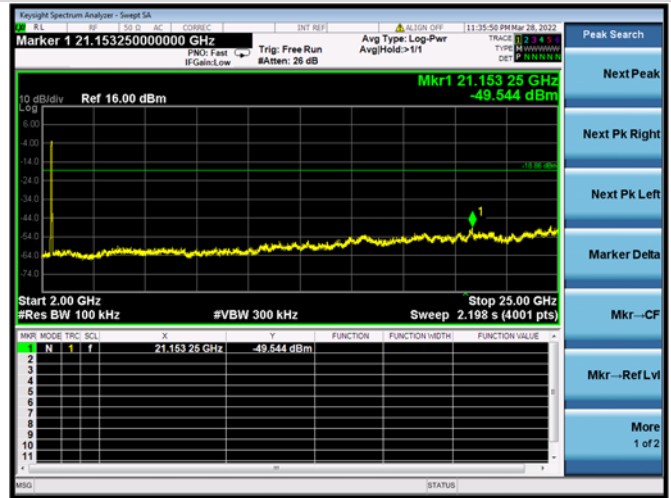

 
802.11n-40 MHz CHANNEL 5 CARRIER LEVEL

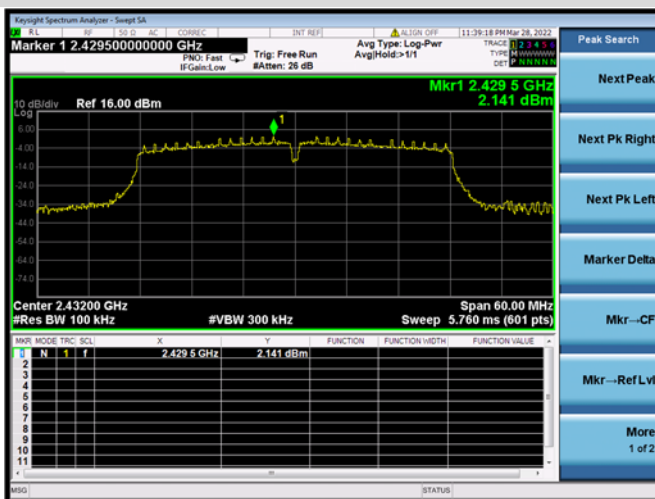

 
802.11n-40 MHz CHANNEL 5, SPURIOUS
30 MHz ~ 3 GHz

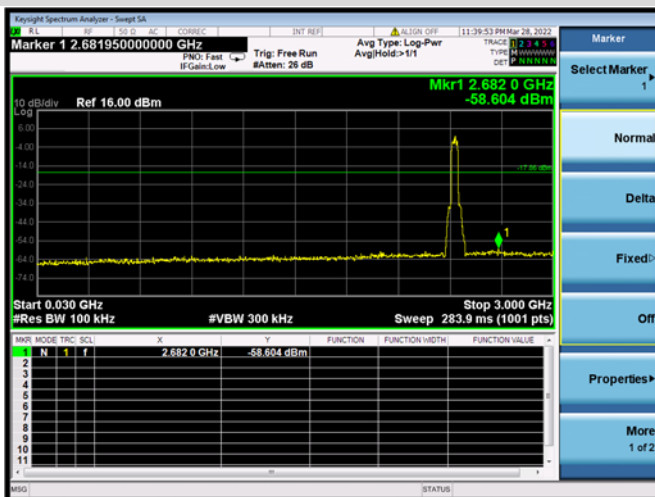

 
802.11n-40 MHz CHANNEL 5, SPURIOUS
2 GHz ~ 25 GHz

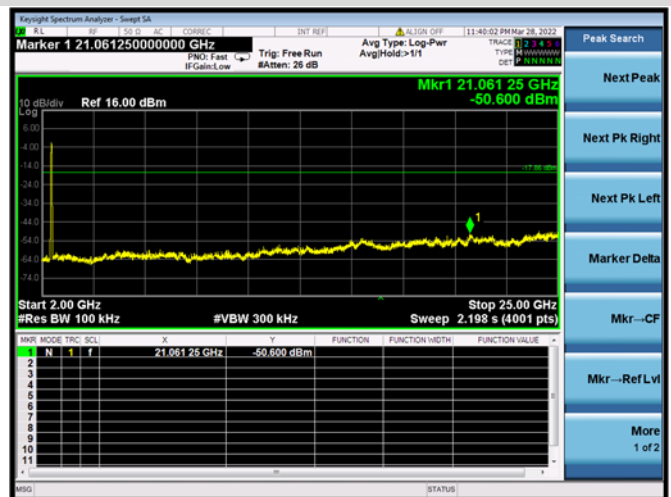

 
802.11n-40 MHz CHANNEL 6 CARRIER LEVEL

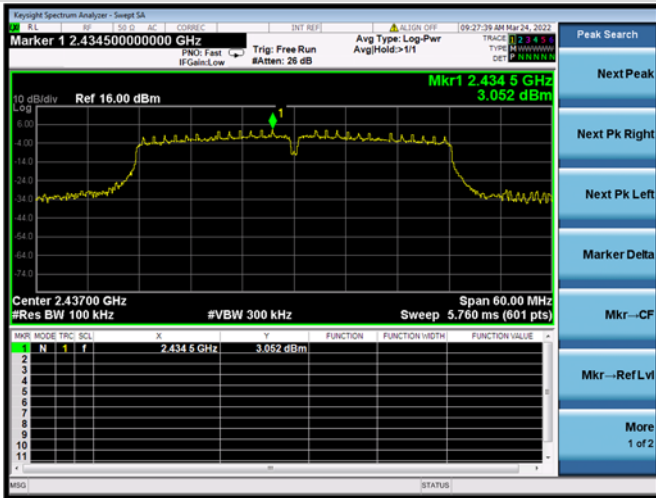

 
802.11n-40 MHz CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

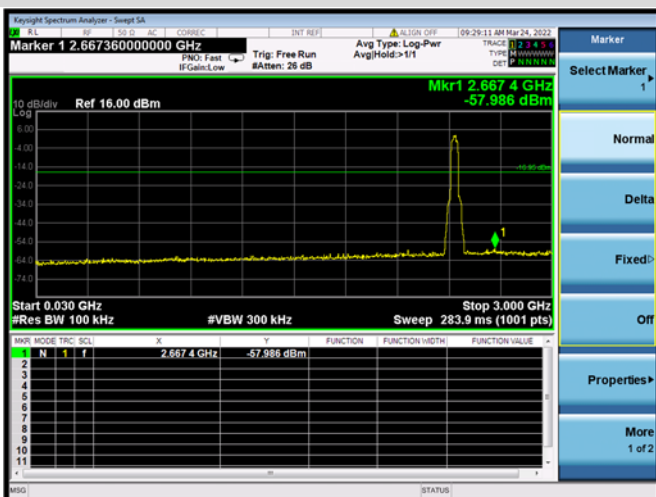

 
802.11n-40 MHz CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz

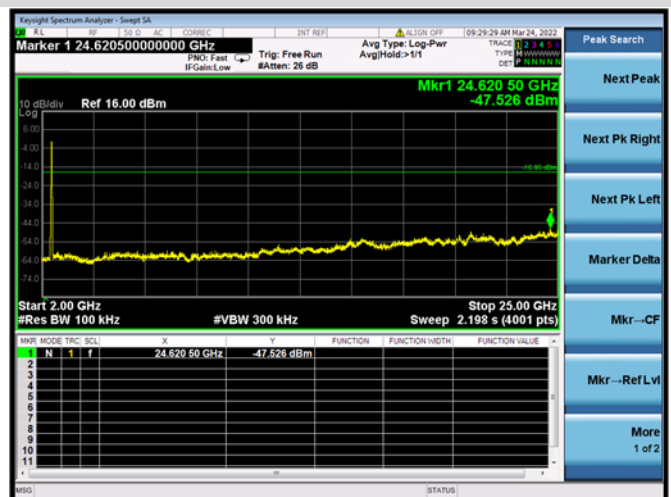

 
802.11n-40 MHz CHANNEL 7 CARRIER LEVEL

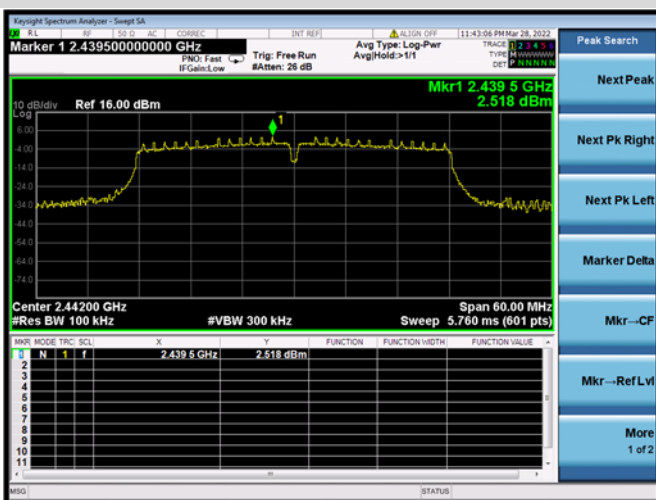

 
802.11n-40 MHz CHANNEL 7, SPURIOUS
30 MHz ~ 3 GHz

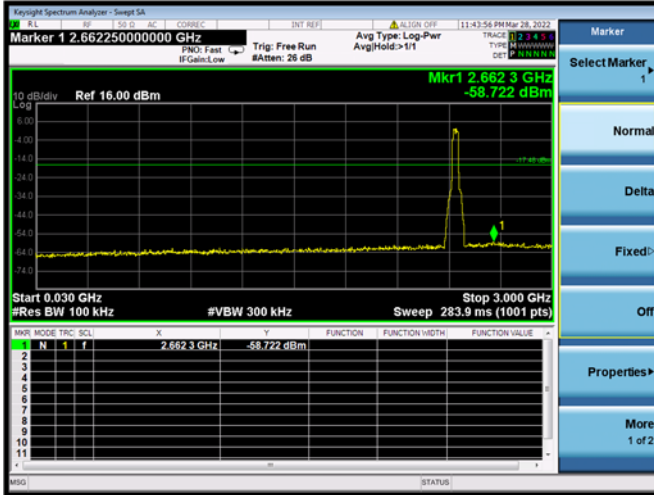

 
802.11n-40 MHz CHANNEL 7, SPURIOUS
2 GHz ~ 25 GHz

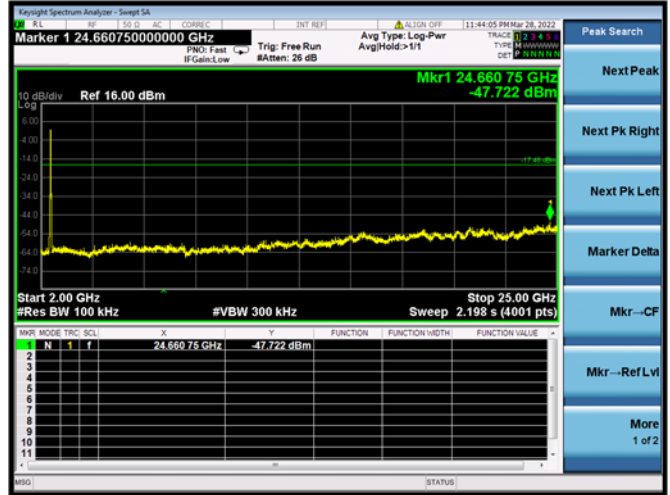

 
802.11n-40 MHz CHANNEL 8 CARRIER LEVEL

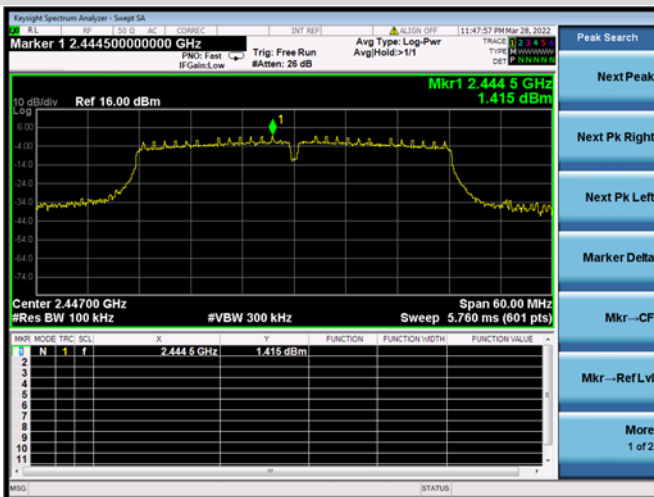

 
802.11n-40 MHz CHANNEL 8, SPURIOUS
30 MHz ~ 3 GHz

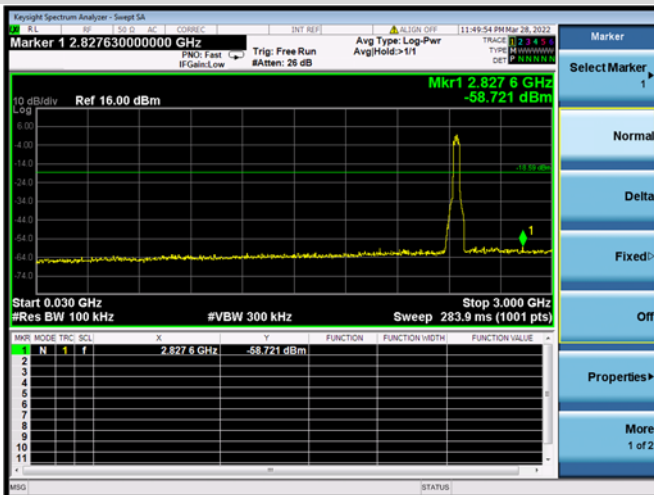

 
802.11n-40 MHz CHANNEL 8, SPURIOUS
2 GHz ~ 25 GHz

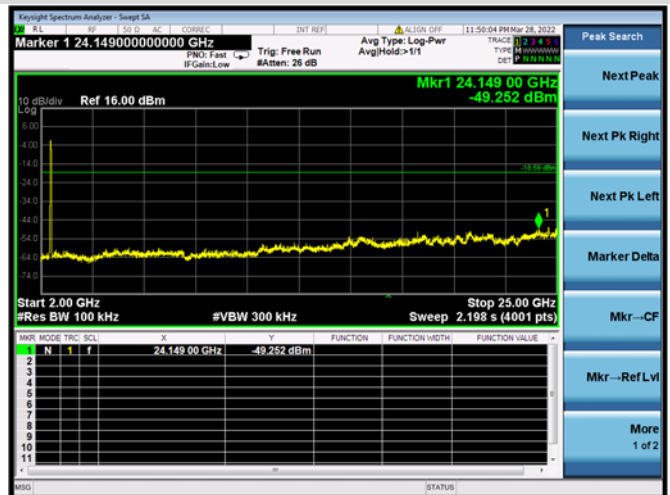

 
802.11n-40 MHz CHANNEL 9 CARRIER LEVEL

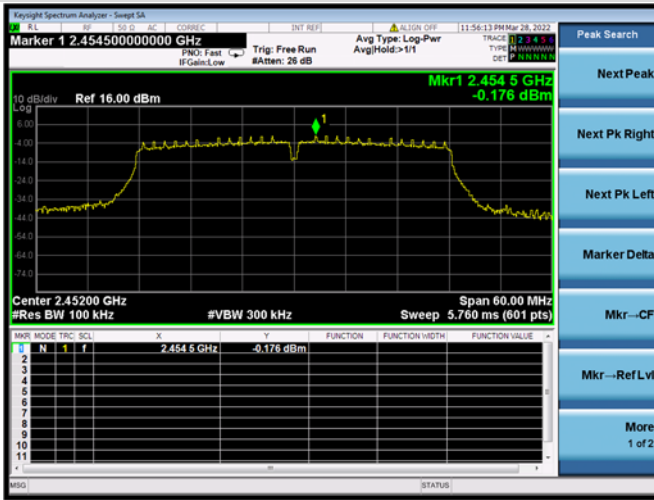

 
802.11n-40 MHz CHANNEL 9, SPURIOUS
30 MHz ~ 3 GHz

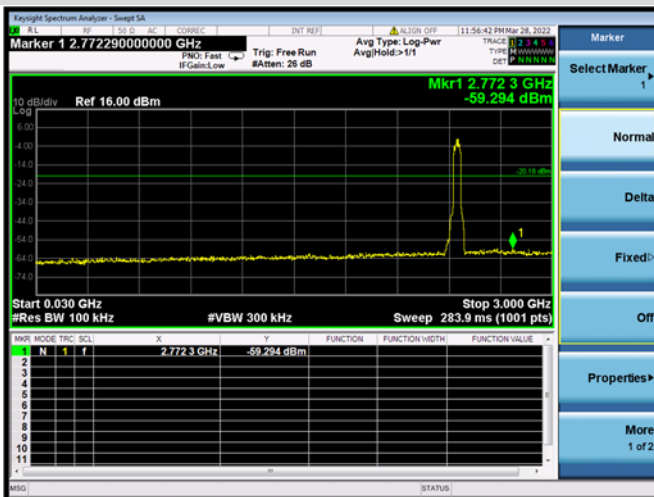

 
802.11n-40 MHz CHANNEL 9, SPURIOUS
2 GHz ~ 25 GHz

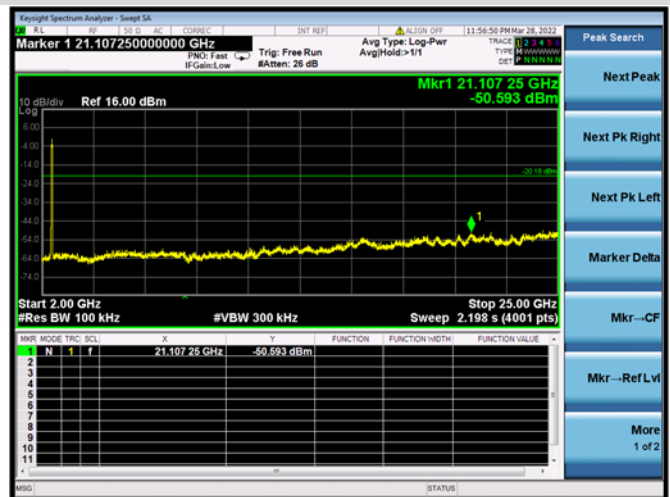


VHT(20 MHz) CHANNEL 1 CARRIER LEVEL

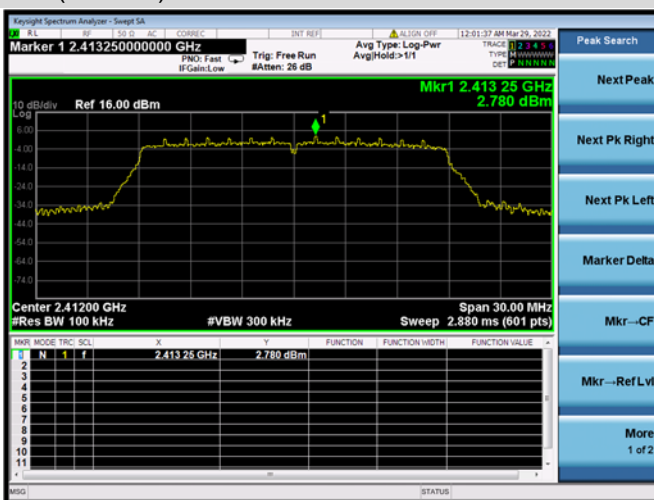 

 
VHT(20 MHz) CHANNEL 1, SPURIOUS
30 MHz ~ 3 GHz

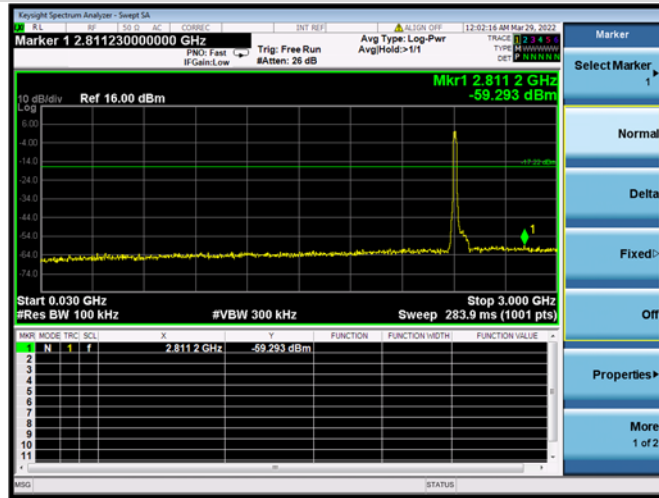

 VHT(20 MHz) CHANNEL 1, SPURIOUS
2 GHz ~ 25 GHz


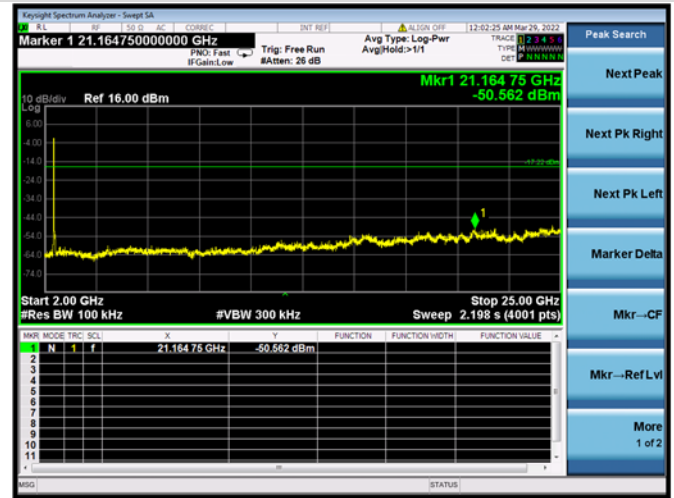


VHT(20 MHz) CHANNEL 2 CARRIER LEVEL

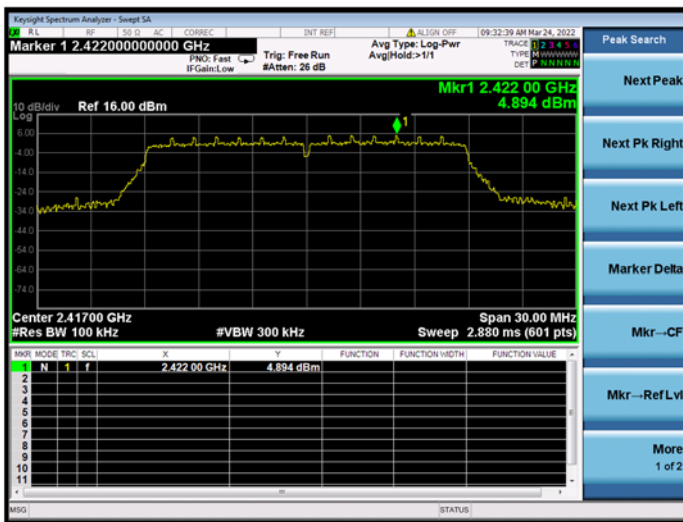 


VHT(20 MHz) CHANNEL 2, SPURIOUS 30 MHz ~ 3 GHz

  VHT(20 MHz) CHANNEL 2, SPURIOUS
2 GHz ~ 25 GHz

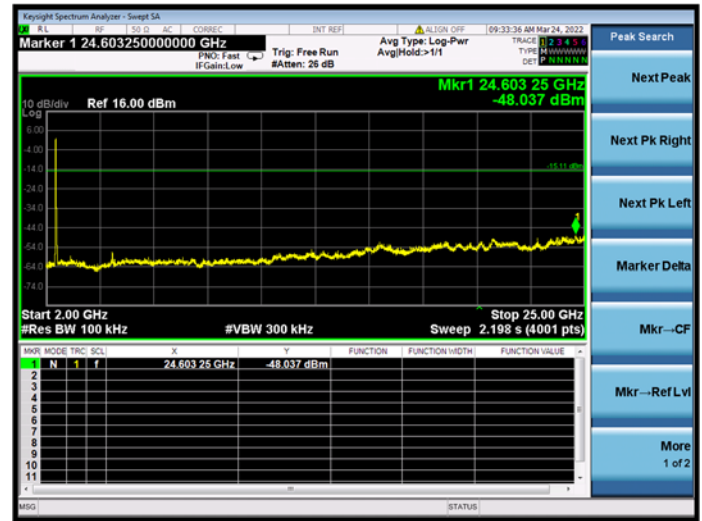
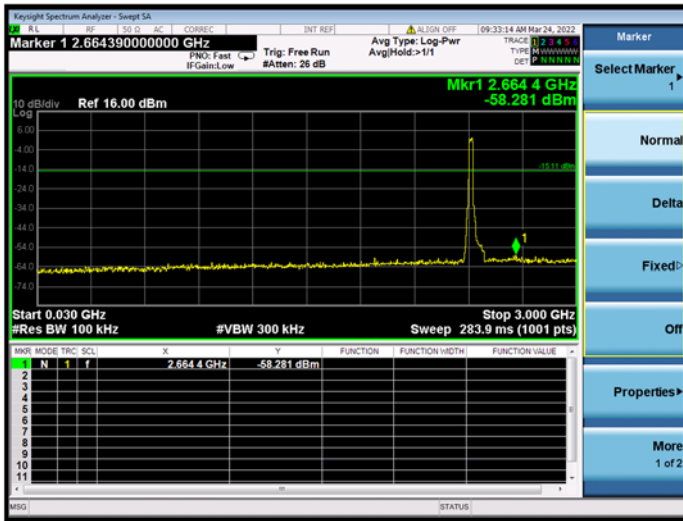


VHT(20 MHz) CHANNEL 6 CARRIER LEVEL

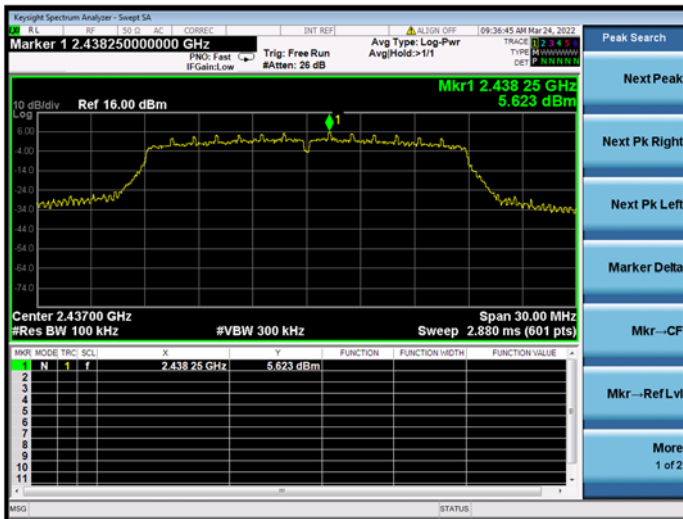 


VHT(20 MHz) CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

  VHT(20 MHz) CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz

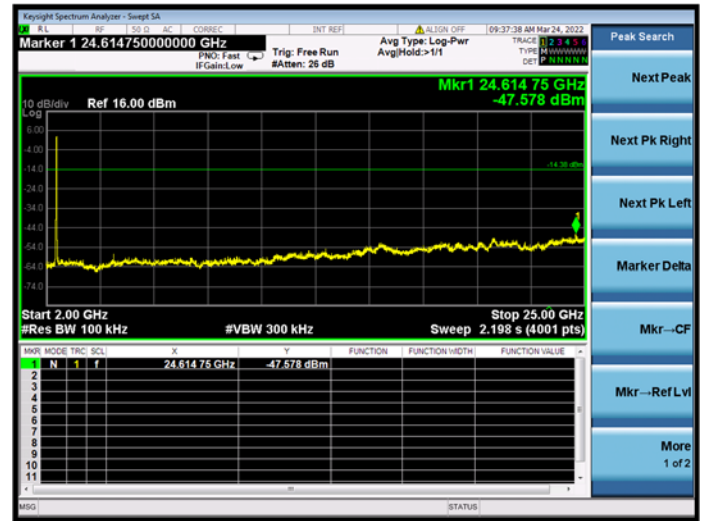
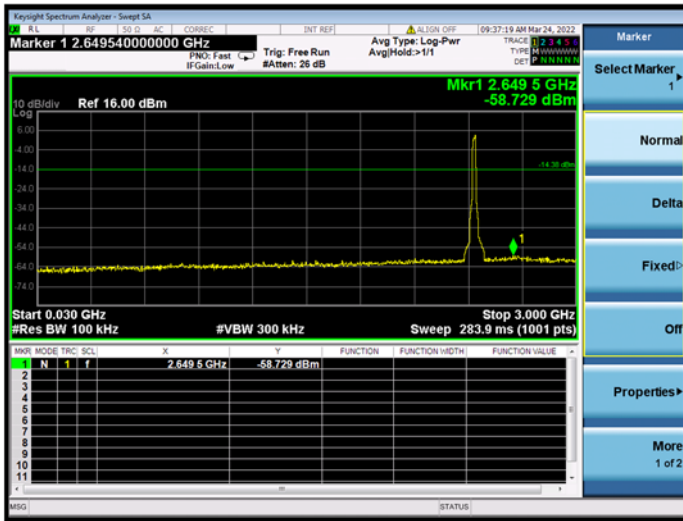


VHT(20 MHz) CHANNEL 10 CARRIER LEVEL

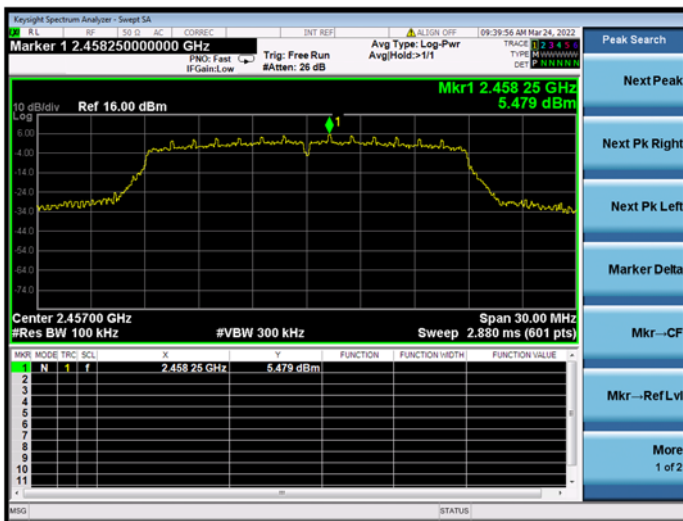 


VHT(20 MHz) CHANNEL 10, SPURIOUS
30 MHz ~ 3 GHz

  VHT(20 MHz) CHANNEL 10, SPURIOUS
2 GHz ~ 25 GHz

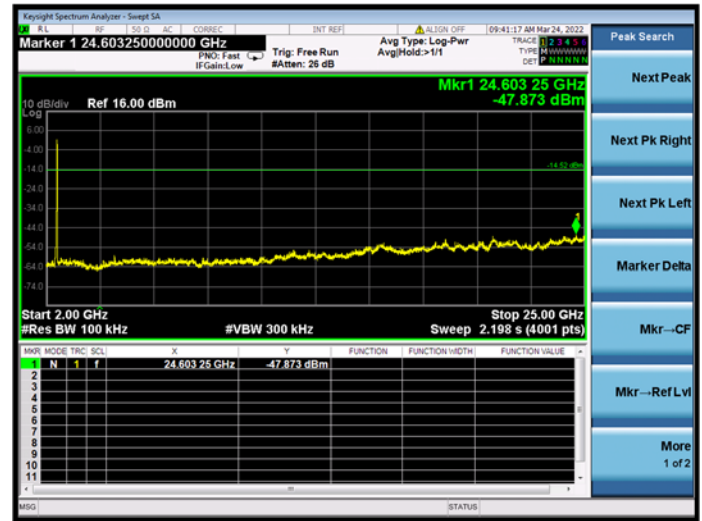
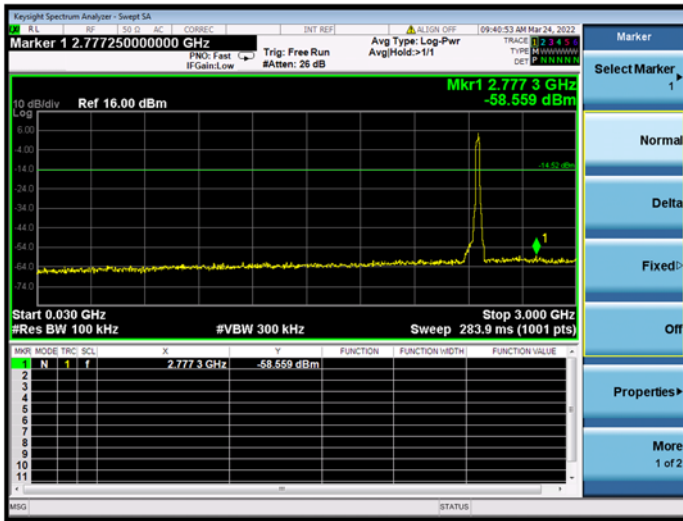


VHT(20 MHz) CHANNEL 11 CARRIER LEVEL

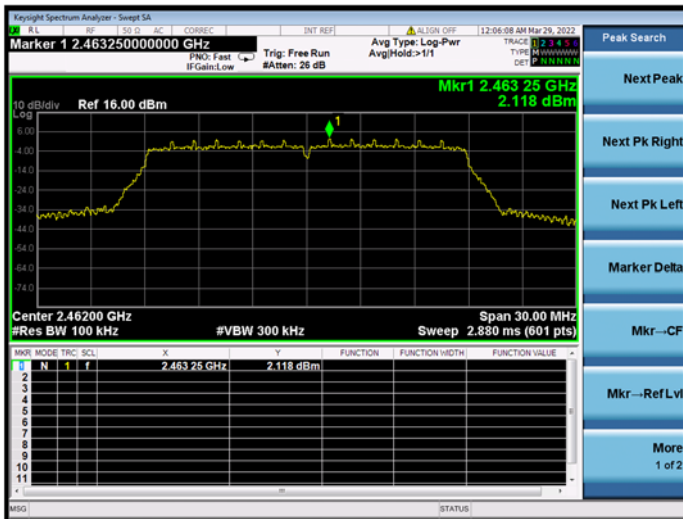 


VHT(20 MHz) CHANNEL 11, SPURIOUS
30 MHz ~ 3 GHz

  VHT(20 MHz) CHANNEL 11, SPURIOUS
2 GHz ~ 25 GHz

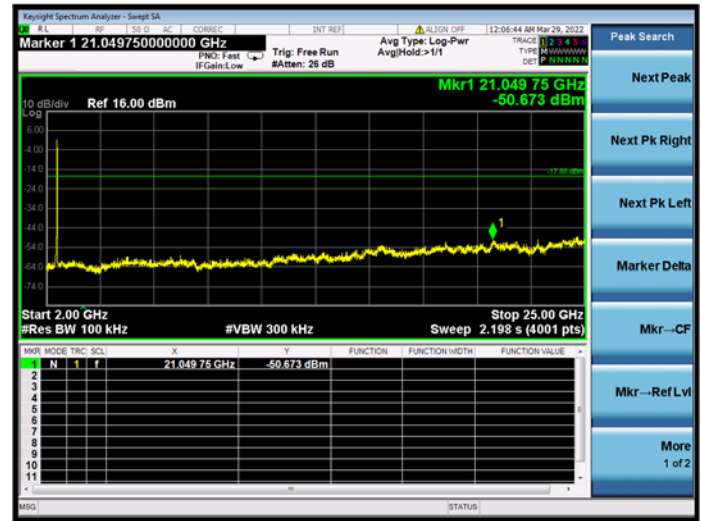
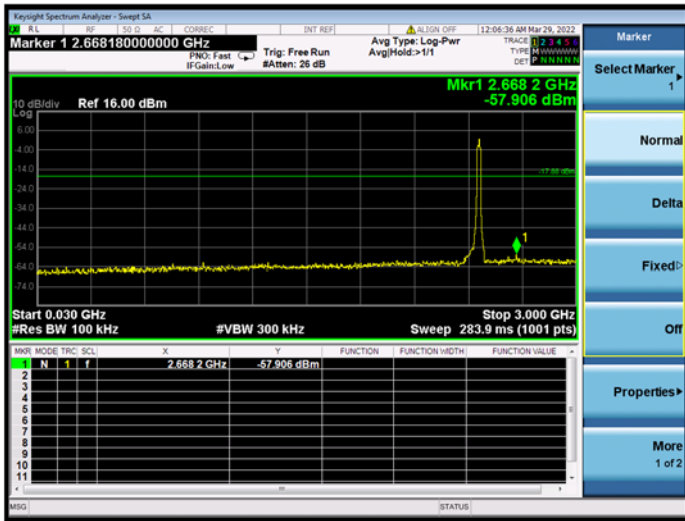


VHT(40 MHz) CHANNEL 3 CARRIER LEVEL

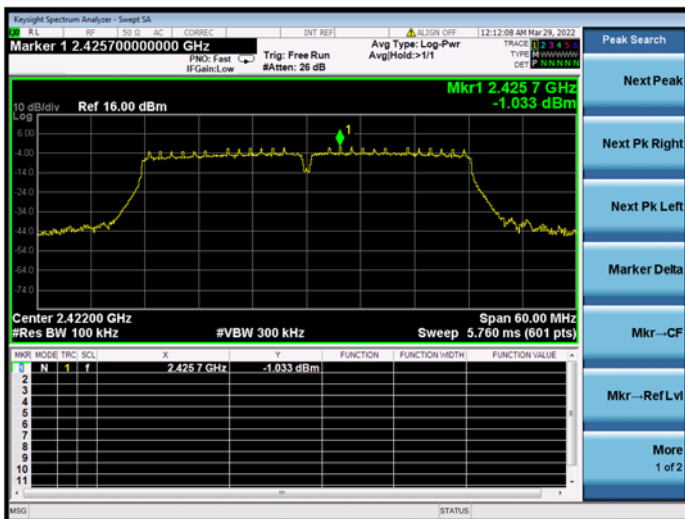 


VHT(40 MHz) CHANNEL 3 CARRIER, SPURIOUS
30 MHz ~ 3 GHz

  VHT(40 MHz) CHANNEL 3 CARRIER, SPURIOUS
2 GHz ~ 25 GHz

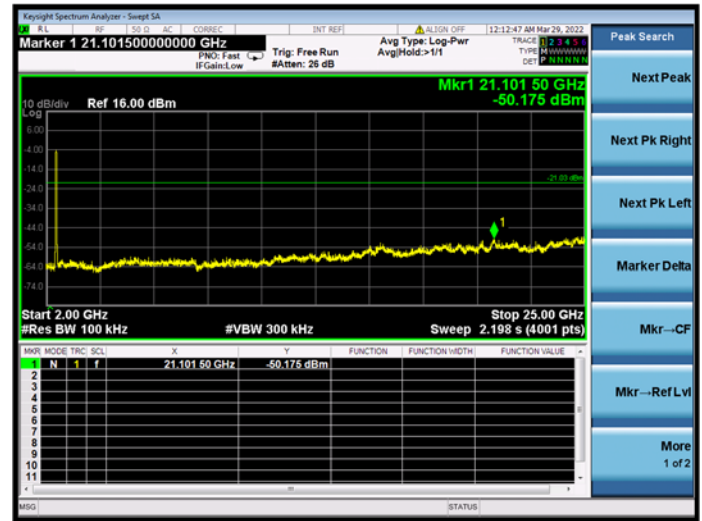
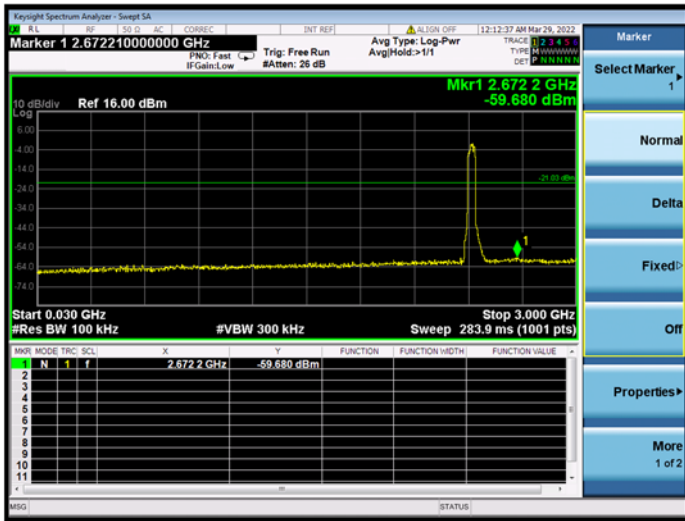


VHT(40 MHz) CHANNEL 4 CARRIER LEVEL

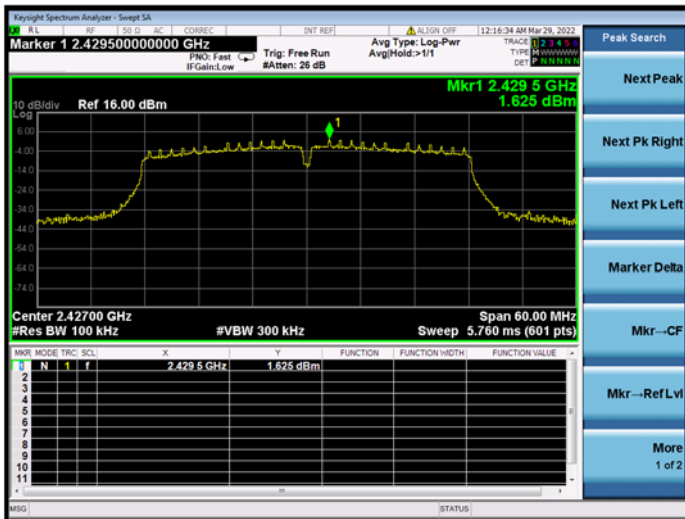 


VHT(40 MHz) CHANNEL 4 CARRIER, SPURIOUS
30 MHz ~ 3 GHz

  VHT(40 MHz) CHANNEL 4 CARRIER, SPURIOUS
2 GHz ~ 25 GHz

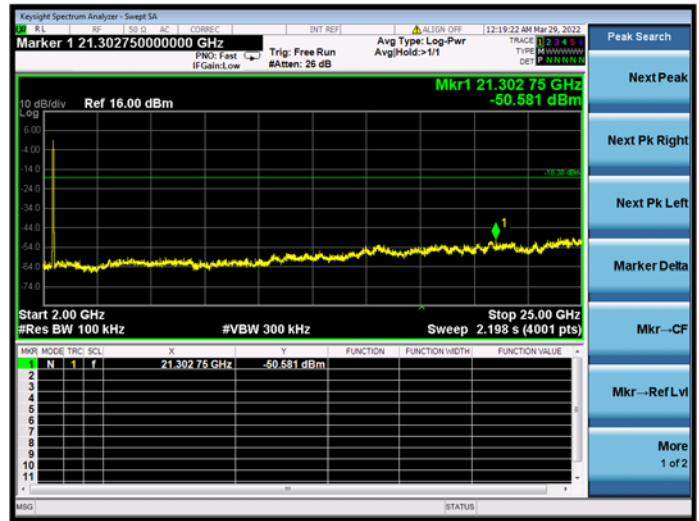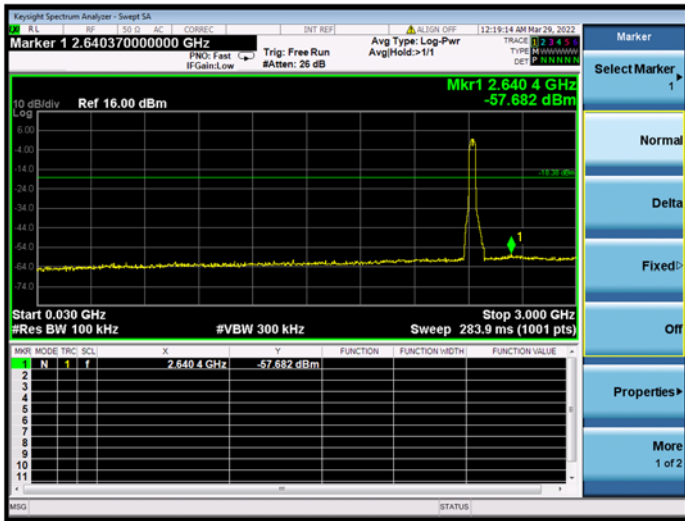

VHT(40 MHz) CHANNEL 5 CARRIER LEVEL

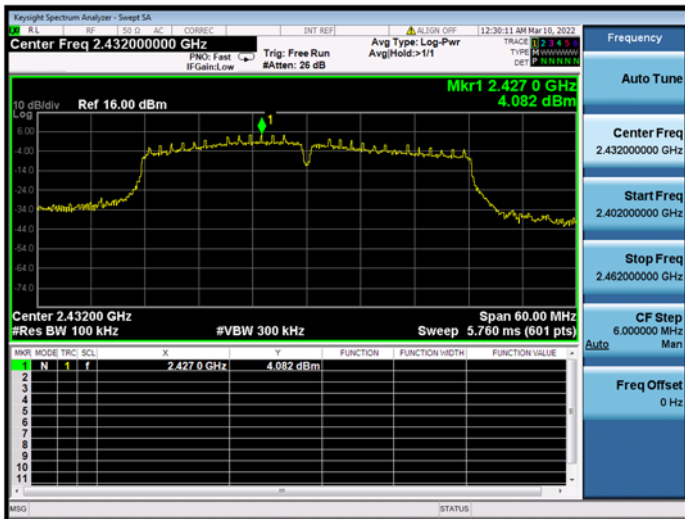 

Frequency

Auto Tune

Center Freq
2.432000000 GHz

Start Freq
2.402000000 GHz

 
 
Stop Freq
2.462000000 GHz

CF Step
6.000000 MHz
Auto Man


Freq Offset
0 Hz

VHT(40 MHz) CHANNEL 5 CARRIER, SPURIOUS
30 MHz ~ 3 GHz

VHT(40 MHz) CHANNEL 5 CARRIER, SPURIOUS
2 GHz ~ 25 GHz

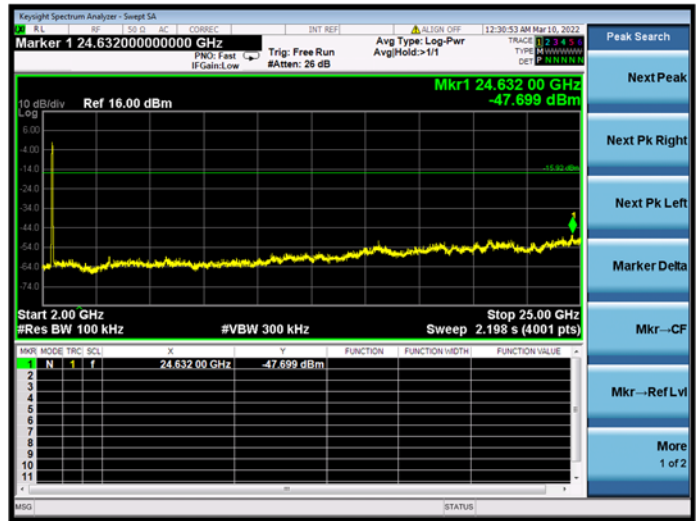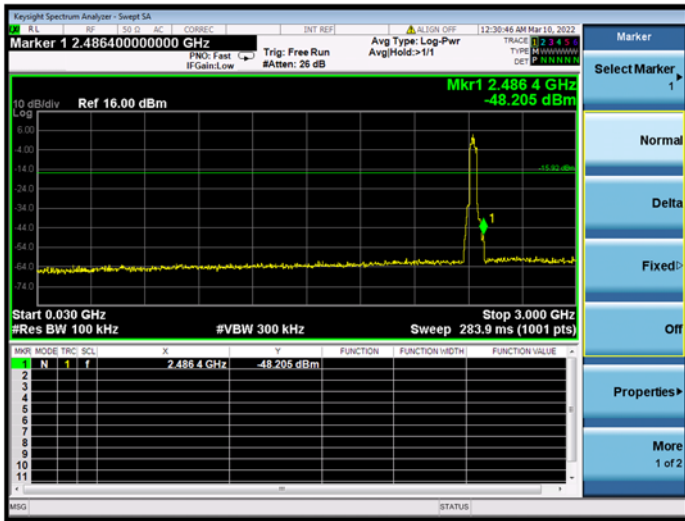

VHT(40 MHz) CHANNEL 6 CARRIER LEVEL

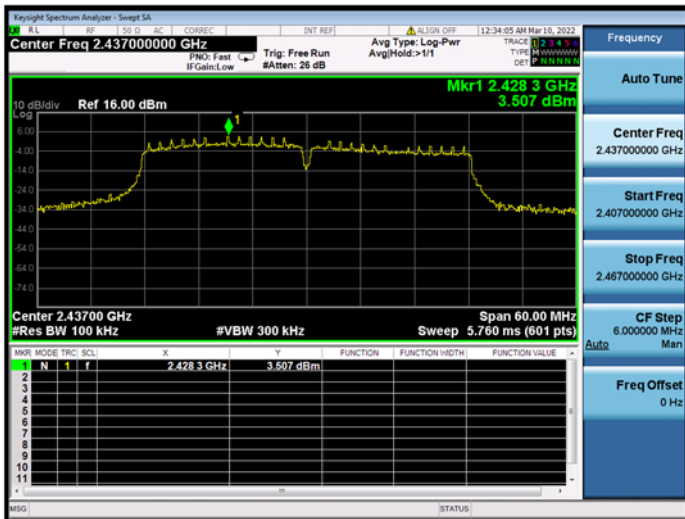 

Frequency

Auto Tune

Center Freq
2.437000000 GHz

Start Freq
2.407000000 GHz

 
 
Stop Freq
2.467000000 GHz

CF Step
6.000000 MHz
Auto Man

Freq Offset
0 Hz

VHT(40 MHz) CHANNEL 6 CARRIER, SPURIOUS
30 MHz ~ 3 GHz

VHT(40 MHz) CHANNEL 6 CARRIER, SPURIOUS
2 GHz ~ 25 GHz

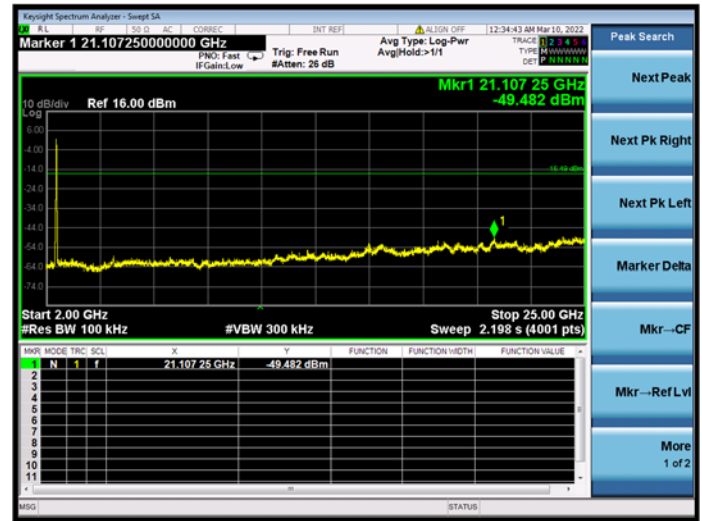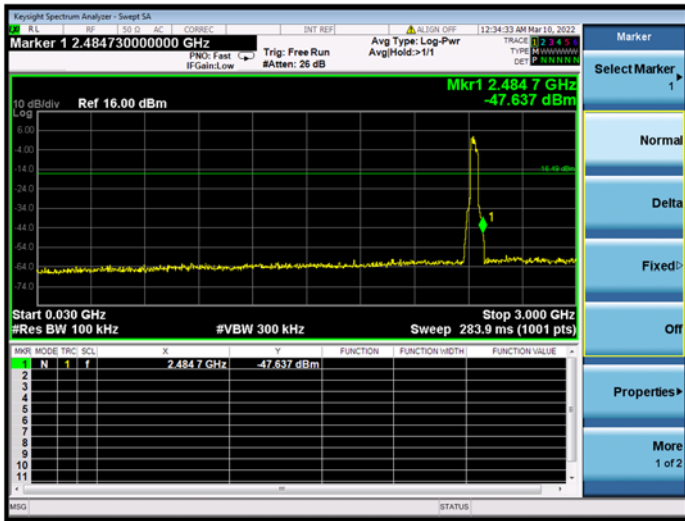

VHT(40 MHz) CHANNEL 7 CARRIER LEVEL

