

Larvik 10 August 2021

TR-910 - Tune-Up Procedure

Setting of channels and different power levels (reduction from maximum power) is available from the front panel, and this setting is also available from the remote control. These settings are described in more detail in the User Manual.

To adjust the output power from the front panel, enter the **MENU-> Configuration-> AM-> Output Power**". The output power can then be adjusted from 30.0 to 40.0 dBm in 0.1 dB steps (1 – 10 W).



Glenn André Johnsen
Development Engineer