

ALCATEL

ONE TOUCH 557a



www.alcatel.com

www.alcatel.com

Introduction

Alcatel would like to thank you for purchasing this mobile.

Your camera: photo and video clip

You can take photos in a burstshot. Play a video clip with sound with your mobile. Save it in your multimedia album and use it to personalise the idle screen. You can also associate a video with a contact so when your contact calls you, the video is played. Capture and share your favourite moments with the camera. You can zoom and record sound while taking your photos, or add funny frames and stamps. It is easy and a lot of fun!

Say it with colours using MMS

Your phone includes the Multimedia Message Service enabling you to send video clips, colour pictures and sounds in your text messages. You can create expressive messages to match your mood thanks to the embedded and downloaded multimedia content.

A style of your very own


Personalise your handset giving it a personal touch. Either choose the colour and texture of your interface from the embedded skins, or pick a video clip, a wallpaper or melodie from the rich multimedia content.

Your game companion


Get ready for a new intense gaming experience with a large choice of downloadable games and applications.

Table of contents

 
Introduction	1
Safety and Use	5
General Information	8
1. Your mobile	9
1.1 Keys	10
1.2 Main screen icons	11
2. Getting started	13
2.1 Set-up	13
2.2 Switching on your telephone	17
2.3 Switching off your telephone	17
3. Calls	18
3.1 Making a call	18
3.2 Calling your voicemail	19
3.3 Receiving a call	19
3.4 During the call	20
3.5 Conference calls	21
3.6 Double line (ALS)	22
4. Call Log	23
4.1 Call memory	23
4.2 My Numbers	24
4.3 My e-mail	24
4.4 Billing	24
4.5 Call settings	26
5. Menu	29
6. Directory	31
6.1 Consulting your directory	31
6.2 Creating a contact	32
6.3 Available options	33
6.4 Creating a new directory	34
6.5 Voice tag	34




6.6	Assigning a ringtone to a directory	35
6.7	Assigning an image, an animation or a video to a file	35
6.8	Privacy	35
7.	Messages	36
7.1	Receiving and reading messages	37
7.2	Creating and sending messages	40
7.3	Speed writing system	44
7.4	Parameters	46
7.5	Delete messages	48
8.	My settings	49
8.1	Ringtones	49
8.2	Display	50
8.3	Clock	53
8.4	Customizing the keys	54
8.5	More settings	55
9.	My Shortcuts	59
10.	Tools	60
10.1	Diary	60
10.2	Alarms	63
10.3	Converter	64
10.4	Calculator	64
10.5	Memory	65
10.6	Voice memo	65
10.7	Infrared (IrDA)	66
10.8	Alarms list	66
10.9	Tone composer	67
10.10	Voice tag	68
11.	Tips&tricks	69
12.	Wap	70
12.1	Access WAP menu	70
12.2	Programming your access	70
12.3	Direct access/profile access	72

 

12.4	GPRS function	72
12.5	WAP browser options	73
13.	Media Album	74
13.1	Album menu	74
13.2	My Images	74
13.3	My Videos	76
13.4	My Sounds	76
13.5	Managing sounds, images and videos	77
13.6	Download new videos, photos, sounds,	78
13.7	Formats and compatibility	78
13.8	Games & Applications	78
13.9	Memory	78
14.	Camera	79
14.1	Taking a photo	79
14.2	Burst shots	80
14.3	Taking a photo with sound	80
14.4	Photo settings	81
14.5	Options available after taking the photo	85
14.6	Modifying images	85
14.7	Direct access to the photo capture or to the album from MMS composition	86
15.	Games & Applications	87
15.1	Launch an application	87
15.2	Available options	88
15.3	Download an application	88
15.4	Java™ Push	89
15.5	Settings	89
16.	Making the most of your mobile	91
16.1	"My One Touch" services by Alcatel	91
16.2	Alcatel One Touch PC suite	91
17.	Characters and symbols table	92
18.	Telephone warranty	93
19.	Accessories	95
20.	Troubleshooting	96

 

 

Safety and Use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained in this manual.

• TRAFFIC SAFETY:

Given studies, which show that using a mobile phone while driving a vehicle constitutes a real risk, even when the handsfree kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area.
- check with your dealer or car manufacturer to make sure that the car electronics is well insulated.

• CONDITIONS OF USE:

Switch off the phone before boarding an aircraft to avoid prosecution.

Switch off the phone when you are in health care facilities, except in designated areas. As with other types of equipment now in regular use, mobile phones can interfere with the operation of other electric, electronic or radio frequency devices in their vicinity.

When the telephone is on, it should not come closer than 15cm to any medical device (i.e. cardiac pacemaker, hearing aid, insulin pump, etc.). When making or receiving a call, make sure you place the phone against the ear that is furthest away from the pacemaker or the hearing aid (if there is only one).

Switch the phone off when you are near gas or flammable liquids. Strictly obey the rules relating to the use of mobile phones at fuel depots, petrol stations, chemical plants or in any potentially explosive atmosphere.

Do not allow children to use your mobile phone without supervision.

Do not open or attempt to repair your mobile phone yourself.

Move the handset away from your ear while using the "handsfree" option because the amplified volume might cause hearing damage.

Only use your telephone with Alcatel batteries, chargers and accessories compatible with your model (see page 92). The manufacturer disclaims any liability for damage caused by the use of other chargers or batteries. Do not allow your phone to be exposed to adverse weather or environmental conditions (dampness, rain, infiltration, dust, sea air, etc.). The minimum and maximum temperatures recommended by the manufacturer are between -10°C and +55°C. Beyond 55°C, the legibility of the display may be impaired, but this is temporary and not serious.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your country regarding taking photographs and recording sounds using your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained,

if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or reseller of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

• BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off. Observe the following precautions for battery use: do not attempt to open the battery (due to the risk of toxic fumes and burns), do not puncture, disassemble or cause a short-circuit, do not burn batteries or dispose of them in household rubbish, and do not expose to temperatures in excess of 60°C. Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or not recommended by Alcatel.

• CHARGERS

Mains powered chargers will operate within the temperature range: 0°C to 40°C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. They should be used for this purpose only.

 
Electrical Characteristic of power supply (depending on the country):

 
110 V charger (used in Mexico):
Input: 100-127 V, 50/60 Hz, 0.30 A
Output: 4.5 V, 350 mA

220 V charger:
Input: 220-240 V, 50/60 Hz, 0.30 A
Output: 4.5 V, 350 mA

Travel charger:
Input: 100-240 V, 50/60 Hz, 0.15 A
Output: 6.5 V, 350 mA

Battery: Lithium 800 mAh





• RADIO WAVES:

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

 
The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), the Australian Communications Authority (ACA) or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue.

Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone. Before a phone model is available for sale to the public, compliance with national regulations and standards must be shown. The highest SAR value for this model phone when tested for use at the ear is 0.49 W/Kg and for use close to the body is 1.18 W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for RF exposure.

For body-worn operation, the phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 2 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it. (see page 14).

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body." (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following site: <http://www.who.int/peh-emf>.



General Information

 
 
- **Internet address:** www.alcatel.com - **Wap address:** wap.alcatel.com
- **Alcatel Hot Line Number:** see the "Alcatel Services" leaflet (calls charged at applicable local rates in your country)

An electronic version of this user guide is available in English and other languages according to availability on our Alcatel Server: www.alcatel.com

Your telephone is a transceiver that operates on GSM networks with 850, 1800 and 1900 MHz bands.

Protection against theft

Your mobile phone has an identification number called IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note this number the first time you use your telephone by entering *#06#, *#06#, *#06#, *#06# and keep it safely. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked, preventing a third person from using it, even with a different SIM card.














Your mobile

One Touch 557a















⁽¹⁾ Depending on your network operator.








1.1 Keys

-  Navigation key
Confirm an option (central press)
 -  Delete (short keypress)
Return to the previous screen (short keypress)
Return to the main screen (long keypress)
 -  Pick up
Send a call
 -  Access call memory (Redial) (short keypress)
Use voice tag features (long keypress)
 -  Switch on/Switch off the telephone (long keypress)
End call
Return to the main screen
 -  Operator key/Personal key/Camera key ⁽¹⁾
 -  Left softkey
 -  Right softkey
 -  Consult your voicemail (long keypress)
 -  * From main screen:
Keypad lock/unlock (long keypress)
In Edit mode:
- Short keypress: upper case, lower case, digits
- Long keypress: switch from normal to predictive mode
 -  # From main screen
- Short keypress: dial #
- Long keypress: activate/deactivate the vibrator.
In Edit mode:
Access the symbols table (short keypress)
- Side keys :
- Access the camera from the main screen
 - Take a photo (short press up or down)
 - Take a burst shot (long press up)
 - Take a photo with sound (long press down)
 - Set the volume during a call
 - Scroll in the menu

⁽¹⁾ Depending on your network operator.

1.2 Main screen icons ⁽¹⁾

-  **Battery charge level**
-  **Vibrator mode:** your phone vibrates but neither rings nor beeps except for the alarms (see page 47).
-  **Silence mode:** your phone neither rings, beeps nor vibrates except for the alarms (see page 50).
-  **Message unread**
-  **Message list is full (SMS):** your terminal cannot accept any new SMS. You must access the message list and delete at least one message on your SIM card (see page 45).
-  Voicemail message arrived.
-  Unanswered calls.
-  WAP alerts.
-  **Call forwarding activated:** your calls are forwarded (see page 26).
-  **Timer or Alarm clock programmed** (see page 60).
-  **Level of network reception.**
-  **Preferred tariff areas** ⁽²⁾.

-  **Keypad locked.**
-  **Roaming within your country of subscription.**
-  **Infrared:** infrared link activated.
-  **Double line** ⁽¹⁾: indicates the selected line.
-  GPRS context activated.
-  Reception of an MMS in progress.
-  Sending an MMS.

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

 
⁽²⁾ Contact your network operator to check service availability.

⁽¹⁾ Contact your network operator to check service availability.

2 Getting started


2.1 Set-up

Inserting and removing the SIM card ⁽¹⁾

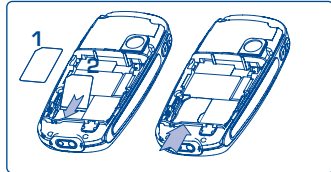


You must insert your SIM card in order to use your phone.
Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted

 Instalar la batería

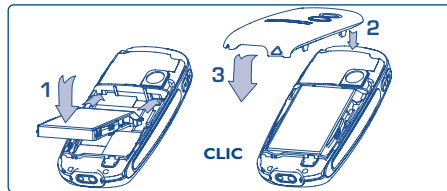

Insert and engage the battery, then close the telephone cover.

 
Retirar la batería

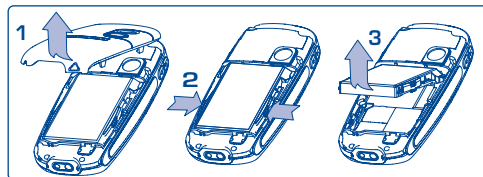

Unclip the cover, then the battery and remove it.

⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

 Cargar la batería

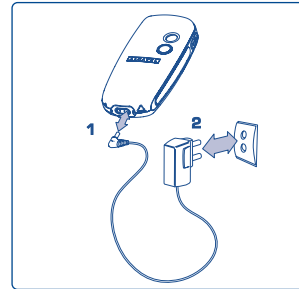



Connect the battery charger



The charge is complete when the animation stops. Only use ALCATEL chargers.

- Una señal acústica corta indica el inicio de la carga.
- La animación puede tardar unos minutos o emitir un silbido si la batería está muy descargada.
- No fuerce la toma del teléfono.
- Espere 2 minutos para que el icono de batería indique el nivel de carga exacto.
- Si la batería no está instalada, debe insertarla antes de conectar el cargador.
- La toma de corriente debe encontrarse cerca del teléfono para un acceso fácil (se recomienda evitar el uso de extensiones eléctricas).

  Precautions during use

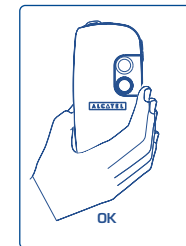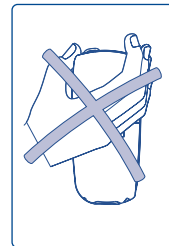


Do not place your hand on the upper part of the mobile phone.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

For better radio reception and optimum operation, do not touch the upper part of your telephone.

 Change the front belts

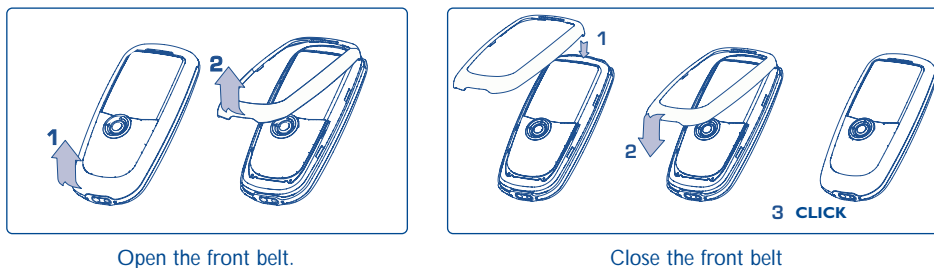

Open the front belt.

Close the front belt

2.2 Switching on your telephone

Make a long keypress on the key until the telephone comes on, type in your PIN code if necessary and then confirm with the **ok** key. The main screen is displayed.

If you don't know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your telephone and store your card in a safe place when not in use.

If cell broadcast messages are displayed, use the **ok** key to browse through them in full or press the **C** key to return to the main screen.

While the phone is searching for a network, the <<<<->>>> symbol is displayed (???-??? is displayed if your SIM card is rejected by the network, in this case please contact your operator).

In the switch on screen, you also have access to "Video" demo function: select the left icon with the navigation key . Even if no SIM card inside, you will have access to the video clips list.

2.3 Switching off your telephone

Press the key from the main screen (long keypress).

3 Calls

3.1 Making a call

Dial the desired number then press the key to place the call. To hang up, press the key. If you make a mistake, you can delete the incorrect digits by pressing the **C** key.

To enter characters "+" or "P" (pause), make a long keypress on the key (the following characters will scroll by: 0, +, P, *).

Making an emergency call

If your phone is covered by the network, dial **112** and press the key to make an emergency call (or any other number provided by your operator). This works even without a SIM card and without typing the PIN code or unblocking the keypad.

Making a call with a prefix



To access the various prefixes, make a long keypress on , stop at "+" sign and use the key.

- To make an international call, go to , select the country, finish dialling the number and send the call.
- If you already know the prefix you want, go directly to the icon and enter the prefix directly followed by the number of the person you are calling.
- In some companies, telephone numbers all begin with the same digits. By using the "Prefix" feature , you can save the shared digits, but you will need to enter the variable part. You must create the prefixes yourself.

Automatic redial

If this feature is activated and supported by the network (see page 29), the person you called will be called back automatically until they can be reached.

3.2 Calling your voicemail ⁽¹⁾



Your voicemail is provided by your network to avoid missing calls. It works like an answering machine and you can consult it at any time. To access your voicemail, make a long keypress on the  key, then send the call using the  key.

If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to "My Numbers" (see page 24).

 To use your voicemail service from abroad, contact your network operator before leaving.


3.3 Receiving a call

When you receive an incoming call, press the  key to talk and then hang up using the  key.

When you have an incoming call, your telephone rings quietly at first and then gets louder. If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone neither rings nor vibrates.

 The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting the ringtone

Press the  key once while the telephone is ringing. Answer the call by pressing the  key, or select "Options".


⁽¹⁾ Contact your network operator to check service availability.

Rejecting a call

Press the  key once or the  key twice, or select "Options".

3.4 During the call

Available functions

During a call, you can use your directory, your diary, short messages, etc. without losing your correspondent by pressing the  key.



- | | | | |
|---|---|---|--|
|  | Call on hold |  | Directory |
|  | Ongoing call |  | Messages |
|  | Handsfree |  | Diary |
| | WARNING: move the handset away from your ear while using the "handsfree" option because the amplified volume might cause hearing damage. |  | Services ⁽¹⁾ |
| | |  | Voice memo (record your current call). |
| | |  | Display notes |

Adjusting the volume


You can adjust the sound level during a call using the navigation key  or the side keys.


⁽¹⁾ Contact your network operator to check service availability.

Handling two calls

- **Call waiting** ⁽¹⁾
If a second call comes in while you are already on line, you will be notified by a tone. You can then accept the call by pressing the  key. Your current call will be automatically put on hold. You can then switch between your two correspondents using the  key and then **ok**.
- **Making a second call**
To call a second party during a call, dial directly the number.

3.5 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time (up to 5). If you are on a double call, press **ok**, select **“Conference”** then confirm with the **ok** key. If a third call comes in, answer it by pressing the  key and speak with your new correspondent.

This correspondent becomes a member of the conference if you press **ok**, select **“Add conf.”**, and then confirm by pressing **ok**. Pressing  disconnects the current call.

To end the conference call, press **ok** and select **“End conf.”**.

3.6 Double line (ALS) ⁽¹⁾

Your SIM card can contain two distinct telephone numbers. Under **“Call log”**, choose **“Double line”** and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use the two lines.

 The services programmed on the default line do not impact those selected on the other line.


⁽¹⁾ Contact your network operator to check service availability.

4 Call Log

4.1 Call memory

You can access your call memory by pressing the  key from the main screen. You must first choose the appropriate icon:

- | | | |
|---|---|---|
|  |  |  |
| Outgoing calls (Redial) | Unanswered calls | Answered calls |

 The icons that may be displayed to the left of the person's name show the type of telephone number recorded in the directory (Home, Office, Mobile Phone).

Available options

From the stored number, you can access the following options using the right softkey:

- | | | | |
|----------------------|---|----------------------|---|
| View | <ul style="list-style-type: none"> • Consult call details (number, date, time, etc.). | Delete number | <ul style="list-style-type: none"> • Delete the selected number. |
| Write message | <ul style="list-style-type: none"> • Send an SMS or MMS to the selected number. | Clear list | <ul style="list-style-type: none"> • Clear the entire list. |
| To directory | <ul style="list-style-type: none"> • Store the selected number in one of your directories. | | |

4.2 My Numbers

My Number

Type in your telephone number (usually written on your SIM card) and confirm by pressing **ok**.

Voicemail

Type in or modify the number to access your voicemail.

4.3 My e-mail

Enter your own e-mail address to be able to send more easily pictures, images, video clips, sounds... by MMS to your PC.

You can do it also directly from the options while writing an MMS.

4.4 Billing

Amount ⁽¹⁾	Management of call charges.
Total cost	Total cost of charged calls.
Available credit ⁽¹⁾	Remaining credit as compared with " Maximum credit " amount.
Maximum credit ⁽¹⁾	Credit limit beyond which any billable call is barred (enter credit, then confirm by ok).

⁽¹⁾ Contact your network operator to check service availability.

Reset

Reset total cost of charged calls.

Cost unit

Cost of a Telecom Unit in the currency of your choice (Select the "**Other?**" option for a new currency and use the **o+** key to enter a decimal point).

Duration

Call duration management.

Total duration

Total duration of all outgoing calls.

Avail. duration

Time credit still available in relation to the duration provided by the "**Set duration**" (amount provided for informational purposes only).

Set duration

Contract duration (enter the duration then confirm by **ok**).

Reset

Reset to zero (immediately or periodically) the cumulative duration for outgoing calls.

GPRS counters

Management of the volume of data communications charged for (in kilobytes).

Global counter

Total charges for data volume exchanged.

Access point

Charges for data volume exchanged per access point.

- Access point 1-2 Charges for data volume exchanged through access point 1 or 2.
 - Cumulated Charges for data volume exchanged through all access points 1 or 2.
 - Last counter Charges for data volume exchanged through last access point 1 or 2.
 - Reset Reset to zero data volume exchanged through all access points 1 or 2.
- Other Charges for data volume exchanged through other access points.
 - Cumulated Charges for data volume exchanged through all access points.
 - Last counter Charges for data volume exchanged through the last access point.
 - Reset Reset to zero data volume exchanged through all access points.

Delete Reset all counters to zero.

Cost summary ⁽¹⁾

Last call Duration and cost of the last call.


Total cost Duration and cost of all calls.

Beep duration Activate (or cancel) the beep emitted during a call with a specified frequency (enter the frequency and confirm by **ok**).

4.5 Call settings

Call forward ⁽¹⁾

Voice Activate/cancel call forwarding to a specified number (type in the number, confirm by pressing **ok**). The following configurations are possible:

- Unconditional Systematic forwarding of all your calls. The  icon is displayed.
- Conditional If your line is busy, if you don't answer or if you are outside the network range.
- If busy Only if your line is busy.
- If no reply Only if you don't answer.
- If unreachable Only if you are outside the range of the network.

Data Your data reception calls are systematically forwarded to a specified number.

Fax Your fax reception calls are systematically forwarded to a specified number.

Status List of call forwarding options activated on this telephone.

Cancel all Cancellation of all activated call forwarding options.

Call barring

Outgoing calls Activate/deactivate the call barring. This option is applied as follows:

- Except SIM Dir. Outgoing calls to numbers not included in your directory are barred.
- All ⁽¹⁾ All outgoing calls are barred.
- International ⁽¹⁾ Outgoing international calls are barred.
- Except->Home Outgoing international calls except those to your country of subscription are barred.
- Except FDN Dir. ⁽¹⁾ Barring of outgoing calls in accordance with a specific "FDN" directory contained in the SIM card.
 - Activate/ Deactivate All calls not beginning with one of the numbers recorded in the "FDN" directory are barred.
 - Change If the "Except FDN dir" feature has been activated, after entering PIN2, you can update the "FDN" directory (update "FDN" directory by pressing **ok**).

Incoming calls Activate/deactivate the barring of incoming calls. The following configurations are possible:


- Except SIM dir. All incoming calls not corresponding to one of the numbers in your directory are barred.
- All ⁽¹⁾ All incoming calls are barred.
- If abroad ⁽¹⁾ Incoming calls are barred when you are abroad.

Status List of incoming call barring options activated on this phone.

⁽¹⁾ Contact your network operator to check service availability.

⁽¹⁾ Contact your network operator to check service availability.

Calls

- Call waiting** ⁽¹⁾ Activate/deactivate the notification of a second incoming call by a beep.
- Conceal ID** ⁽¹⁾ Activate/deactivate the option making your calls anonymous (your number is no longer transmitted by the network to the party you are calling).
(CLIR)
- Caller ID** ⁽¹⁾ Activate/deactivate the display of your caller's number (or name if found in the directory) for each call.
(CLIP)
- Pick up** ⁽¹⁾ Choose your pick up mode : key  or any key.
- Network** ⁽¹⁾ Enables automatic callback by the network of the last dialled busy number.
auto redial

Automatic redial ⁽²⁾

- Activate/Deactivate** Activate/deactivate automatic callback of your party if the first call did not go through.
- See list** List of numbers for which automatic callback was not successful (10 unsuccessful attempts).
- Clear list** Delete the list.

Double line (ALS) ⁽¹⁾

See page 19.

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Depending on your country or your operator.

5 Menu ⁽¹⁾

- **GAMES & APPS**
- **MEDIA ALBUM**
 - My Images
 - My Videos
 - My Sounds
 - Games & Apps
 - Memory
- **TOOLS**
 - Diary
 - Alarms
 - Calculator
 - Converter
 - Memory
 - Tone composer
 - Voice memo
 - Voice tag
 - Infrared
 - Alarms list
- **PHOTO/VIDEO**
 - Take a picture
 - My Images
 - My Videos
 - Tips&Tricks
- **DIRECTORY**
- **MESSAGES**
 - Create message
 - Inbox
 - Outbox
 - Voicemail
 - Templates
 - Parameters
 - Memory
 - Delete
 - Tips&Tricks

⁽¹⁾ Depending on your network operator.

• **CALL LOG**

- Call memory
- My Numbers
- My e-mail
- Billing
- Call settings

• **MY SETTINGS**

- Ringtones
- Display
- Clock
- Keys
- More settings...
- Tips&Tricks

• **MY SHORTCUTS**

• **SERVICES**

- Services ⁽¹⁾
- My one Touch



• **WAP**

- Homepage
- Bookmarks
- Profiles
- Enter address
- Tips&Tricks

• **TIPS&TRICKS**

6 Directory

6.1 Consulting your directory

To access the **directory** from the main screen, press the  key ⁽¹⁾ downwards or press the **ok** key and select the  icon from the menu.

You can also customize a quick access to your contact with the keypad customisation (see page 51).

You have 4 directories:



SIM directory:

The SIM card's capacity depends on your operator. It is not possible to assign more than one number to a name.



General directory:

Contains all files created. The SIM card files are not created automatically in the general directory, but they can be copied to it.



Personal directory:

You can store your personal contacts in this directory (relatives, friends, etc.).



Professional directory:

You can store your professional contacts in this directory (companies, etc.).

In addition to the directories already provided, you can create your own directories (see page 31).

⁽¹⁾ Contact your network operator to check service availability.

⁽¹⁾ Depending on your network operator.

Searching for a name by its first letter



You can search for the person's name by pressing the key associated with the first letter of his/her name.


 For some languages that have a specific entry mode, you should use the "Search name" option.

Read a contact file


Select a name from your directory, choose "Options" and select "View".


Making the call

Press the  key when the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Mobile, Home, Office, etc.) using the  key. Press the **ok** key to make the call.


 Information in the directory and the diary may be sent to and received from a computer using the Alcatel One Touch PC suite (see page 88).

6.2 Creating a contact

Select the directory in which you wish to create a file, press the right softkey, select "Create contact" then **ok**. You can save the data you have entered at any time by pressing the right softkey and choosing "Save & Quit". Go to the following field by pressing the **ok** key or by using the navigation key .

When you create a new contact in the product directory, at least one of the following fields must be filled in:  Identity card,  Birthday,  Nickname,  URL address  Numbers,  Image,  E-mail,  Address,  Notes,  Perso. Info. 1...4. You can move from one field to another using the  key.

When the field "Birthday" is filled in, an alarm is automatically created in the Diary.

 If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code (see page 16).

6.3 Available options

From the list of names in your directories, you can access the following options via the right softkey:

- | | | | |
|-----------------------|--|--------------------------------|---|
| View | • View a complete file: name, address, e-mail, etc. | Create dir. | • Create your own directory. |
| Create contact | • Create a file (name, numbers, address, e-mail, etc.) in the desired directory. | Empty dir. | • Empty the contents of a directory. |
| Writemessage | • Send an SMS or MMS to a contact from the directory. | Delete dir. | • This directory and its files will disappear completely (created directory only). |
| Modify Image | • Modify the contents of a file.
• Select a video/photo/image in the Album and assign it to the current file (not valid for the SIM directory). | Copy all-> SIM/Phone | • Copy the whole directory to the SIM or telephone directory in one go if there is sufficient memory. |
| Delete | • Delete the selected file. | Voice tag | • Record a voice tag command except in the SIM. |
| Classify file | • Move a file from one directory to another. | Send | • Exchange data via infrared (see page 63) or Multimedia/MMS. |
| Dir. ringtone | • Assign a melody to the current directory. | Tips&Tricks | • Get information and tricks about the current menu function. |

6.4 Creating a new directory


From the product directory, press the right softkey and select **"Create dir."**, confirm using the **ok** key, then name your new directory. You can create up to 13 new directories. You can delete only those directories that you created, by selecting **"Delete dir."**


6.5 Voice tag

Voice tag allows you to place your call by pronouncing the party's name without using your directory.

Select a file from the product directory and confirm with the right softkey. Then select **"Voice tag"** and confirm once again. Three different beeps will signal the start of recording, its failure or its success. After recording, you can **"Listen to"**, **"Replace"** or **"Delete"** a recorded voice tag command.



The files for which a voice tag command has been recorded are indicated by the  icon. The number of names accessible through voice tag is limited. This feature can be used in all directories except the SIM card directory.

Activate voice tag by a long keypress on the  key from the main screen, then follow the instructions on the screen.

6.6 Assigning a ringtone to a directory

Select a file from the product directory, press the right softkey and select **"Dir. Ringtone"**

When you receive a call from a contact classified in the product directory, the ringtone will be the one assigned to that directory.

6.7 Assigning an image, an animation or a video to a file

Select a file from the product directory, press the right softkey and select **"Image"**.

When you receive a call, the picture, animation or video clip that you have chosen will be displayed on the screen. It is possible to assign either an image or a video but not both for the same contact.


6.8 Privacy


The data of your directory can be protected (see option **"Privacy"** page 53).

7 Messages

From your telephone, you can read, write, send and receive short “Text/SMS” messages and “Multimedia/MMS” and share them with other mobiles ⁽¹⁾.

Multimedia messages are messages whereby you can send video clips, images, photos, animations, sounds, voice messages (or Vox MMS: simplified MMS that allows you to send a voice memo as a message), appointments (V.CAL) or directory files (V.CARD) to other compatible mobiles and e-mail addresses.

 The multimedia MMS function can only be used if the service is proposed by your operator, if your contract includes the MMS option and if all the parameters for sending MMS have been entered (see page 44).

To access the messages from the main screen, press the top of the  key ⁽²⁾ or press the **ok** key, select “Messages” with the navigation key and confirm with the **ok** key.










The following list is displayed:

- Create message
- Inbox
- Outbox
- Voicemail
- Templates
- Parameters
- Memory
- Delete
- Tips&tricks

⁽¹⁾ Check with your network operator for the availability of the MMS service.


⁽²⁾ Depending on your network operator.

When **viewing** your messages, you will find the following status icons, depending on:

- the type of message:  SMS message,  MMS message,  MMS notification,  MMS sending in progress,  MMS message with a sound,  MMS with video clip,  MMS with copyright elements which cannot be forwarded.
- Storage:  messages stored on your SIM card (SMS only),  messages stored in the phone's memory (MMS notifications).



7.1 Receiving and reading messages

 
7.1.1 SMS


When a new SMS arrives, the following message is displayed: “**You received a new message!**”, a beep sounds, the  icon shows up, a line with the number of messages appears on the screen. Select this line and press **ok** to read it directly from the main screen. To modify or deactivate the audible signal, see page 46.

7.1.2 MMS

You have three ways of managing the reception of MMS: immediate, deferred or restricted reception. From “Parameters/MMS parameters”, confirm your choice in the “**Mode:**” option (see page 47).

- “**Immediate**” reception: when in idle mode, the  icon will indicate that a new MMS is being downloaded. The message “**You received a new message!**” appears, a beep sounds, the  icon shows up, a line with the number of messages appears on the screen. Select this line and press **ok** to select and open the MMS.



- **“Deferred” reception:** you will receive a notification with the name and number of the sender and the title of the message if it has been saved. You can download the MMS at any time in order to read it. You can also delete it without reading it; in this case the sender of the MMS will be informed that it has been rejected (only in “National” mode).
- **“Restricted” reception:** same behavior as **“Deferred”** mode but you will not receive any notification, only the  icon (only in “International” mode).

You can receive video clips, photos, images, or sounds by MMS. These MMS are automatically stored in the memory of your telephone. If you select **“Options/Save items”** you can save the video clips, images or sounds or all of them (in this case, save the first item displayed, then select the **“Next”** option to save the second item, and so on). They are all saved in the multimedia album.

7.1.3 Options while receiving or viewing messages in Inbox/Outbox

Generally, the common following options are proposed:

- | | |
|--|--|
| <p>Delete</p> <ul style="list-style-type: none"> • Delete the message. | <p>Archive</p> <ul style="list-style-type: none"> • Save your message in the “Archive” folder (product memory). |
| <p>Reply</p> <ul style="list-style-type: none"> • Reply by SMS, MMS or by Vox MMS. | <p>Sort by date/size</p> <ul style="list-style-type: none"> • Sort the read messages by date or by size: by date is the default sorting. |
| <p>Forward</p> <ul style="list-style-type: none"> • Forward the message to other people. | |

The following options depend on the context (receiving a message, reading in the Inbox or Outbox an MMS or an SMS):

SMS additional options:


- | | |
|--|--|
| <p>Save picture</p> <ul style="list-style-type: none"> • Save a picture contained in the message. | <p>Save number</p> <ul style="list-style-type: none"> • Save a number or an e-mail address contained in the message. |
| <p>Save animation</p> <ul style="list-style-type: none"> • Save an animation contained in the message. | <p>Launch WAP</p> <ul style="list-style-type: none"> • Go to the WAP address contained in the message. |
| <p>Save melody</p> <ul style="list-style-type: none"> • Save a melody contained in the message. | <p>Zoom</p> <ul style="list-style-type: none"> • Activate or deactivate the zoom. |
| <p>Save template</p> <ul style="list-style-type: none"> • Save the message as a predefined message. | |

MMS additional options:

- when selecting an MMS in the inbox/outbox list ⁽¹⁾:

- | | |
|---|--|
| <p>Open/Retrieve</p> <ul style="list-style-type: none"> • Read the selected message (“Retrieve” if the deferred mode has been selected). | <p>Reply all</p> <ul style="list-style-type: none"> • Reply to all MMS recipients. |
| <p>Information</p> <ul style="list-style-type: none"> • Go to MMS details: local date, title, size, class, priority, mailing list, ack. of receipt. | <p>Save no/e-mail</p> <ul style="list-style-type: none"> • Save the senders’ number or e-mail address in your directory. |

 
⁽¹⁾ Options available according to the reception mode chosen.



- when reading an MMS:

- Restart** • View the message again.
- With sound/ Without sound** • View your MMS with or without sound.
- Save items** ⁽¹⁾ • Save video clips, images, sounds received in MMS current page.

In addition:

- If the MMS includes a wap address, an e-mail address, or a telephone number, you have the 2 possibilities: select the **"Options"**, to save and/or access the link displayed (launch wap link, send e-mail, or call number displayed).
- If the MMS contains several pages, it will scroll automatically. To launch the viewing again, select the option **"Restart"** or use the navigation key .

7.2 Creating and sending messages




7.2.1 Creating SMS


From the main menu, select **"Messages/Create Message"**, select **"Text/SMS"** and press **ok**. You can also modify a predefined message selecting **"Templates"**.

Customise your messages adding pictures, sounds or mood icons proposed in your telephone: while writing a message select the following options using the **ok** key:

- ⁽¹⁾
- For one object press **ok** to save.
 - For several objects press **"Options"**, choose the objects one by one using the option **"Next"**, and press **ok** to save.

- Send to** • Send the message.
- Edit as MMS** • If your SMS is long or if you want to add pictures or sounds.
- Add mood** • Add a mood icon to your message.
- Add image** • Add an icon to your message.
- Add melody** • Add a sound to your message.
- Add bookmark** • Add a web site to your message.
- Symbols** • Go to the symbols table.
- Predictive** • Switch to the predictive mode.
- Preview** • View your message.
- Save** • Save the message (inbox/unsent) and send it later.

Select **"Preview"** to see the whole message: the icons, sounds and mood icons are represented by the ,  or  symbol. You can also download new sounds and images over WAP (see page 88).

-  A message of more than 160 characters, or a message containing icons, sounds, or mood icons may be billed as more than one message. Check with your operator.
The person receiving the message must be equipped with an EMS, compatible mobile phone in order to display the objects or listen to the sounds in your message.

Options for sending your message

- Directory** • To a person or e-mail address whose contact is stored in one of your directories).
- My Favourite** • To your favourite contact.
- Several recipients** • To different people by manually entering the numbers or selecting them from the directory.
- Distribution list** • To a group of people that you have pre-set in the sending parameters (**"Distribution list"** option).

If the acknowledgement of receipt ("**Rpt:**") is activated in "**Parameters/SMS parameters**", (see page 44), when you consult your sent messages, the following symbols will show the following:

- ✓ **Msg. received:** message sent and acknowledgment received.
- ✗ **Not received:** message sent and waiting for a "**Delivery report**" or message not received: you should send the message again.

Other options are available if you choose the predictive entry mode (see page 42).

7.2.2 Creating MMS

From the main menu, select "**Messages/Create message/Multimedia MMS**" and press **ok**. By default, you are in edit mode.

Your MMS may contain several pages (maximum memory allocated: usually 50 KB or 100 KB depending on the model and the operator) ; as you create the MMS you will be informed of the memory used (for all pages).

 
With the option "**My e-mail**", you can send images, video clips, sounds, ... to your computer.

If the acknowledgement of receipt ("**Rpt:**") is activated in "**Parameters/MMS Parameters**", you can consult it in the option "**Information**" when selecting a message (see page 44).

You may also attach special files to your MMS such as: a contact from your directory (Vcard), or an appointment from your diary (Vcal). They will be displayed in a separate page (select option "**Attachments**").

Depending on whether your MMS is empty or not, with no file or at least one file attached, you will be given the following options:

- Send to one** • Send to one recipient from your "**Directory**" or "**Dial**" the number or e-mail or select "**My Favourite**" or "**My e-mail**".
- Send->several** • Send to several persons by dialling the numbers ("**Dial**"), or selecting the numbers, or the group ("**Add group**") from the "**Directory**".
- Add image** • Add a picture or an animation from the "**Album**" function, or create it directly from the "**Camera**" function.
- Add video** • Add a video from the "**Album**" function.
- Add sound** • Add a sound from the "**Album**" function, or a voice message.
- Add text** • Write your text.
- Add title** • Give a title to your MMS.
- Add bookmark** • Insert a bookmark (URL) from the list of your favourite sites (see page 68).
- Text options** • - "**->Directory**": insert a contact number.
 - "**Symbols**": insert a symbol.
 - "**Predictive**": switch between normal and predictive mode.
- Replace** • Change an item in your MMS.
- Remove** • Remove an item in your MMS.
- Add page** • Add a page to your MMS.
- Previous page** • Go to the previous page of your MMS.
- Next page** • Go to the next page of your MMS.
- Delete page** • Delete the current page.
- Attachments** • Add a Vcard or Vcal.
- Preview** • Preview the MMS you created.
- Save** • Save your message if you do not want to send it immediately.



Reply to an MMS by sending an MMS, an SMS or a Vox MMS message. To send text only, it is advisable to use an SMS.

To send your MMS later on (to add other items or photos for instance) save your MMS (“**Save**”) as a draft stored in your “**Outbox/Unsent**” folder. Then select it and use the function “**Options**” to replace or remove items before sending it.

If the message is not send, the mobile will try to re-send it automatically ⁽¹⁾. The icon is displayed on the screen and in the “**Outbox/Unsent**” folder, indicating the automatic sending procedure is activated. If it fails completely, you will be notified by a message and the icon in your “**Unsent**” folder indicates that the MMS could not be sent. Select it and press **ok** to send it again, modify it or delete it.

7.2.3 Creating Vox MMS (Voice memo)

 
From the main menu, select “**Messages/Create message/Voice/Vox MMS**”. This function allows you to send a message quickly without having to write. The recipient is not disturbed and simply receives a normal MMS ⁽²⁾. You can reply to any message using a “**Voice/Vox MMS**”.

7.3 Speed writing system

The “**Predictive**” mode allows to speed the writing of your SMS or MMS. When you want to write a message, press the “**Options**” softkey, select “**Predictive**” for SMS, or select “**Text Options**” then “**Predictive**” for MMS and begin to type ; for instance for “**hello**” type on the following keys , , , , once. The letter or word displayed may not always correspond to the desired one but do not pay attention, continue typing and the system will make better suggestions as you continue to input letters.

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ This Vox MMS being a normal MMS which contains an AMR type sound, you can only listen to it with an AMR IETF compatible phone or a computer equipped with an adequate sound decoder.



When in predictive mode, type the first letter:

- if it corresponds to a single word (for instance a), the letter will be displayed,
- if it does not exist as a single word (for instance h), the symbol “*” will be displayed.

The cursor shape varies depending on the input mode selected: in predictive input mode, in normal mode.

To confirm a word and insert a space, press the key to the right or press the key downwards or press the key.

Specific keys Normal mode / Predictive mode

Short keypress: Move between automatic capitals , upper case , lower case , digits

Long keypress: Switch between the normal and predictive mode.

 
Normal: Insert a “+”, “0” or “*”.

Predictive: View other words in the dictionary.

Normal: Display the symbols table.

Available options

In addition to the available options in the normal entry mode, you will also find the following choices:



- | | | | |
|---------------------|---|------------------|---|
| Confirm word | • Confirm the selected word. | Normal | • Switch to the normal mode. |
| Other words | • View other possible words. | Languages | • Use the dictionary in another language. |
| Add word | • Add a word to your personal dictionary. | Save | • Save the message. |
| Add numbers | • Go to the digital mode. | | |

You have a personal dictionary which allows you to add ⁽¹⁾, modify or delete words. While writing a message, you can add a word by pressing the **ok** key and by selecting **"Add word"**.

 
7.4 Parameters

From the main menu, select **"Messages"** and using the navigation key to the right, select the  icon.

7.4.1 SMS Parameters

- **Service centre ("SC:")** ⁽²⁾: phone number of your operator's service centre (it may be provided automatically).
- **E-mail centre ("EC:")** ⁽²⁾: the number of the server for sending e-mails (it may be provided automatically).
- **Ack. receipt ("Rpt:")**: request for acknowledgement of receipt for each message sent.
- **Message validity ("Val:")**: the time period during which attempts to send the message to the recipient will be repeated in case of failure.
- **Format ("Typ:")**: format to be used for delivery of message to recipient (SMS, fax, etc.).
- **Memory ("Mem:")**: product or SIM (see page 44).

⁽¹⁾ Contact your network operator.
⁽²⁾ Contact your operator for details to fill in these fields.



7.4.2 MMS Parameters

 
- **MMS profiles ("Profile:")** ⁽¹⁾: To set your MMS profile, follow the same procedure as for setting your WAP connection (see page 67).
- **Mode**: choose between immediate or deferred reception for national network coverage, or between immediate or restricted reception for international network coverage (see page 34).
- **Acknowledgment of receipt ("Rpt:")**: request for acknowledgement of receipt for each message sent.
- **Message validity ("Val:")**: the time period during which attempts to send the message to the recipient will be repeated in case of failure.
- **Memory ("Mem:")**: to store automatically your sent messages.
- **Timer**: sets the speed at which the pages scroll through: the recipient will see the message at this speed.
- **Filters**: Anonymous MMS filtering: to receive or not anonymous messages
- **Layout configuration**: choose between display: image first then text or text then image.

7.4.3 Saving parameters

You can change the save parameters for your messages:

- Sent SMS are stored by default in the product:
 Select **"SMS parameters"** and **"Mem:"** to choose **"SIM memory"** or **"Phone memory"**, or **"Not saved"**.
- Sent MMS are stored by default on the product:
 Select **"MMS parameters"** and **"Mem:"** to choose **"Phone memory"** or **"Not saved"**.

⁽¹⁾ Contact your operator for details to fill in these fields.



For information:

- Received SMS are always in the SIM card,
- Received MMS are always in the product.

You can always save your messages in the **“Archive”**. They will then be stored in the product.

7.4.4 Create a distribution file

In the **“Parameters”** folder, select **“Distribution list”**, confirm with the **ok** key, then name the group. You can now enter the phone numbers for the members of your new distribution list.


7.4.5 My Favourite

Enter the number or email of your favourite contact. Then, when you want to send a message, select **“Send”** and **“My Favourite”** directly without searching in the directory.



7.4.6 My e-mail

Enter your own e-mail address (if not entered yet under the option **“My e-mail”** of the **“Call Log”** menu) to be able to send more easily images, pictures, sounds, ... by MMS to your PC.


7.5 Delete messages

To delete all messages on your SIM card or in the product, select the  icon and select the following options:

- **“Delete SIM msg”**: delete all messages received and sent from the SIM.
- **“Delete phone msg”**: delete all messages stored in the phone’s memory.

 Your SIM card’s capacity depends on your operator. The  icon appears when the card is full. To receive new SMS, delete some old ones.









8 My settings.....

From the main screen, select the icon menu  and select the function of your choice in order to customise your telephone.

8.1 Ringtones



8.1.1 Available functions


To modify the sound settings, select the different options using the **◀▶** key:

-  Select a melody in the list using the **◆** key then confirm by pressing **ok**. You can also select in this list the random melody function called **“Surprising melody”** (see page 47).
-  Mode (normal, discreet, vibrator...).
-  Adjust the volume using the **◆** key.
-  Select the type of key beep.
-  Select a melody for a new incoming message.
-  Select a melody for a new incoming appointment.
-  Select a melody for a new incoming alarm.
-  Select the type of network beep ⁽¹⁾.

⁽¹⁾ Contact your network operator.

8.1.2 Mode

- | | | | |
|-----------------|---|--------------------------|--|
| Normal | <ul style="list-style-type: none"> • Normal ringtone (increasing volume). | Vibrate and Ring | <ul style="list-style-type: none"> • Vibrator and the normal ringtone at the same time. |
| Discreet | <ul style="list-style-type: none"> • Normal ringtone (increasing volume) preceded by beeps. | Vibrate then Ring | <ul style="list-style-type: none"> • Vibrator followed by beeps then the normal ringtone (increasing volume). |
| Vibrate | <ul style="list-style-type: none"> • Activate the vibrator and mute all sounds (ringtone, message beep, appointment alarm, low battery alert). The  icon will be displayed. | Beep and vibrate | <ul style="list-style-type: none"> • Warning beep followed by the vibrator. |
| | | Silence | <ul style="list-style-type: none"> • No sound nor beep except for alarms. The  icon will be displayed. |

 Some of these modes may be deactivated when using certain accessories (full duplex handsfree car kit, ...).

8.1.3 Surprising melody

In the top of the list of melodies, access the item **“Surprising melody”**; choose up to 20 melodies you want. Then, at each incoming call, one of the melodies you have chosen will be played randomly.

8.2 Display

8.2.1 Colours

This function enables you to customise the graphic style and the colours of your telephone (menu screens, entry screens, etc.)

8.2.2 Main screen

The main screen is displayed after your telephone has been switched on and/or when no functions have been used for a short time (calls, sending of short messages...).

You can lock and unlock the keypad by making a long keypress on the  key.

You can access the main functions directly from the main screen either with the navigation key or selecting the icons displayed on the screen ⁽¹⁾.

By selecting the **“Main screen”** you can customise it by replacing the default image or animation displayed on your telephone. If you receive an event (incoming call, SMS/MMS, notifications, etc.) the icon, type and quantity of events will be displayed on your main screen allowing you to consult them directly.

8.2.3 Screen saver

If you activate this option, the screen saver will be displayed a little while after the main screen. You can choose a picture, an animation, a slideshow, or a videoclip as your screen saver.



In both cases, Main screen or Screen saver, the eco-mode screen will appear after a little while: only the battery and network levels and the time or an envelope (for incoming event) will be displayed.

8.2.4 Atmospheres

The **“Atmospheres”** menu allows you to customise your telephone to suit your own taste. You can modify 7 customisable items at the same time. An Atmosphere comprises:

⁽¹⁾ Depending on the operator.

- 4 visual items:
- ON screen image/animation
 - OFF screen image/animation
 - Main screen image/animation
 - Skins and colours
- 3 sound items:
- 1 melody for incoming calls
 - 1 melody when the telephone is switched on
 - 1 melody for notification of incoming messages

When using the telephone for the first time, a default Atmosphere is activated.

Even if you choose an Atmosphere, you can still modify the elements in it one by one. You can reactivate an Atmosphere at any time.

When changing an Atmosphere, an installation screen appears until the 7 elements are installed.



 
The installation of the Atmosphere can be stopped and cancelled if you receive an incoming call or if you press the **C** key ; the previous choice of Atmosphere is kept.

8.2.5 On/Off screens ⁽¹⁾

You can customise your welcome message, animation, melody or image that appears when you switch on your telephone.

You can also customise your OFF screen with an image or animation.

⁽¹⁾ Depending on the model.



8.2.6 Zoom ⁽¹⁾

Two character sizes are available for your telephone screen. Large characters is selected by default. If you wish to display more information select **"Zoom"**.

8.2.7 Contrast

Set the contrast of your screen.


8.2.8 Menu display

Select a menu display by choosing from the three options proposed:

- **"Icons"**: one icon per screen, with a little part of the previous and next icon.
- **"Image"**: one icon on all the screen
- **"Board"**: all the menu icons displayed on the screen.

8.3 Clock

 
You can display two clocks (local and remote) at the same time.

Go first to the **"Clock type"** icon  and select the **"2 clocks"** option. Then go back to the **"Clock set up"**, select **"Local clock"**, choose a city and confirm. The automatic transition to daylight saving time is activated. Repeat the same operation for the **"Remote clock"**.

Display format

You can display your clock in analogue or digital format and the date in the following formats: day/month/year, month/date/year or year/month/day in digits or using the first three letters for the day and month.

⁽¹⁾ Depending on the language.



8.4 Customizing the keys ⁽¹⁾

Access this feature by selecting “**My settings**” from the main menu, then “**Keys**”.


8.4.1 Operator/Personal key and softkeys ⁽¹⁾

These keys have predefined functions, which vary from one model to another (operator services, games access, or Games & Applications, ...). You can customise ⁽¹⁾ them for long and short keypresses, giving them the functions that you wish. For example, they can be used as a shortcut to access the Diary, to write a message,...

8.4.2 Keypad

By customising your keys, you can call someone or access a function directly from the main screen.

To programme a key on your keypad, select “**Keypad**” and choose the key that you wish to programme. Then select:

- “**Contact list**” activate this option if you want to access directly, in the directory, to the contact which first letter corresponds to the first letter of the key for instance  key for “PETERSON John”.
- “**Custom keys**”: activate this option to access directly to the numbers or functions or that you have already programmed. If you want to change them, press the “**Options**” softkey, select “**Modify**” and choose the first key you want to program.

Then you will access these shortcuts directly from the main menu in “**My Shortcuts**” item.

⁽¹⁾ Depending on your network operator.

8.5 More settings...

8.5.1 Keypad lock

Activate/deactivate the automatic keypad lock.



If the telephone is plugged in using a car kit accessory or the charger, it will be unlocked automatically.

8.5.2 Languages ⁽¹⁾

Display language for messages (select using ). The “**Automatic**” option selects the language according to the subscription network (if available).

8.5.3 Dictionary

You have a dictionary to which you can add your own words in addition to those suggested by the predictive input system. When you consult your dictionary, you can add, modify or erase words by using the “**Options**” softkey.

8.5.4 Input mode ⁽²⁾

In addition to the specific character table for Arabic, Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and enter names into your directory.

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Depending on the language.

8.5.5 Extensions display

This function allows you to choose whether to display the extensions of your photos, videos, sounds, files of your Album.

8.5.6 Wap access features

(See page 67).

8.5.7 Privacy

Select "**Activate**" in this option in order to protect your diary or directory data. This option is useful if you use PC synchronisation.

8.5.8 Security

PIN code ⁽¹⁾ The SIM card protection code is requested each time the phone is switched on if this code is activated.

Activate/Deactivate Activate/deactivate this code.

Change Update code (between 4 and 8 digits).

PIN 2 code ⁽¹⁾ Protection code for certain SIM card features (Billing/Cost/FDN, etc.) requested during their use when this code is activated.

Change Update code (between 4 and 8 digits).

⁽¹⁾ Contact your network operator.

Network code ⁽¹⁾

Password requested for network "**Call Barring**" options.

Menu code

A protection code for certain MENU options (services, settings, language) will be requested if accessed while the code is activated.

Activate/Deactivate

Activate (or cancel) this code.

Change

Update code (between 4 and 8 digits).

Telephone code

A telephone protection code will be requested each time the phone is switched on, if this code is activated.

Activate/Deactivate

Activate (or cancel) this code.

Change

Update code (between 4 and 8 digits).

8.5.9 Network

SMS CB ⁽²⁾

Messages broadcast over the network (weather forecast, traffic conditions, etc.) are automatically displayed on the main screen.

- CB list
- Reception

List of codes for messages to be displayed.

Depending on the option selected, the phone displays messages broadcast over the network.

Partial

The phone receives messages intermittently and displays them according to your list (see "**CB list**" option).

Complete

 
The phone continually receives messages and displays them according to your list (see "**CB list**" option).

None

The phone does not receive any messages.

⁽¹⁾ Contact your network operator.

⁽²⁾ Contact your network operator to check service availability.





- Search** Search for a network connection.
- Available List of networks available in your radio environment.
 - Mode Depending on the option selected, the network search mode is:
 - Automatic The first network searched for is the network you used last.
 - Manual The choice of the connection network is left up to the user.
 - Preferred list List of networks to which you wish to be connected in order of priority (update this list using **ok**).
- Band** Select the frequency band.

8.5.10 Accessories

 
Select the pick up mode for the headset or the car kit.

Headset

- Key  Only by pressing the  key.
- Automatic Automatically without any keypress, after approximately 2 ringtones (this option is operational only if your mobile phone is connected to an audio kit or handsfree kit).
- Any key By pressing any key from the keypad (keys 1 to #).
- Audio mode Choose to ring in headset, or both on telephone and headset.

Car kit

Choose the pick up mode:  key, automatic or any key.





9 My Shortcuts



Access the own shortcuts already programmed.

  To programme new shortcuts, select "**Set my shortcuts**" if you want to have a quick access to a function, a telephone number or a WAP bookmark.



10 Tools

10.1 Diary

Your phone has a sophisticated diary that will help you to manage your daily schedule. You can also save “To Do” lists.


Consulting your diary

Three views are possible. You must first choose the appropriate icon:

-  Daily view
-  Weekly view
-  Monthly view
-  “To Do” list.
-  Parameters

You can scroll through the dates by pressing the  key.





According to the view you can read, create, modify or send an item.


-  Information in the directory and the diary may be shared with a computer using the Alcatel One Touch PC suite (see page 91).

Creating an appointment and programming an alarm

When you create an appointment (“Create” option), you can also activate an alarm. You can set the desired alarm activation time to coincide with your appointment time.

Creating a task

Scroll to the  icon using the  key, and confirm using the  key. Select “Select type”, then confirm once again using the  key and enter the type of task to be performed (“to do” or call appointment), then enter the purpose.


This list can be arranged by deadline or by priority. To do this, scroll to the  icon using the  key, then confirm using the  key.

You can set an alarm for a task for which you have set a due date. This alarm will sound on the chosen day at the time that you entered.

Configure the diary

Scroll to the  icon using the  key, to access the following options:

- | | |
|--|---|
| <p>Alarm</p> <ul style="list-style-type: none"> • Set a default time for the alarm to sound before the scheduled appointment. | <p>“To Do”</p> <ul style="list-style-type: none"> • Sort your tasks by priority or by due date. |
| <p>Diary</p> <ul style="list-style-type: none"> • Programme the start time for your day, your first day of the week and your first week of the year. | <p>Delete</p> <ul style="list-style-type: none"> • Delete all tasks or diary items or only those items that have expired. |

-  **Privacy:** The data of your diary can be protected (see option “Privacy” page 54).

 
Activate or deactivate a setting by pressing **ok**. Exit the configuration function by pressing **C**.

More about your diary

Graphic view



Daily view

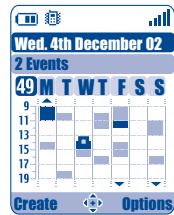

Weekly view



Monthly view

- A single appointment recorded.
- Two or more appointments recorded during this time slot.
- 49 Week number.
- ▲ An appointment was recorded prior to this time slot.
- ▼ An appointment was recorded after this time slot.

Monthly view

- Blue background Meeting scheduled
- White background No meeting scheduled

In the various views, the current day, week and month flash.

10.2 Alarms

Access this feature by selecting “**Tools**” from the main menu, then “**Alarms**”.


Alarm clock

First set the alarm frequency (daily or only once), then enter the time and date and confirm by pressing the **ok** key. You can also enter the purpose of the alarm and then confirm with the **ok** key.

Timer

Set the amount of time desired before the alarm is to sound and confirm with the **ok** key.

Options

When the alarm is set, the  icon is displayed on the main screen. The alarm will sound whether the handset is switched on or off and can be shut off by pressing the **C** key.

If you have chosen the “**Snooze**” option, the alarm will sound at regular 10 minute intervals.

10.3 Converter

Access this feature by selecting “**Tools**” from the main menu, then “**Converter**”.

The currency converter allows you to:

- Convert a currency directly into euros and vice versa ⁽¹⁾.
- Convert a sum of money into another currency (e.g. dollars to pounds).

For a conversion into euros, you can modify the default currency by selecting “**Set up**”.

If converting between international currencies, both currencies must be selected. You must also enter the appropriate exchange rate.

 
An exchange rate value is pre-set for each currency. You can change this value by selecting “**Set up**”.



From the main screen, enter the amount in euros to be converted into the programmed currency, then press the **ok** key and select “**Converter**”.

10.4 Calculator

Access this feature by selecting “**Tools**” from the main menu, then “**Calculator**”.

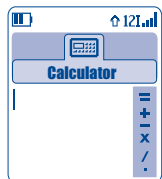

Enter a number and confirm with the **ok** key, then select the type of operation to be performed using the key and confirm again.

Enter the second number and press **ok**.

Select the “=” sign to display the result.

To return to the main screen, press the **C** key (long keypress).

⁽¹⁾ For the former european national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.

10.5 Memory

Access this feature by selecting “**Tools**” from the main menu, then “**Memory**”.

View available memory space.

Your telephone's memory is shared between several functions: directory, diary, messages, voice messages, voice tag, images and melodies, games and applications, video clips. For example, if you use a lot of memory for your voice memos, you will have less memory available for the directory.



Do not forget to delete large items such as voice memos, MMS, images, photos, recorded sounds, applications, video clips..., in order to free up memory space. You can also delete certain items included in your telephone when you bought it.

10.6 Voice memo

Access this feature by selecting “**Tools**” from the main menu, then “**Voice Memo**”.

The voice memo feature enables you to record personal messages. To record a voice memo, select “**Voice memo**”, then “**Record**”, and begin speaking after the beep. Once the voice memo has been created, you can access the following options:

- | | | | |
|---------------------------|---|-----------------------|--|
| Listen to | <ul style="list-style-type: none"> • Listen to a recorded voice memo. | Title | <ul style="list-style-type: none"> • Modify the name of the memo. |
| Send | <ul style="list-style-type: none"> • Send your memo by MMS or infrared. | Memo->album | <ul style="list-style-type: none"> • Copy the memo to your sound album (to send it by MMS or use it as a ringtone). |
| Handsfree/Discreet | <ul style="list-style-type: none"> • Switch between handsfree and discreet mode. | Delete | <ul style="list-style-type: none"> • Delete the selected memo. |

10.7 Infrared (IrDA)

Access this feature by selecting "**Tools**" from the main menu, then "**Infrared**".


Your phone's infrared feature allows you to exchange contacts, diary data, images, videos, melodies via an infrared link with an other mobile or a PC. The infrared port is located on the top of your telephone.

Sending data

To send data, select the directory file, then select the "**Data transfer**" option. It is not necessary to activate the infrared feature before sending.

Receiving data

To receive data, you must activate the infrared feature. A message will advise you of the arrival of data; you then save the data by pressing the **OK** key or reject it using the **C** key.

Once you have selected the option, the  icon appears on your screen. Infrared will be deactivated automatically after a short while ⁽¹⁾. The connection will cut off if you have an incoming call. You can receive up to three calling cards (V.Card) or appointments (V.Cal) at the same time.

10.8 Alarms list

Access this feature by selecting "**Tools**" from the main menu, then "**Alarms list**".

You can view all the alarms that you have set. The  icon will appear on your main screen if the alarm clock or the timer have been set, or if the alarm is set for the current day or the following day.

⁽¹⁾ If you use infrared often, we advise that you set a quick access to it from the keypad (see page 51).

10.9 Tone composer

Access this feature by selecting "**Tools**" from the main menu, then "**Tone composer**".

10.9.1 Compose

Select "**Compose**" then use the keypad as shown below:

- OK** Go to the options
- C** Delete a note
Key 1 to 7: basic notes of an octave (C, D, E, F, G, A, B)
- 8 tuv** Change the length of a note or a pause
- 9 #*** Change octave
- 0 +** Add a pause
- # {Q}** Add a sharp

10.9.2 Record

Select "**Record**" to record a sound of your own.

In both cases, you can use them as a melody. If you want to listen to a sound (composed or recorded), select the desired one and press the "**Options**" softkey.


10.10 Voice tag

Access this feature by selecting "**Tools**" from the main menu, then "**Voice tag**".

Voice tags allow you to access one of the menu functions by pronouncing the name of that function.

Recording a voice tag

In order to record a voice tag for one of the menu functions, select "**Voice tag**" and the desired function and then follow the instructions.

The functions for which a voice tag has been recorded are indicated by the  icon. There are 10 functions accessible through voice tag.


Using a voice tag

You activate "**voice tag**" by a long keypress on the  key from the main screen. To use a voice tag, follow the instructions on the screen.

After recording, you can "**Listen to**", "**Replace**" or "**Delete**" a recorded voice tag.

|| Tips & tricks.....

This feature gives you a quick description of your phone's main functions and provides handy hints to optimize the way you will use it.

From the main screen, press the **ok** key to access the menu then select the  icon ; you access the tips and tricks menu.

You can also find this feature inside of each main function (select "**Options**").

Scroll the text. Aside the explanations, a small animation is displayed to show you how to use the function.

After reading the current explanations, you can either go back to the tips & tricks home page, or select "**Options**" in order to connect to the WAP options (see page 70).

12 WAP

12.1 Access WAP menu ⁽¹⁾

WAP (Wireless Application Protocol) is a service that allows you to access the mobile Internet, where you can obtain information such as weather conditions, stock market information, traffic information, etc.

- "**Homepage**" launches the WAP browser on the homepage of the default profile.
- "**Bookmarks**" gives access the list of your favourite sites or add new sites to them.
- "**Profiles**" lists the Wap profiles.
- "**Enter address**" allows you to directly access the WAP page for which you enter the URL address.

12.2 Programming your access ⁽²⁾

Select a profile from the "**Profiles**" list and press on the "**Options**" softkey:

- | | | | |
|-----------------|---|---------------|--|
| Launch | <ul style="list-style-type: none"> • Launch WAP with this profile even if another one has been selected as default one. | Create | <ul style="list-style-type: none"> • Enter the parameters of a new profile. |
| Activate | <ul style="list-style-type: none"> • Select the current profile as default one (this option is not displayed if it is already selected). | Modify | <ul style="list-style-type: none"> • Modify the parameters of a profile. |
| | | Delete | <ul style="list-style-type: none"> • Delete the selected profile. |

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Enter the information supplied by your access provider.

To "**Create**" or "**Modify**" a profile, you are required to replace the following parameters ⁽¹⁾:

- Profile name
- Homepage
- IP address
- Security
- Bearer choice
- Confirm

In the "**Bearer choice**" item you can choose the transmission mode: **GPRS/GSM, GPRS** or **GSM**.



When you select the GPRS/ GSM transmission mode, GSM mode is activated if GPRS mode is not available.

If you select the **GPRS** transmission mode, select a GPRS bearer and then fill in the following parameters ⁽¹⁾:

- Authentication (user name and password)
- APN

If you select the **GSM** transmission mode, select a GSM bearer and then fill in the following parameters ⁽¹⁾:

- GSM User name
- Password
- Telephone number
- Access type

If you select the **GPRS/GSM** transmission mode, select a GPRS bearer and then a GSM bearer; fill in the required parameters for each one ⁽¹⁾.

⁽¹⁾ Enter the information supplied by your access provider.

12.3 Direct access/Profile Access


From the main screen, select “**My Settings/More settings.../Wap access**”, to change the launch access:

- **Direct access:** when you launch WAP from the main menu, you go directly to the homepage of your default Wap profile
- **Profile Access:** when you launch WAP from the main menu, you will have the following items: Homepage, Bookmarks, Profiles, Enter address.

12.4 GPRS function ⁽¹⁾



Your mobile phone has an efficient high-speed modem based on GPRS technology ⁽¹⁾. With this modem you will be able to surf faster on the WAP and send your MMS more quickly. This service may be billed at a different rate (contact your operator for more information).

You can use the **GPRS** function if:

- the service is supplied by your operator,
- your subscription includes the GPRS option,
- the profiles have been configured and the corresponding bearer selected (GPRS or GPRS/GSM (see page 68); the  icon appears when the GPRS context is active.

⁽¹⁾ Contact your network operator to check service availability.

12.5 WAP browser options

Once you have launched the Wap browser, while reading a page, you can access to the options by selecting the  icon on the top left of the screen, or press the right softkey “**Options**”, or press  (long keypress).



- | | | | |
|--------------------|---|------------------|---|
| Home | • Access the homepage directly. | Go To URL | • Access the WAP site directly by entering the address. |
| Bookmarks | • Access your favourite sites (bookmarked sites). | Show URL | • Display the URL address of the current page. |
| Alert Inbox | • View information sent over WAP. | Reload | • Refresh the current page. |
| Snapshot | • Save the whole of your screen. | Settings | • Customise your WAP access. |
| Save Items | • Save images or sounds. | About... | • Display the browser version. |
| Send Link | • Send an SMS with the URL address of the visited page. | History | • Display the list of the last visited URL. |
| | | Exit | • End your WAP session and return to the main screen. |



At any time during your navigation, a long keypress on the  key allows you to exit the WAP mode.

13 Media Album

13.1 Album menu

To access the Album from the main screen, press the navigation key to the left or to the right  ⁽¹⁾ or press **ok** and select the  icon. The Album is a function that groups together all visual and sound items in your telephone, regardless of whether they are embedded, downloaded, recorded or composed.

- This function comprises 3 menus:
- the images album, containing images, icons, photos etc...
 - the sounds album, containing sounds and melodies.
 - the video album, containing videos.


In each of these 3 menus, you have the possibility to create new folders with the option "**Create folder**".

13.2 My Images


You can select an image or a photo and use it as the main screen or the ON/OFF screen. You may change it, send it by MMS or assign it to a contact in the directory using the "**Image**" option (see page 32).

⁽¹⁾ Depending on your network operator.

The Images album is made up of the following folders ⁽¹⁾:

-  **General**: list of all images (built-in or created) from all album folders.
-  **Photos**: default folder for pictures taken with the camera.
-  **Images**: contains all images not belonging in one of the other folders.
-  **Icons**: contains EMS, stamps...
-  **Frames**: contains frames for enhancing your images.




For easier searching, the images/photos are displayed on the screen in reduced size. To view one image at a time, select an image, press **ok** and click on "**View**".


Then, from this view you can scroll through the images by making a short keypress on . A long keypress will start the slide show (or press the right softkey "**Options**" then "**Slide show**").

⁽¹⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

13.3 My Videos

The “**My Videos**” Album is made up of the following folders ⁽¹⁾:






-  **General**, contains all the items from all the folders (created and embedded)
-  **Crazy clips**,
-  **Video trailers**.

 You can search any Image, Sound or Video files by pressing the key bearing the first character of the filename.

13.4 My Sounds

Choose a sound for the ON/OFF screen, for an incoming call, a message alert or an alarm (see page 46).

The “**My Sounds**” Album is made up of the following folders ⁽¹⁾:

-  **General**, contains all sound items (built-in or created) from all album folders,
-  **Melodies**,
-  **Crazy sounds**,
-  **Recorded sounds** (only contains recordings made with the “**Record**” function and the “**Memo** ->**Album**” function),
-  **Composed sounds** (only contains compositions made using “**Compose**”).

⁽¹⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.


13.5 Managing sounds, images and videos

According to the item chosen, you can access some of the functions below:

- | | | | |
|----------------------------|--|-----------------------------------|--|
| View | <ul style="list-style-type: none"> • View the image selected. If you want to view all the pictures of your folder in a slideshow press ok on the current picture. | Download | <ul style="list-style-type: none"> • Access to your bookmark sites to download new items. |
| Listen to | <ul style="list-style-type: none"> • Listen the sound selected. | Rename | <ul style="list-style-type: none"> • Rename sound/image/video. |
| Play | <ul style="list-style-type: none"> • Play the video selected. | Classify file | <ul style="list-style-type: none"> • Classify an image from a folder to another. |
| Send ⁽¹⁾ | <ul style="list-style-type: none"> • Send sound/image/video. | Create folder | <ul style="list-style-type: none"> • Create folders grouping together a series of images or sounds (for example: “Holidays” or “Birthday”). |
| Delete | <ul style="list-style-type: none"> • Delete image/sound/video selected (Not for built-in items). | Delete folder | <ul style="list-style-type: none"> • Delete a folder. |
| Set as | <ul style="list-style-type: none"> • - Image->main screen, switch ON/OFF, assign it to a contact. - Sound->ringtone, switch ON/OFF, assign it to a contact. - Video->Screen saver or assign it to a contact. | Rename folder | <ul style="list-style-type: none"> • Rename a folder that you created. |
| Ringtones | <ul style="list-style-type: none"> • Choose a melody for an incoming call ringtone. | Empty folder | <ul style="list-style-type: none"> • Empty the contents of a folder. |
| Modify | <ul style="list-style-type: none"> • Modify sound/image ⁽²⁾. | Sort by size/ sort by name | <ul style="list-style-type: none"> • Sort the images by size or by alphabetical order. |
| | | Capture | <ul style="list-style-type: none"> • Access the “Photo” function directly. |

⁽¹⁾ Files marked with  cannot be forwarded.

 ⁽²⁾ Only applies to composed sounds and images that can be cleared.



13.6 Download new videos, photos, sounds, ...

With the “**Download**” option, you can access your favourite sites saved in your bookmarks list, and download new items that you will be able to save in your Album.

13.7 Formats and compatibility

List of audio, image and video formats compatible with your telephone:

- Audio: AMR (.amr) ⁽¹⁾; Midi (.mid); iMelody (.imy); Smaf (.mmf, .spf, .saf)
- Image: JPEG (.jpg) ⁽²⁾; GIF (.gif); PNG (.png); BMP (.bmp)
- Video: 3GP (.3gp) (H263 ⁽³⁾ + AMR ⁽¹⁾ or MPEG-4 ⁽⁴⁾ MP4 (.mp4) (MPEG-4 ⁽⁴⁾)
- You can convert large image and sound files using the PC software suite so that they are compatible with your terminal.

13.8 Games & Applications

See page 84.

13.9 Memory

 
See page 62.

⁽¹⁾ AMR-NB.

⁽²⁾ Except for progressive Jpeg. The telephone uses the “Independent Jpeg Group” code.

⁽³⁾ H263 profile 0, level 10.

⁽⁴⁾ MPEG-4 simple visual profile, level 0.



14 Camera

Your telephone is fitted with a camera allowing you to take photos, short animations that you can use in different ways :

- store them in your “**Media Album**”,
- send them in a multimedia message (MMS) to a mobile phone or an e-mail address (see page 39),
- customise your main screen (see page 48),
- assign them to a contact in your directory (see page 32),
- transfer them by Infrared to your computer using Alcatel One Touch PC Suite,
- modify your photos adding frames, stamps, etc (see page 82).

 
14.1 Taking a photo

 
To access this function from the main screen, press the  key.

Your phone must be switched on to take a photo. The screen acts as viewfinder. Position the object or landscape in the viewfinder. The lens is situated on the back of the phone. Please do not touch it. Just next to the lens there is a mirror to make sure you are well placed in order to take a photo of yourself.

You can take a photo in Portrait or in Landscape mode

- Portrait mode: short keypress on **ok** ;
- Landscape mode: short press on one of the side keys.



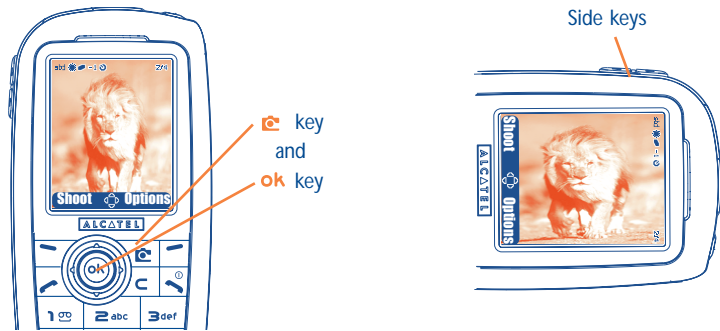

IFA BILDERTEAM/Agenceimages.com

14.2 Burst shots

Make a long keypress on **ok** or on the upperside key. The shots are taken as long as the press on the key is maintained (maximum number of pictures in a burst: 15). Then you can send through the options, this burst in an MMS (not available on VGA and Panoramic formats).

14.3 Taking a photo with sound

You can record a background sound, while you are taking a picture (long press on the lower side key). A screen will ask you to record your sound. If you release your finger, the recording will stop. Press **C** to return to the photo shot screen.



Please use your camera sensibly. Respect others and observe current regulations in your country.

14.4 Photo settings

Before taking the photo, you can adjust a number of settings.

Selected options bar:

- std** Quality
- white balance
- Capture mode
- 1** Exposure (over/under)
- 2/4** number of photos taken (for animation and mosaic)
- Timer

Side keys :

- short press up or down : take a photo
- long press up : burst shot
- long press down : take a photo + sound

Left softkey: Shoot

Key Colour mode: colour or black&white

Key Capture mode

- : Single
- : Animation x 4
- : Mosaic

Right softkey: Options

Key **ok :**

- Short keypress: Take a picture
- Long keypress: burst shoot
- Exposure:
 - Left: underexposure
 - Right: overexposure
- Zoom:
 - Up: zoom in
 - Down: zoom out

Quality:

- high** : High - key
- std** : Standard - key
- eco** : Economy - key

Key White balance


Key Image size:

- Panoramic
- VGA
- XL/L/M/S


IFA BILDERTEAM/Agenceimages.com

Access the settings from the MENU: From the photo shot screen, press the right softkey to access the following options:


Image size


Select “**Image size**” in the list of options or press the  key until you reach the size you require: VGA (640x480), and Panoramic (640x360) optimised to be sent to a PC, XL (160x128), L (128x128) for local use or MMS, M (64x64) to assign it to a directory file for instance, S (32x32) to create your very own stamps (see page 82).


Capture mode

Select “**Capture mode**” in the options list or keep pressing the  key to choose from one of the following modes:

 **Single:** a single photo; this is the default mode.

 **Animation x 4:** in this mode, you can take 4 consecutive photos like a small slide show. The number at the top right of the screen shows you which photo you are on: 1/4, 2/4,4/4. When you have taken the 4th photo, the animation will start automatically.

 **Mosaic:** in this mode, you will get an image made up of 4 thumbnails. To do this, proceed as for the animation, once the “**Mosaic**” has been selected (see above).

 The burst shoot mode is only available by a long keypress on **ok** or by a long press on the upperside key.

Frame

Choose a frame from the list offered and press **ok**. The frame will be placed in your photo shot screen; if the image is to your liking, press **ok** to take the photo. You will also find this option in the “**Modify**” function (see page 82).

Quality

Select “**Quality**” in the list of options or access it directly by pressing the ,  **abc**,  **def** keys:

high: High quality: excellent quality to be sent to a PC,

std: Standard quality: compromise between size and quality,

eco: Economy quality: memory space is optimized.



Warning: the higher the quality, the more memory is required. For example, if you have 1 MB of free memory, you may store the following number of photos:

Format	High quality	Low quality
VGA	10 photos*	20 photos*
128 x 160	146 photos*	340 photos*

Timer

The photo will be taken 10 seconds after pressing **ok**. A sound will be emitted when you take a photo (if your telephone is in Sound mode).

White balance

By pressing the “**Options**” function key, you can choose from 5 settings:

Auto: the settings adjust automatically (no icon will be displayed on your screen),

 Sunny,

 Cloudy,

 Night time,

 Indoor/artificial light.



In a dark atmosphere, select “**Night**” to improve the picture quality.

* These estimations are only given as an indication.

Colour

You can choose the colour effects. You can access this option directly from the photo shot screen by pressing the **stuv** key.

Direct access to the album

With the option **Image Album**, you access the **Media Album** menu directly.

Folder by default

You can change the folder where your photos will be stored automatically.



You can create your own folders using the **Media Album/My Images** option: **Create folder** (see page 74).

Other direct access options from the photo shot screen

Exposure: adjust the contrast of your photo with the navigation key: to the left = underexposure, to the right = overexposure.

Zoom: activate the zoom with the up/down navigation key: up: zoom in, down: zoom out (except VGA and Panoramic formats).

14.5 Options available after taking the photo

Once you have taken a photo or an animation, you can access the following options:

- | | | | |
|----------------------|---|---------------------|---|
| Send | • Send your photo without saving it in the Album. | Attach sound | • Save a sound and assign it to the photo. |
| Save and send | • Save your photo and send it. | Image album | • Access your Images Album directly. |
| Save | • Save your photo. | Set as | • Select what you want to do with your picture. |
| Discard | • Delete the photo you have just taken. | | |
| Modify | • Reduce size, add stamps or frames. | | |

14.6 Modifying images

This option enables you to **Reduce** image size, or to **Add stamps** or **Add frames**. You have two possibilities for accessing images in order to modify them:

- Via the **Media Album** menu:
Choose an image, press the **Options** softkey and select **Modify**.
- Via the **Camera** menu ⁽¹⁾:
After taking the photo, press the **Options** softkey and select **Modify**.

⁽¹⁾ The multimedia content (melodies, images, drawings, etc.) in this camera is for private use only, and may not be used for commercial purposes. Any illegal use is liable to prosecution against the perpetrator.

14.7 Direct access to the photo capture or to the album from MMS composition

With the option **"Add image"**, you can also access the photo function or album (picture/image/video/sound) directly while you are writing a Multimedia Message (MMS) (see page 39).

You have two ways to insert a photo in an MMS:

- Either by adding an existing photo to your MMS taken from the photo album: when you are in the **"Messages"** menu, select **"Create message/Multimedia/MMS"**, press the **ok** key, select the **"Options"** softkey, then **"Add image/Image album"**: then select a photo.
- Either by taking a new photo: choose **"Add image"**, press the **ok** key and then select **"Take a picture"**.

15 Games & Applications

Your Alcatel phone may include ⁽¹⁾ some Java™ applications and games. You can also download new applications and games to your phone from other service providers ⁽²⁾.

The **"Games & Apps"** menu allows you to manage the Java™ applications installed in your phone. It includes three directories and one configuration folder:

 **General:** contains all applications and games,

 **Games:** contains the games,

 **Applications:** contains the other applications,

 **Settings:** contains your sound, backlighting and network settings.

15.1 Launch an application

Select the application. Press the **"Launch"** softkey or **ok** then **"Launch"**.

⁽¹⁾ Depending on your country or your operator.

⁽²⁾ Requires access to WAP services (see page 67).

15.2 Available options

- Launch** • Launch the application.
- Information** • This option gives information on the application.
- Download** • Download an application.
- Delete** • Deletes the application. If you delete a pre-installed application in your phone, you may, depending on the application:
 - download it again from the My One Touch server, www.alcatel.com
 - download it again from your operator's Website. Contact your operator for further information.
 However, some applications cannot be re-downloaded.
- Classify** • Classify in "**Games**" or "**Applications**".

15.3 Download an application

You can download new Java™ applications in 2 ways:

- Either, in the "**Games & Apps**" menu by selecting the "**Download**" softkey. The list of available WAP bookmarks dedicated to the application download will then be displayed. Select the appropriate bookmark to go to the desired WAP page.



You can download a Java™ application only if the Wap profile is activated ⁽¹⁾ (see page 67).

⁽¹⁾ For the availability of different WAP services, pricing and tariffs, contact your network operator and /or the WAP service provider.

- Or, from the main screen by selecting "**WAP**" then "**Bookmarks**" and choosing "**My One Touch**".

The downloaded applications can be saved either in the Games folder or Application folder.

15.4 Java™ Push


Depending on your server/operator, you may receive Java™ Push messages inviting you to launch new applications they propose.

15.5 Settings

- **Sound** Switch sound ON/OFF for all applications.
- **Backlight** Activate or deactivate the backlight.
- **Network** List of network profiles available for Games & Applications. This list comprises the current WAP profiles and specific profiles for Games & Applications. To select a profile, go to the list, press **ok** and select "**Confirm**". To modify a specific profile for Games & Applications, go to the list, press **ok** and select "**Modify**". To create a profile, go to the list, press **ok** and select "**Create**". For the options available, see page 67.
- **Memory** View memory available. Applications use shared memory (see page 62).

While an application is running

- Short keypress on **C** : pause
- Long keypress on **C** : exit the application

Authorisation for network access: some applications require network access or the sending of an SMS. In this case, select the authorisation profile required with the navigation key , press **ok** then validate the selection then press "**Confirm**" to validate everything.

Disclaimer

Downloading or running applications will not damage or alter any software already in your mobile telephone designed to support Java™ technology.

Alcatel waives any responsibility and refuses to guarantee applications that are subsequently used, as well as for all applications not embedded in the handset upon purchase.

The purchaser alone bears the risk of loss, damage or defect of the handset, or of applications/software, and generally of any damage or consequence resulting from the use of the said applications/software. In the event the said applications/software, or the later setup of any function are lost due to technical reasons if the handset has been replaced/repared, the mobile phone owner should repeat the operation and download or set up again. Alcatel grants no guarantee and waives any responsibility if the operation cannot be repeated or cannot be performed without incurring some cost.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Powered by JBlend™ - Copyright 1997-2003 - Aplix Corporation. All rights reserved. JBlend™ and all JBlend™-based trademarks and logos are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

16 Making the most of your mobile.....

16.1 "My One Touch" services by Alcatel

On the "Alcatel" Website you will find all the services available to make the most of your mobile telephone.

Go to "www.alcatel.com" or simply choose the "My One Touch" option in your mobile telephone. Access this by selecting "Services" or "My settings/Ringtones" or "Media Album/My Images/Download" from the main menu.

16.2 Alcatel One Touch PC suite

Depending on your model, your packaging box may contain a PC suite. Otherwise, you can download it for free from the "Alcatel" Website. The PC suite includes:

- Multimedia Studio:
 - customise your mobile with sounds, melodies, images, animations and videos.
 - transfer to your PC the photos and videos taken with your camera.
- One Touch Sync:
 - synchronise your mobile phone with: MS Outlook 98 / 2000 / 2002 / 2003, Outlook Express 5.0 / 6.0, Lotus Notes 4.6 / 5.0 / 6.0 / 6.5, Lotus Organiser 5.0 / 6.0
- Data Connection Wizard:
 - use your mobile phone to connect your PC to the internet.

Supported Operating Systems


- Windows 2000 with Service Pack 4 (SP4) or later
- Windows XP with Service Pack 1 (SP1) or later

17 Characters and symbols table.....

To enter a word in normal mode, press the key corresponding to the desired letter several times until the letter appears.

	1	2	3	4	5	6	7	8
1 ☐	└	1	-					
2 abc	A	B	C	2	Ä	Å	Æ	Ç
3 def	D	E	F	3	É	Δ	Φ	
4 ghi	G	H	I	4	Γ			
5 jkl	J	K	L	5	Λ			
6 mno	M	N	O	6	Ñ	Ø	Ö	Ω
7 pqr	P	Q	R	S	7	β	Π	Σ
8 tuv	T	U	V	8	ü	Θ		
9 wxyz	W	X	Y	Z	9	Ξ	Ψ	
0, +	.	0	+					
☐*	Displays the symbols table							
☐	☐AbI, ☐ABI, ☐abI, ☐I2I (see p. 46)							

 Press the ☐* key to display the symbols table; the cursor is positioned in the centre. Use the navigation key to move it.

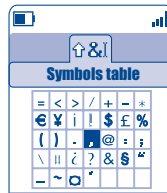

18 Telephone warranty

Congratulations on choosing this mobile phone - we hope that you will be totally satisfied with it.

Notwithstanding any other applicable statutory warranties, this mobile phone is guaranteed against any manufacturing defect for a period of ONE (1) year from the date of purchase shown on your invoice. Nevertheless if the statutory warranty in force in your country exceeds ONE (1) year, the statutory warranty is not affected by the manufacturer's warranty.

The present warranty terms also apply to the battery and accessories but for a period of SIX (6) months from the date of purchase shown on your invoice.

Under the terms of this warranty, you must inform your phone dealer or any maintenance centre approved by Alcatel (see list of maintenance centres at our web site www.alcatel.com) without delay of any defects and present the invoice given to you at the time of purchase. The phone dealer or the maintenance centre will decide, as appropriate, to replace or repair all or part of the telephone or the accessory found to be defective. This warranty covers parts and labour but excludes all other costs. Repair or replacement may be carried out using reconditioned products offering features equivalent to new products.

Any operations under this warranty, especially repair, modification or replacement of products, will be covered by a warranty of three months, unless other statutory provisions apply.

 
This warranty shall not apply to damage or defects (to your telephone and/or accessory) caused by:

- 1) Non-compliance with instructions for use or installation,
- 2) Non-compliance with technical and safety standards in force in the area where the phone is used,
- 3) Improper maintenance of power sources and of overall electrical facilities,
- 4) Accidents or the consequences of theft (of the vehicle), acts of vandalism, lightning, fire, humidity, infiltration of liquids, atmospheric influences,
- 5) Using the phone in conjunction with or connected to hardware not provided nor recommended by Alcatel, without Alcatel's explicit consent.


- 6) Any service, modification or repair by persons not authorised by the manufacturer, the phone dealer or an approved maintenance centre,
 - 7) Use for a purpose other than that for which the products were intended,
 - 8) Normal wear,
 - 9) Deterioration caused by external causes (e.g.: RF interference produced by other equipment, fluctuations in mains voltage and/or voltages on telephone lines, etc.),
 - 10) Modifications made, even if unavoidable, due to changes in regulations and/or changes in network parameters,
 - 11) Connection problems resulting from unsatisfactory radio transmission or caused by the absence of radio-relay coverage.
- Telephones or accessories from which markings and or serial numbers have been removed or modified, as well as telephones from which the labels are missing or damaged are excluded from this warranty.
The above provisions constitute the only claims, which can be made against the manufacturer and dealer on the grounds of equipment defects, this warranty excludes any other explicit or implied warranty except the statutory warranty in force in the user's country.

19 Accessories ⁽¹⁾.....


The latest generation of Alcatel GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations somewhat confidential, an earpiece is also available known as the headset.

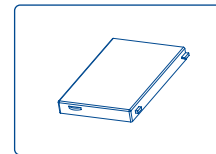


Battery
BB-08832

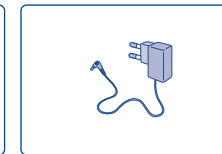 

Travel charger
C57

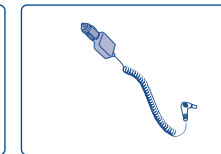 


Cigar lighter charger
C56

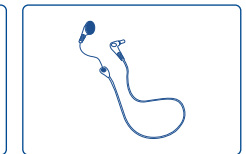 


Headset
M13



 Basic car kit
MP79

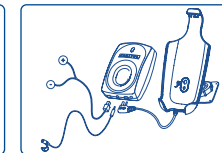

Full duplex handsfree
car kit
MPC-10305

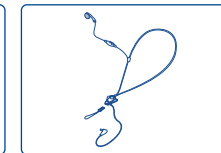 

Comfort headset
M16



Removable covers
for OT 557
FPB-10323-A*




Only use your telephone with ALCATEL batteries, chargers and accessories compatible with your model.

⁽¹⁾ Depending on availability.


20 Troubleshooting

Before contacting the after-sales service, we advise you to perform the following checks:

My mobile phone does not switch on

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

My phone does not respond since several minutes

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

My screen is difficult to read

- Clean your screen
- Use your mobile phone in accordance with the recommended conditions of use

My mobile phone turns off by itself

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level

My mobile phone has a low level of autonomy

- Make sure you respected the complete charge timing (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for 20 minutes minimum after you remove the charger to obtain an exact indication

My mobile phone does not charge properly

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an ALCATEL battery and charger
- When abroad, check that the electrical current is compatible


My mobile phone does not connect to a network

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 55)
- Try connecting at a later time if the network is overloaded

SIM card error

- Make sure the SIM card was correctly inserted (see page 13)
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

Unable to make outgoing calls

- Make sure you have dialled a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 24)



Unable to receive incoming calls

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 23)
- Make sure that you have not barred certain calls

The caller's name does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the  key
- Check the radio reception icon level 

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Check to be sure this feature does not require an ALCATEL accessory.

When I select a number from my directory, the number is not dialled

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

I am unable to create a file in my directory

- Make sure that your SIM card directory is not full; delete some files or save the files in the product directory (i.e. your professional or personal directories)
- Check the “**Call barring**” option for “**Incoming calls**” to be sure that the “**Exc. directory**” feature is not activated

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

I can't access my voicemail

- Make sure your operator's voicemail number is correctly entered in “**My Numbers**”
- Try later if the network is busy

I am unable to send and receive messages MMS, Vox MMS

- Check your phone memory available as it might be full (see page 62)
- Contact your network operator to check service availability and check MMS parameters (see page 44)
- Verify the server centre number or your MMS profile with your operator
- The server centre may be saturated; try again later

The  icon is displayed on my standby screen

- You have saved too many short messages on your SIM card; delete some of them or archive them in the product memory

The << - >> icon is displayed

- You are outside of the network coverage area

I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to connect my telephone to my computer

- Install first of all Alcatel's PC suite
- Use “Install the connection” and perform the installation
- If you use the infrared port, check that it is correctly activated (see page 63)
- If you use infrared often, we advise that you set a quick access to it from the keypad (see page 51).
- Check that your computer meets the requirements for Alcatel's PC Suite installation